

G1

Follow-Me


Manual

TABLE OF CONTENTS

1. Products and Accessories.....	02
2. Functional Diagram.....	03
3. Vehicle Assembly.....	04
4. Folding the frame.....	04
5. Charging.....	05
6. First-time use.....	06
7. Pattern Learning.....	09
8. Safety Guidelines.....	09
9. Model Specifications Table.....	10
10. Warranty Policy.....	11


Welcome

Thank you for choosing the G1 Smart Follow-Me Cart. The G1 is a portable, smart golf cart and a stylish piece of golf equipment. Start here and experience the joy of golf where the cart follows your every move!

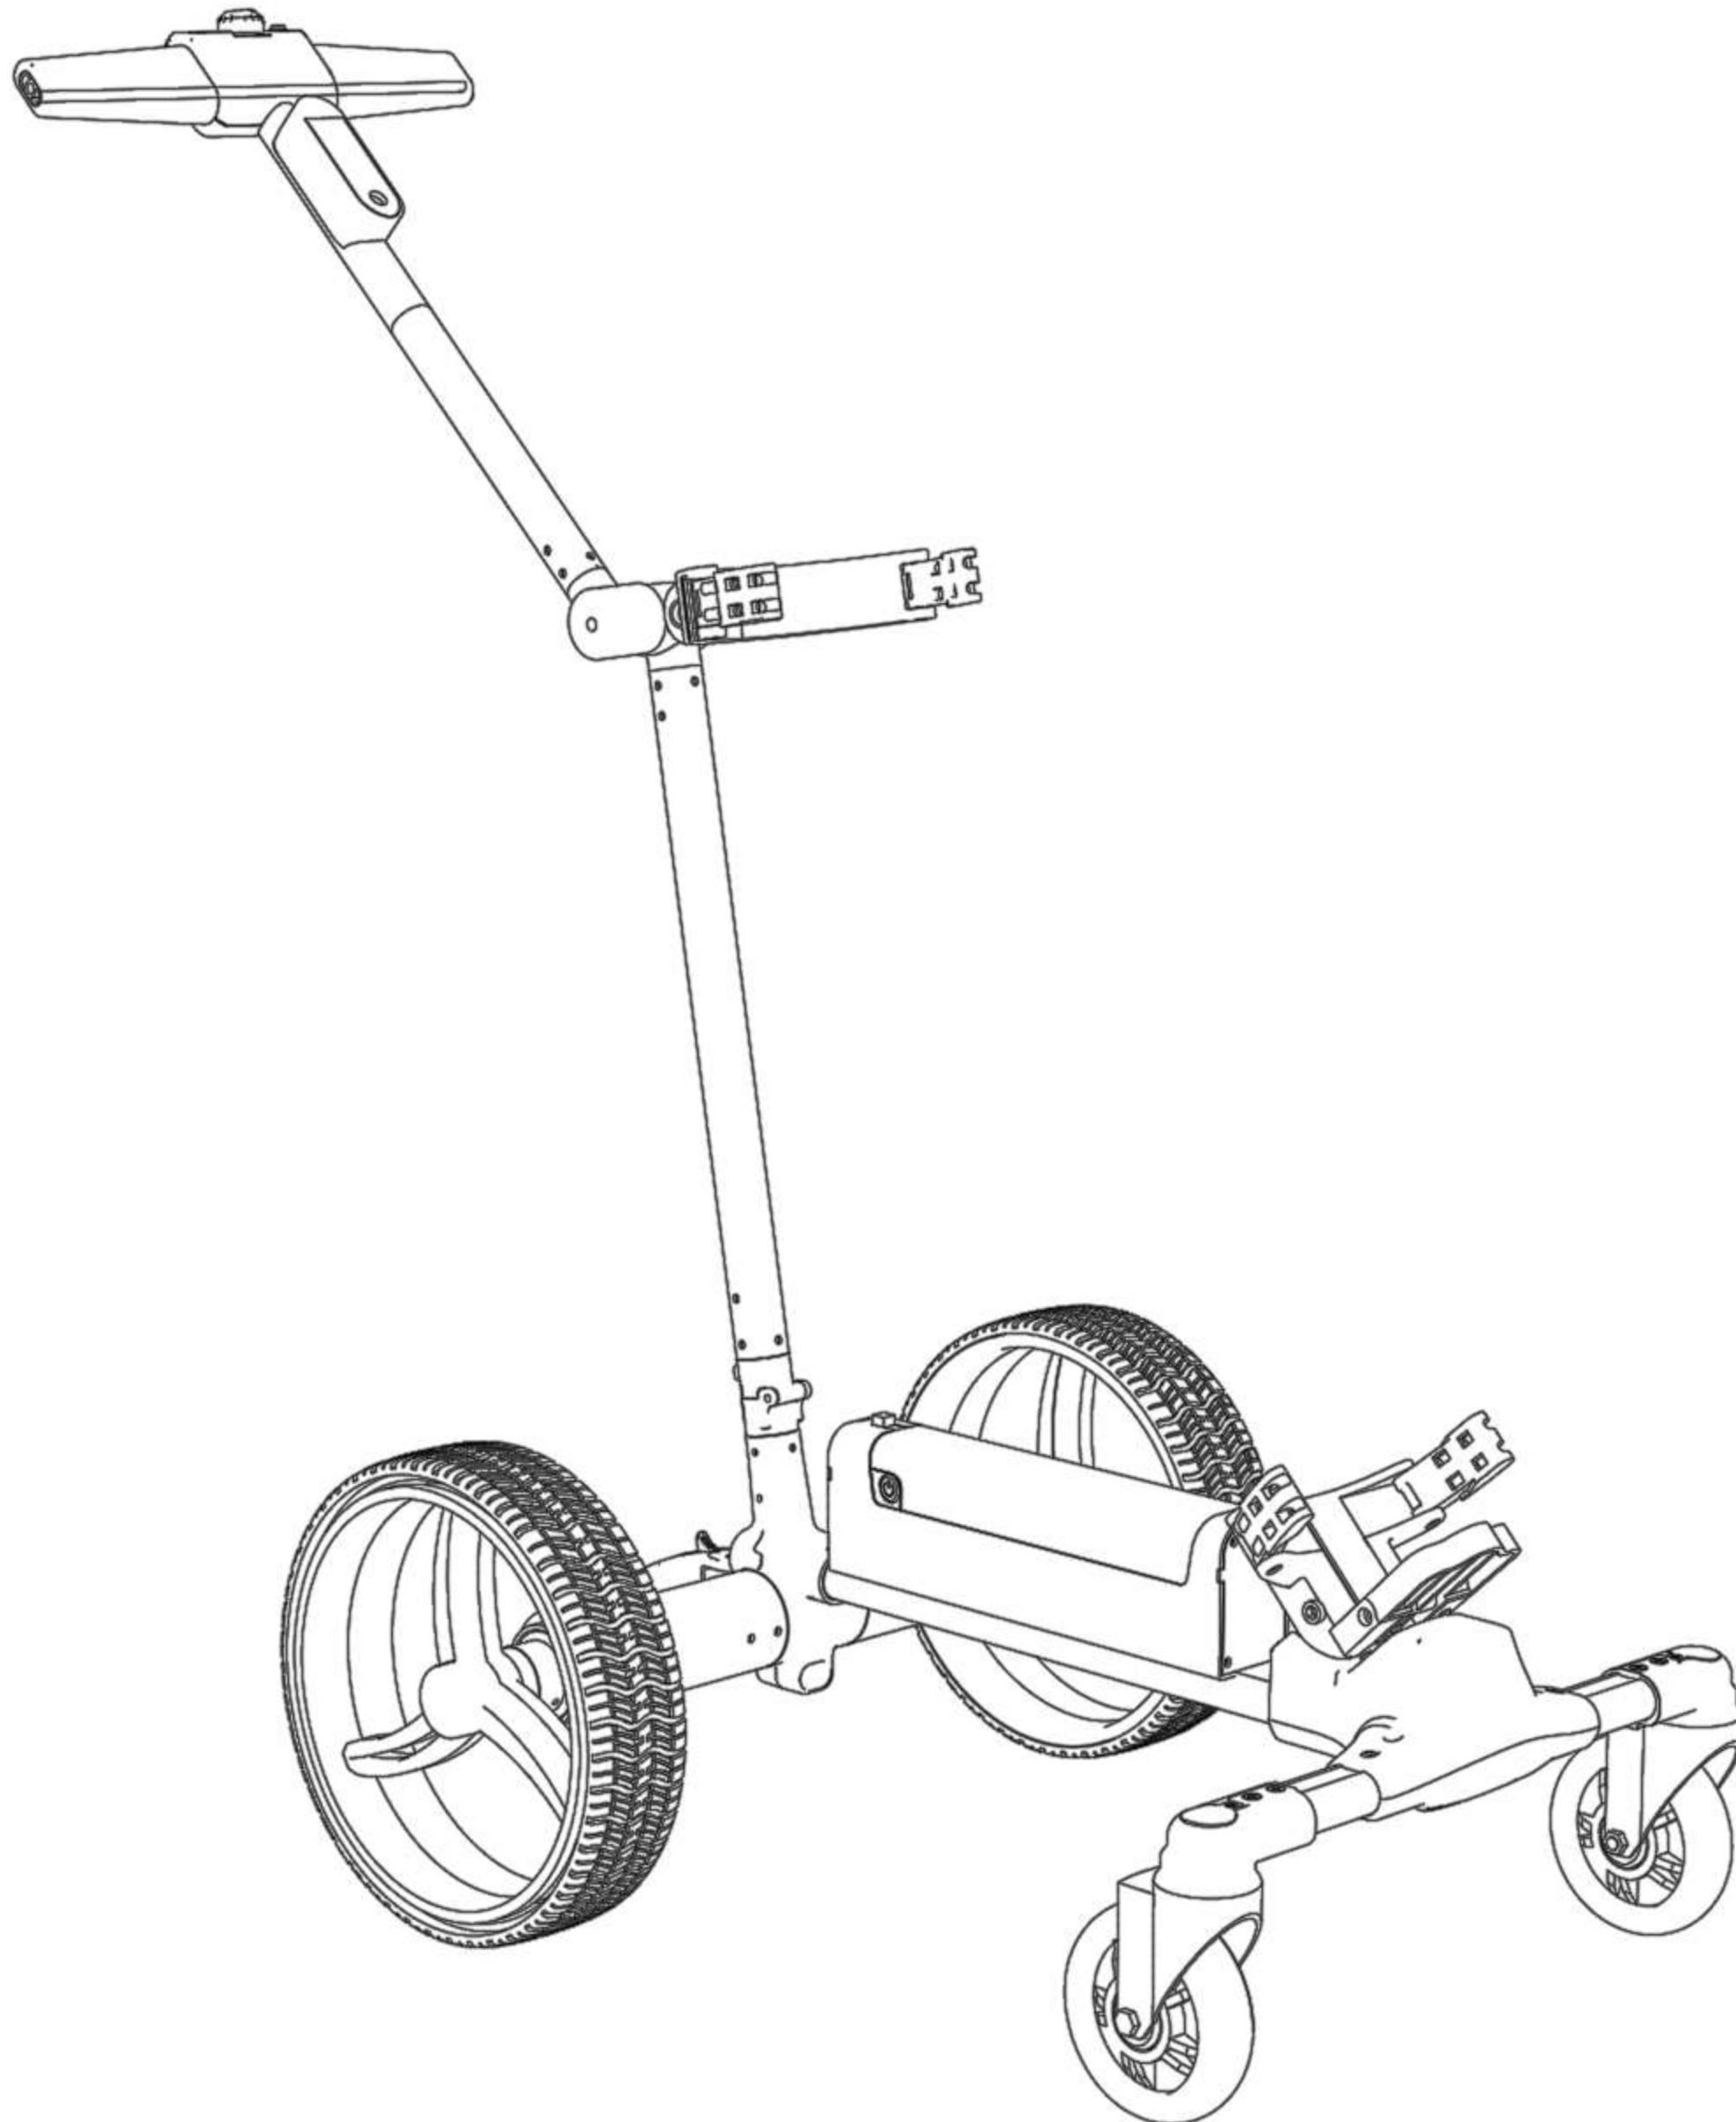


1 Products and Accessories

Golf cart*1

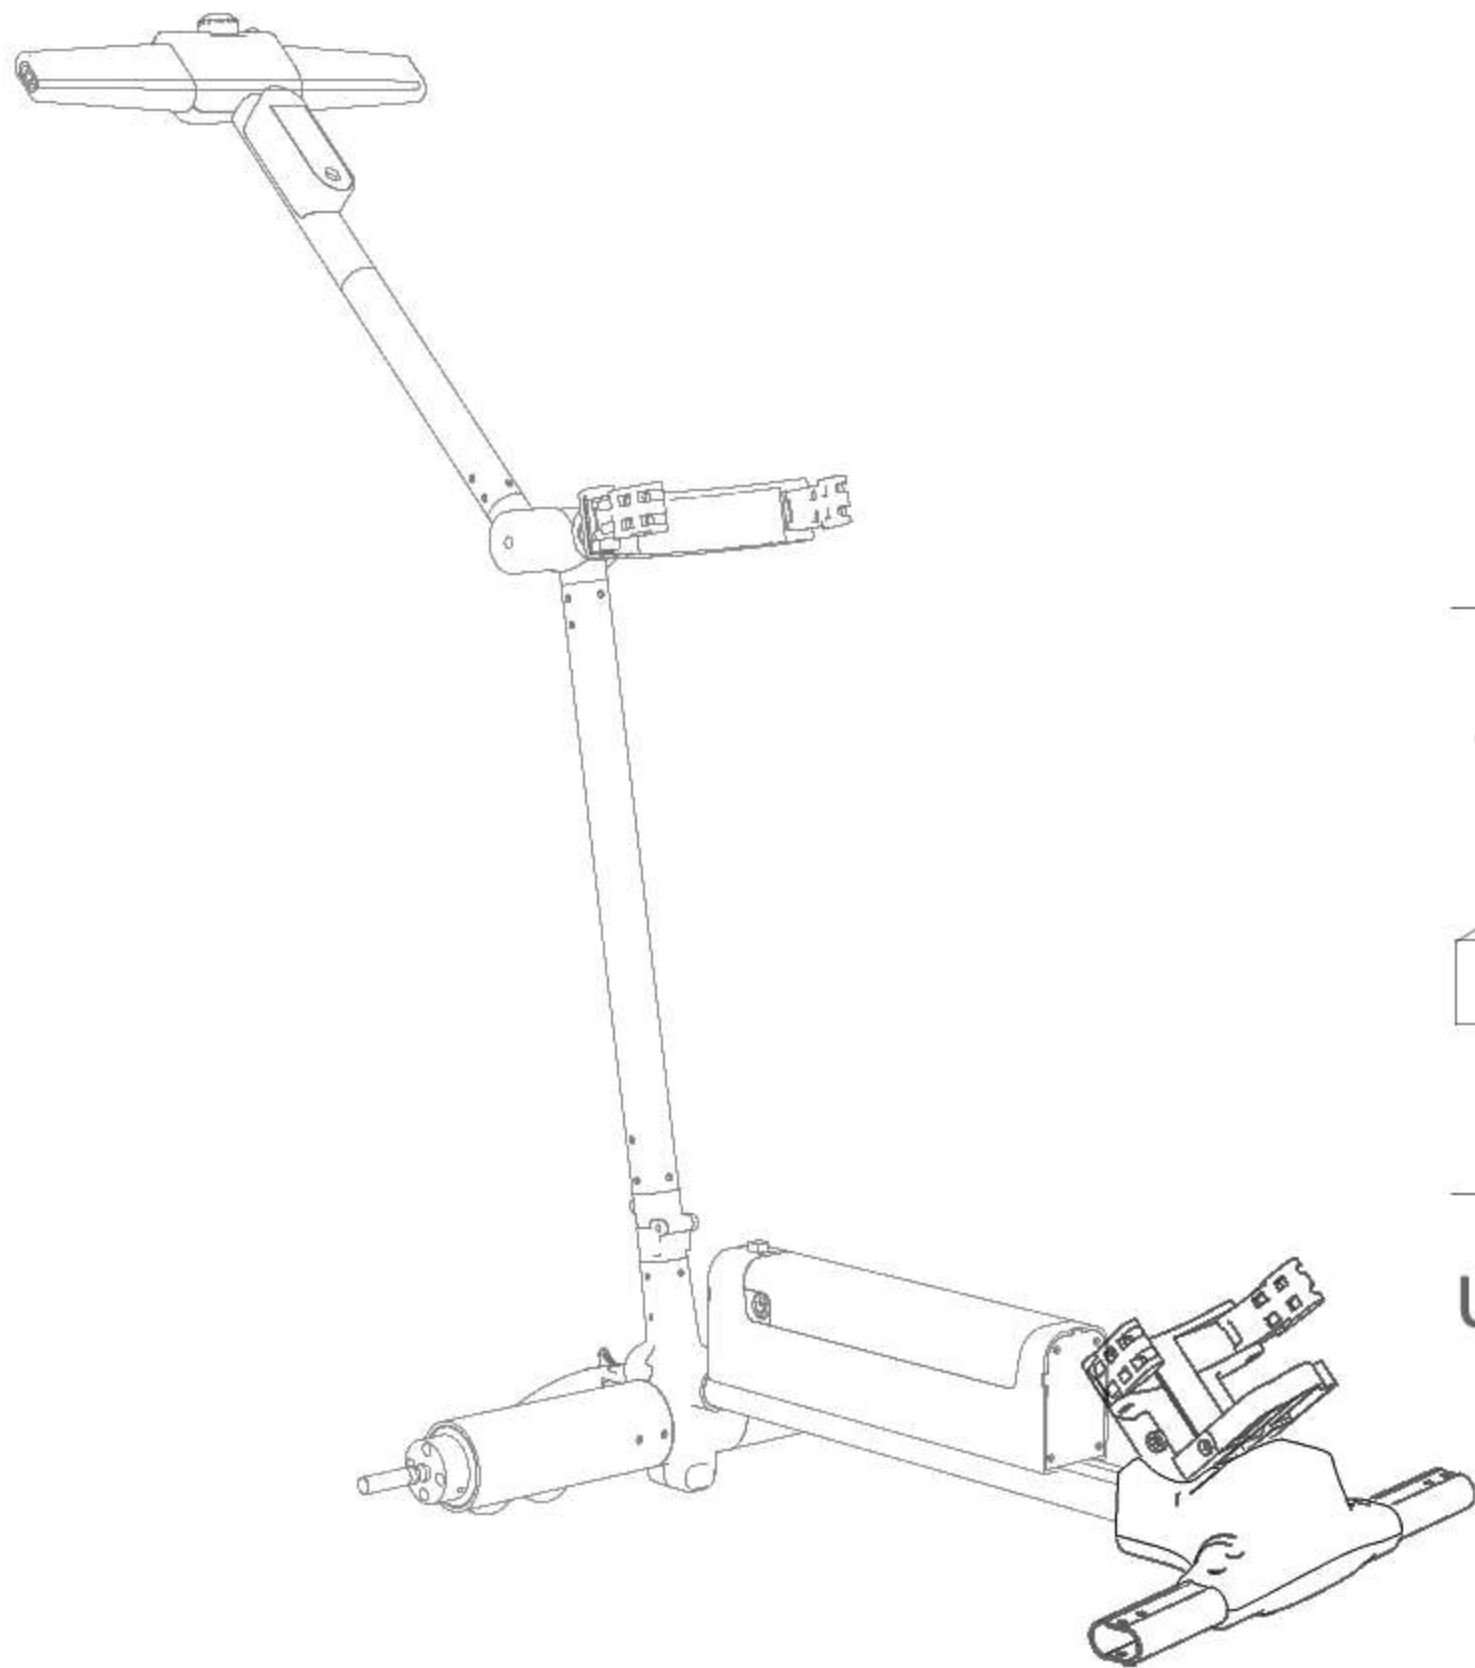

charger*1

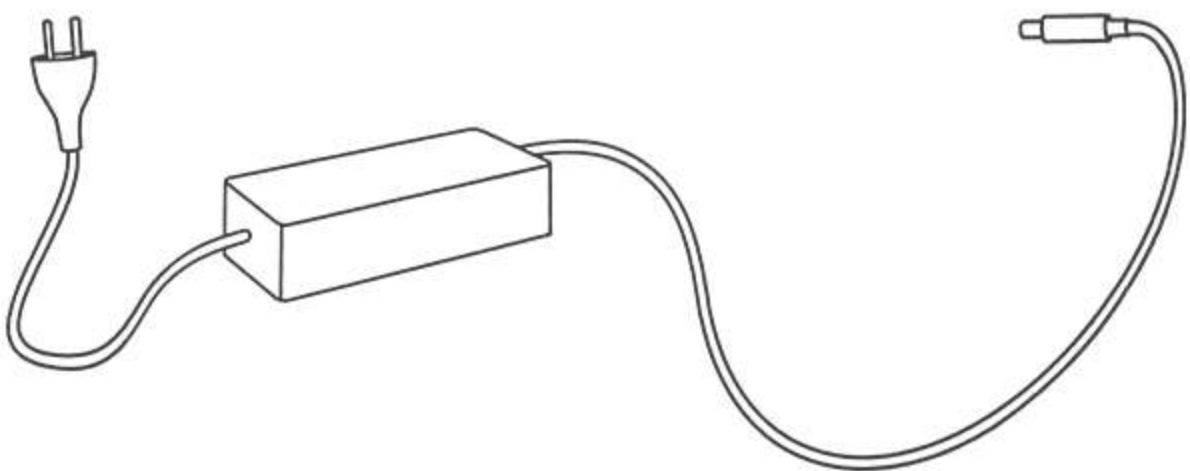

Accessory Box*1



screw*4




wrench*4




nut*4



Umbrella stand*1

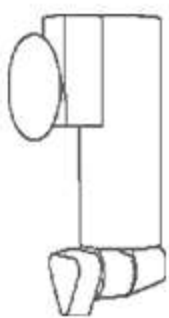

Swivel casters*2

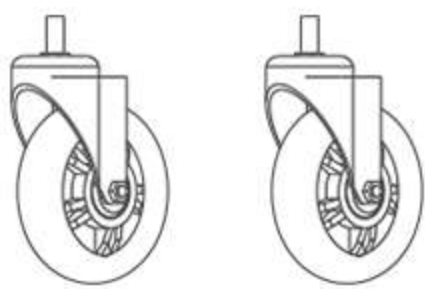

Cup Holder*1




Manual*1 remote control*1



Organizer bag*1




Motor wheel*2

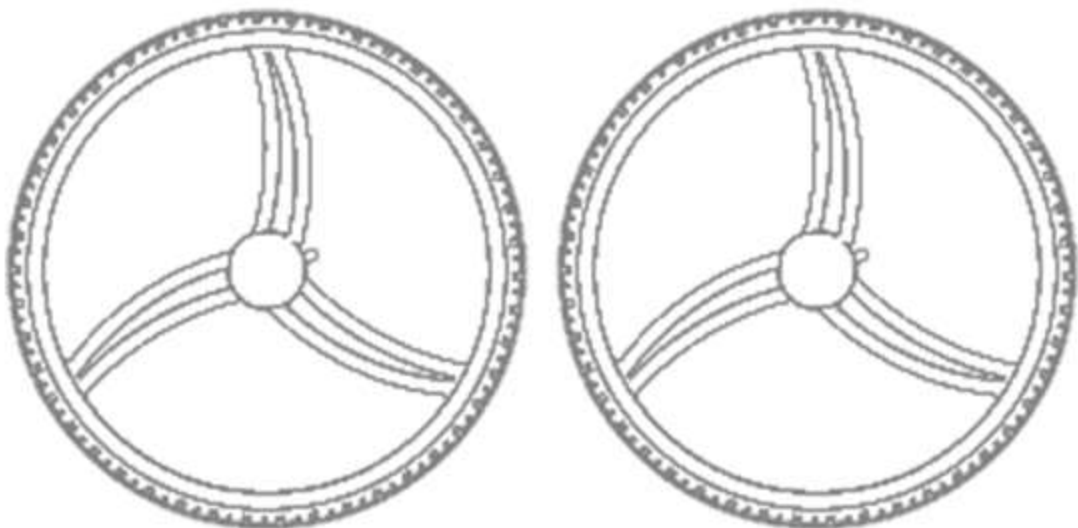

Please carefully check that all items in the box are present and in good condition.

2 Functional Diagram

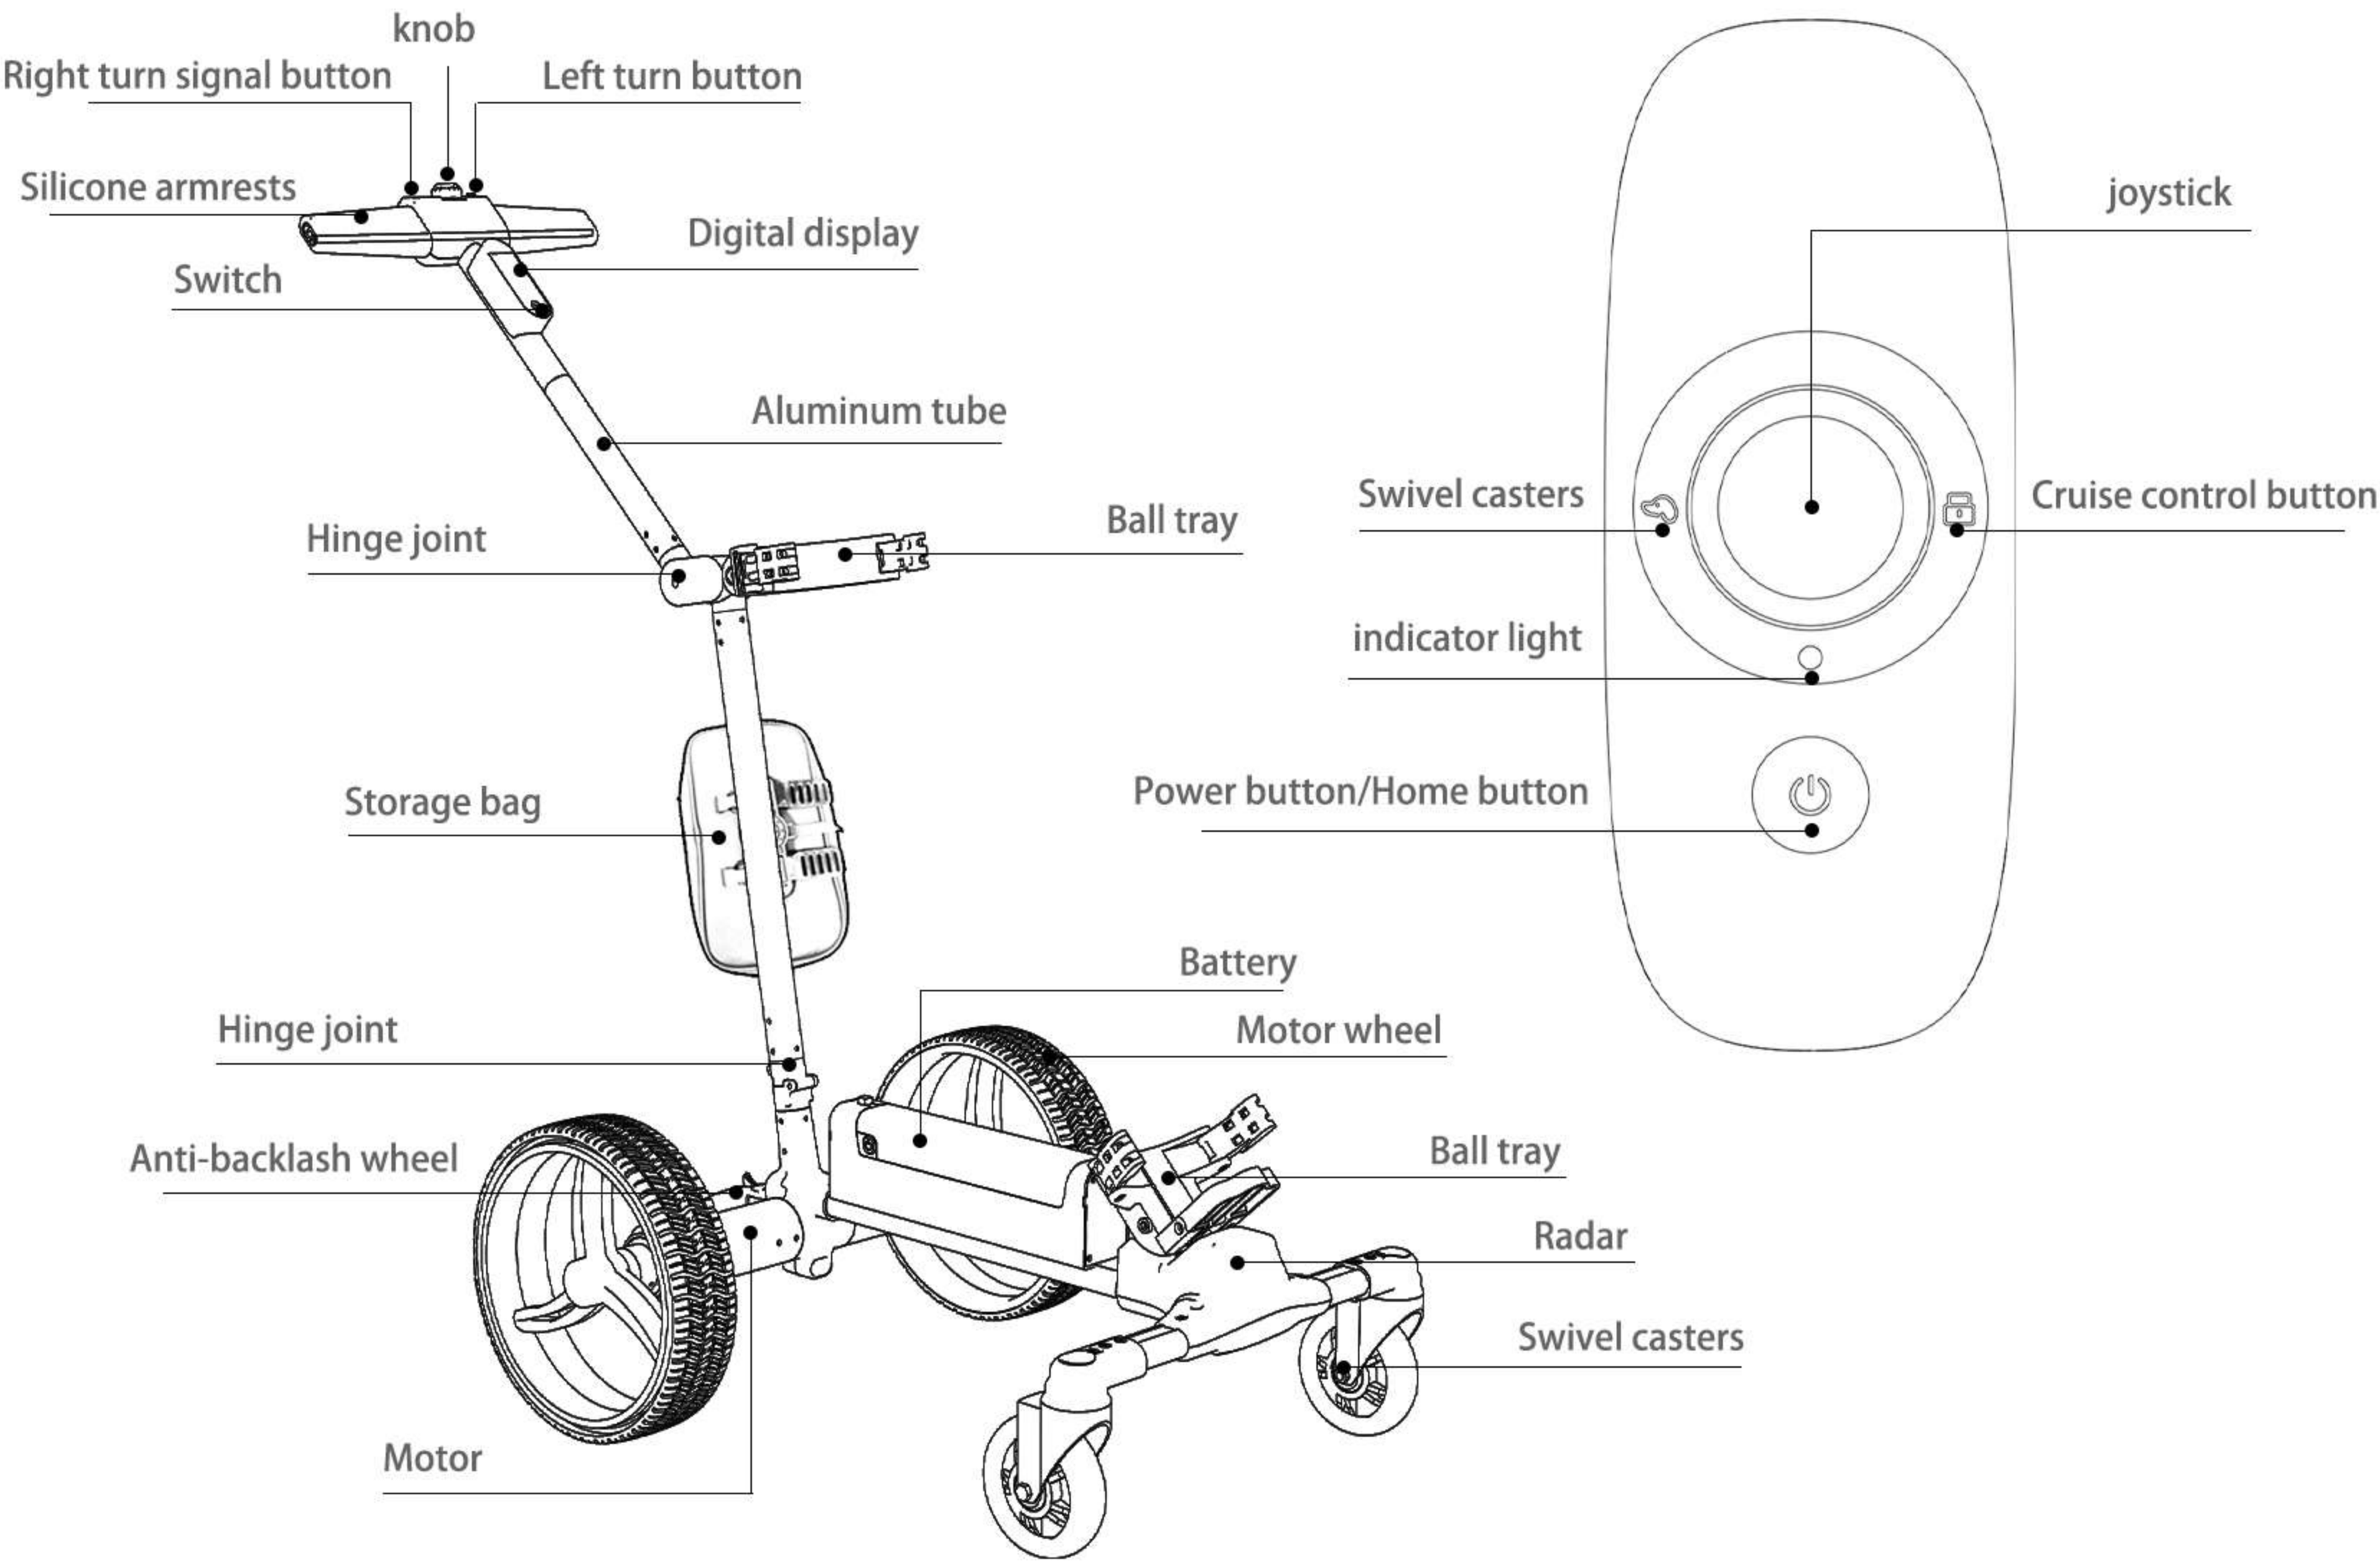

Speed display

Cruise control

Remote Control Mode

Boost Mode

Lock the car

Bluetooth

Standby mode

Video

Warning light


Battery level display

Follow Me


Power button

3 Body Assembly


1. Use the two included M5 x 35 hex socket cap screws to secure the front of the vehicle from underneath.

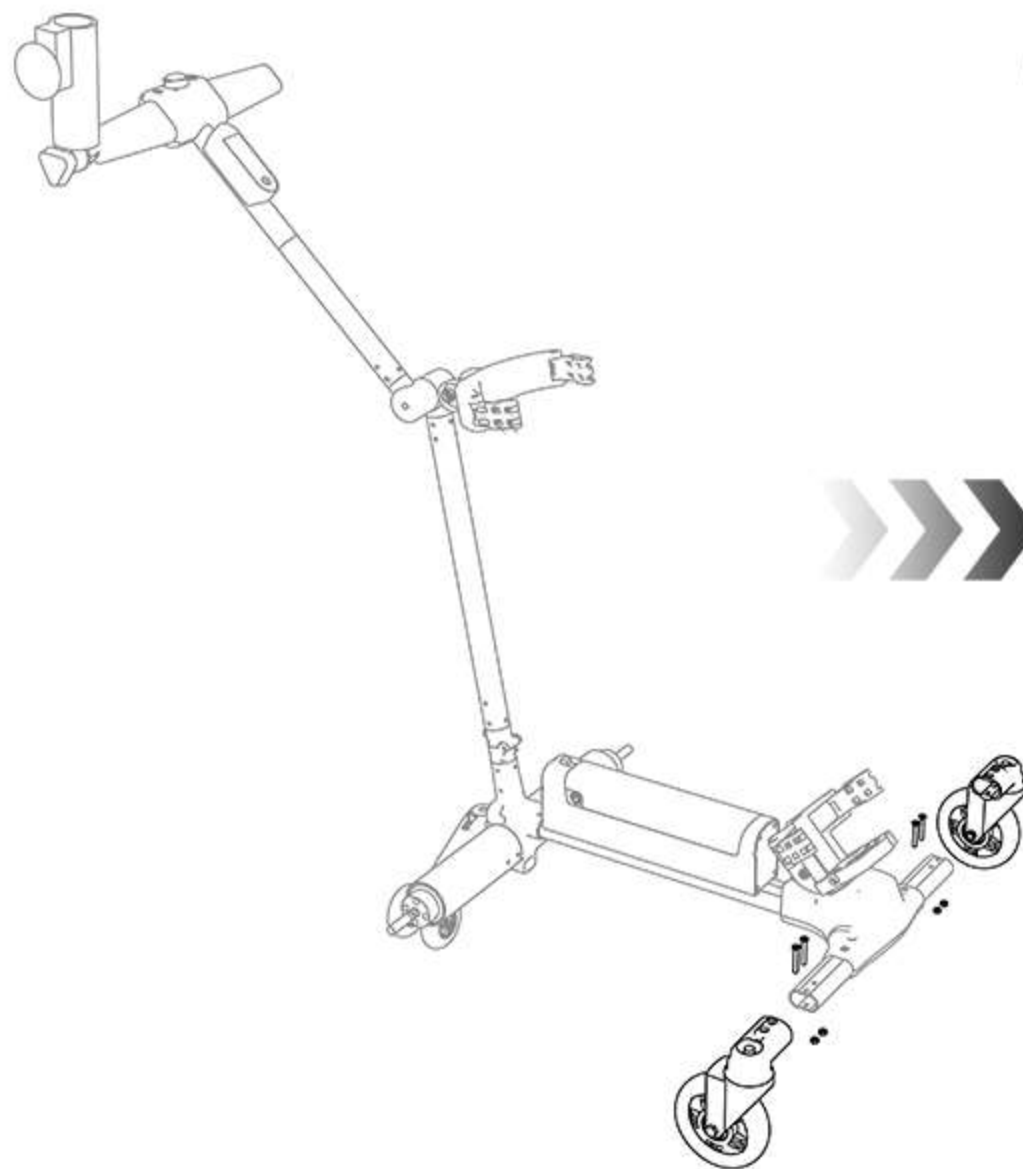

2. Remove the left and right swivel casters from the kit and secure them to the front of the vehicle using two M5x35 hex socket head cap screws and hex nuts on each side.

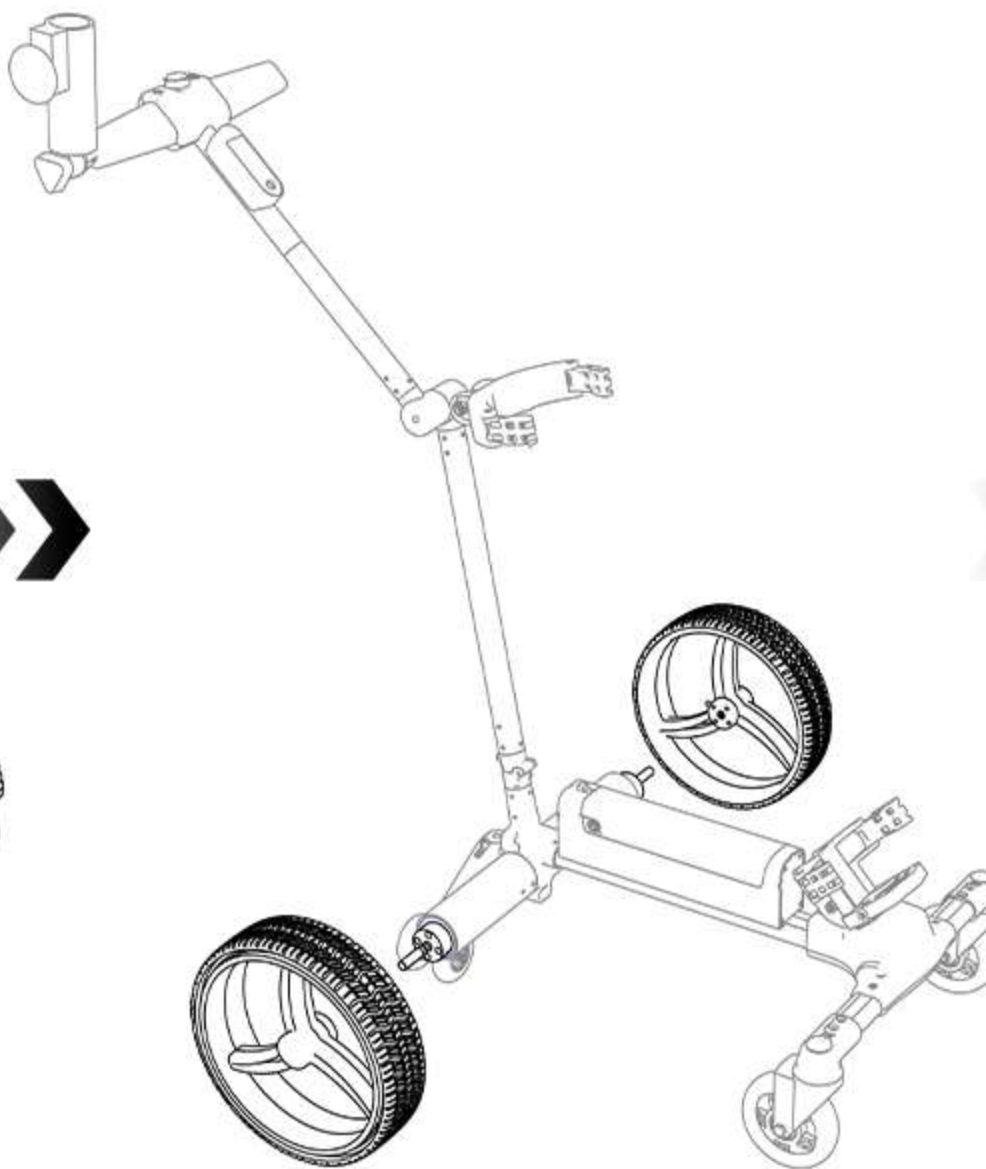


3. Secure the two M8 x 10 x 6 brass bushings using one M8 x 48 hex socket head cap screw with a semi-round head.


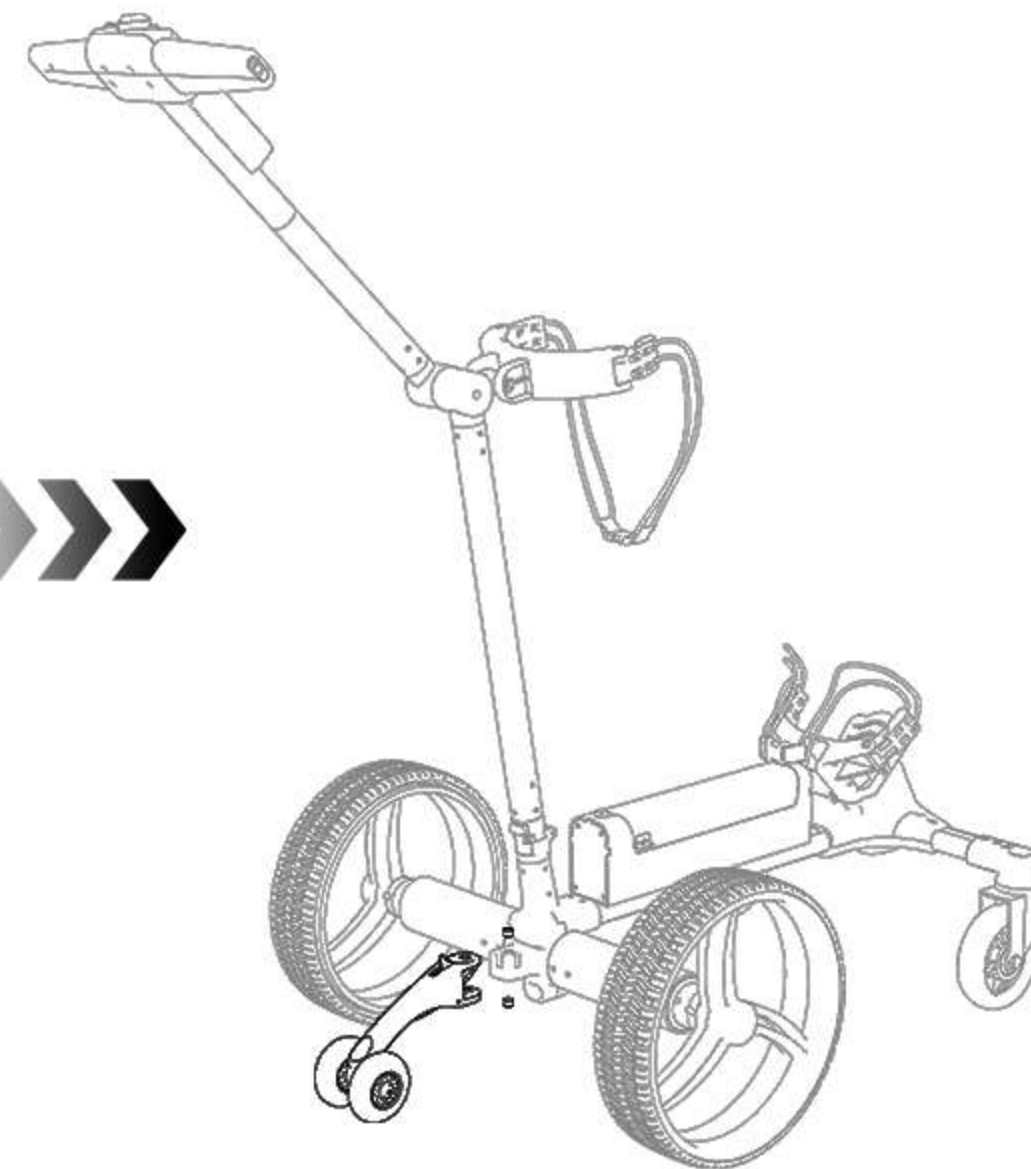


4 Folding body



1. Use the two included M5 x 35 hex socket cap screws to secure the front of the vehicle from underneath.

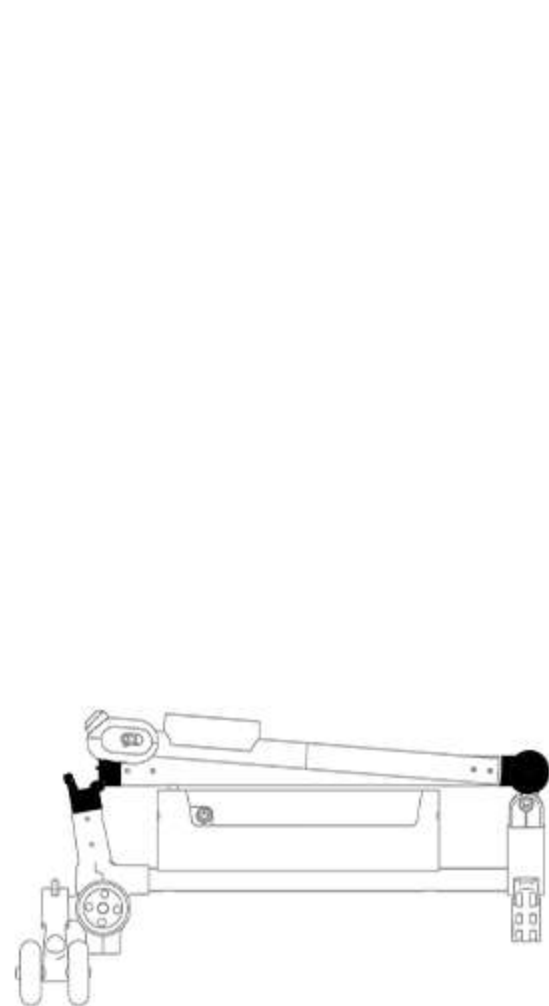

2. Take out the included storage bag, attach it to the corresponding magnetic mount on the stroller using the magnetic clips, and attach the umbrella holder to the side of the handlebar.

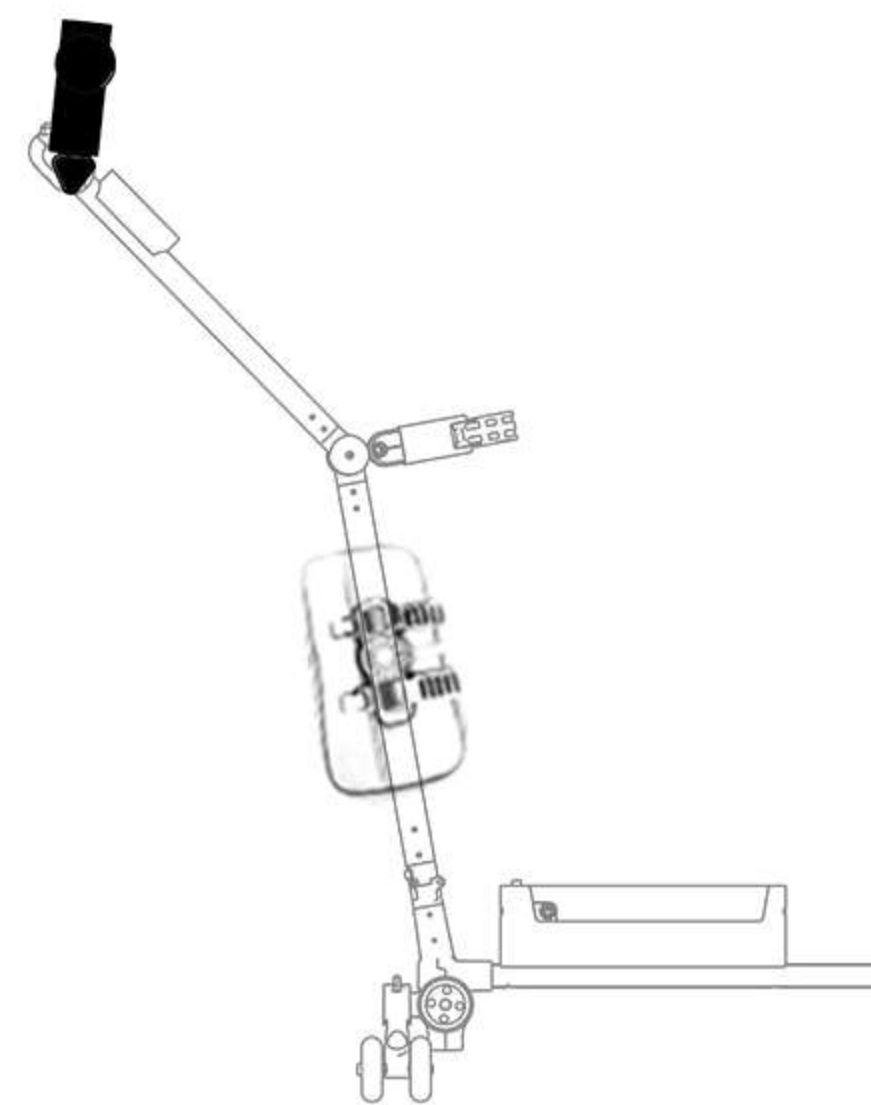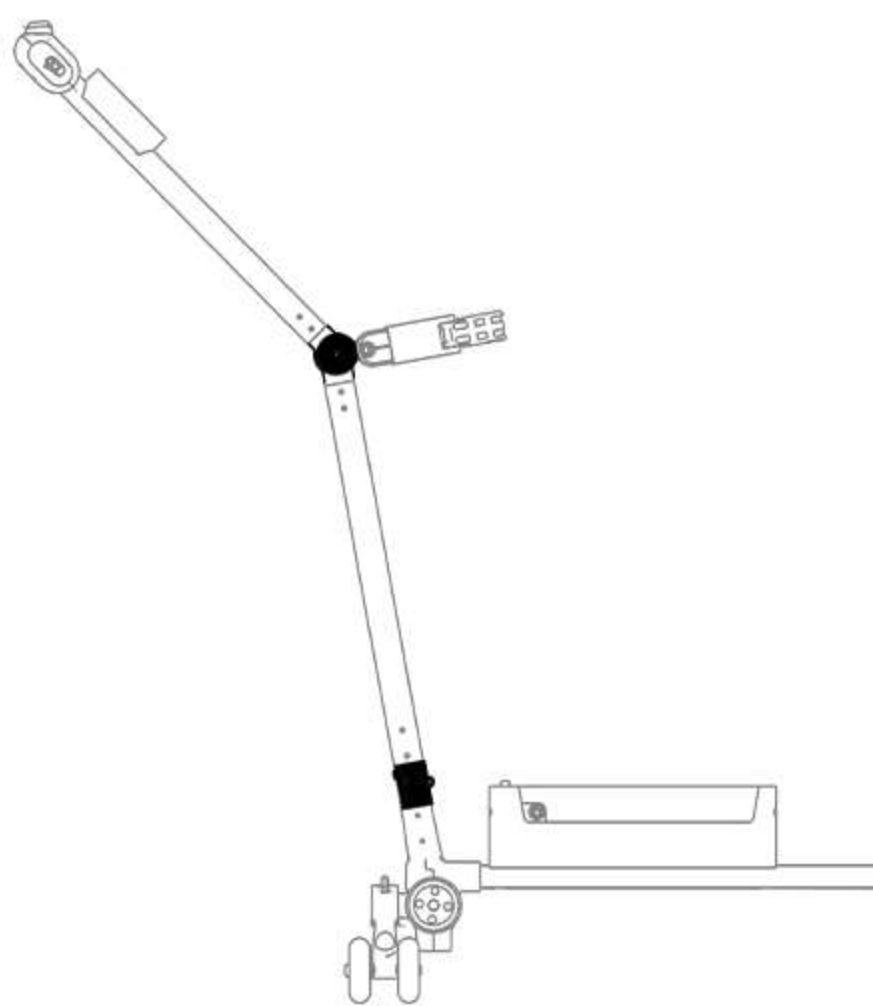

5 Charging

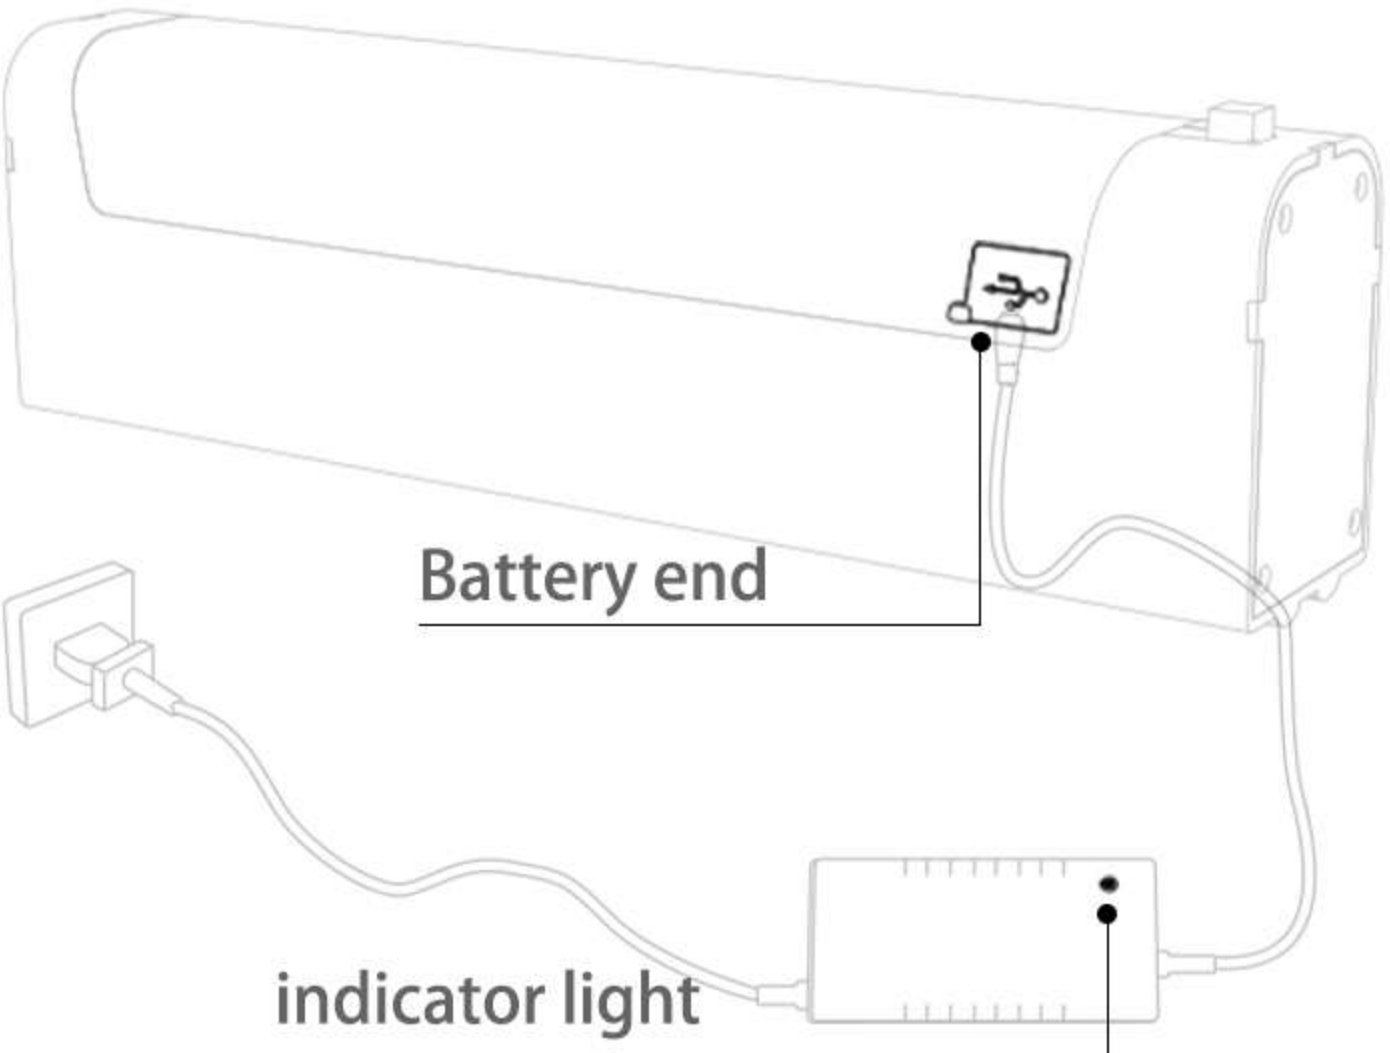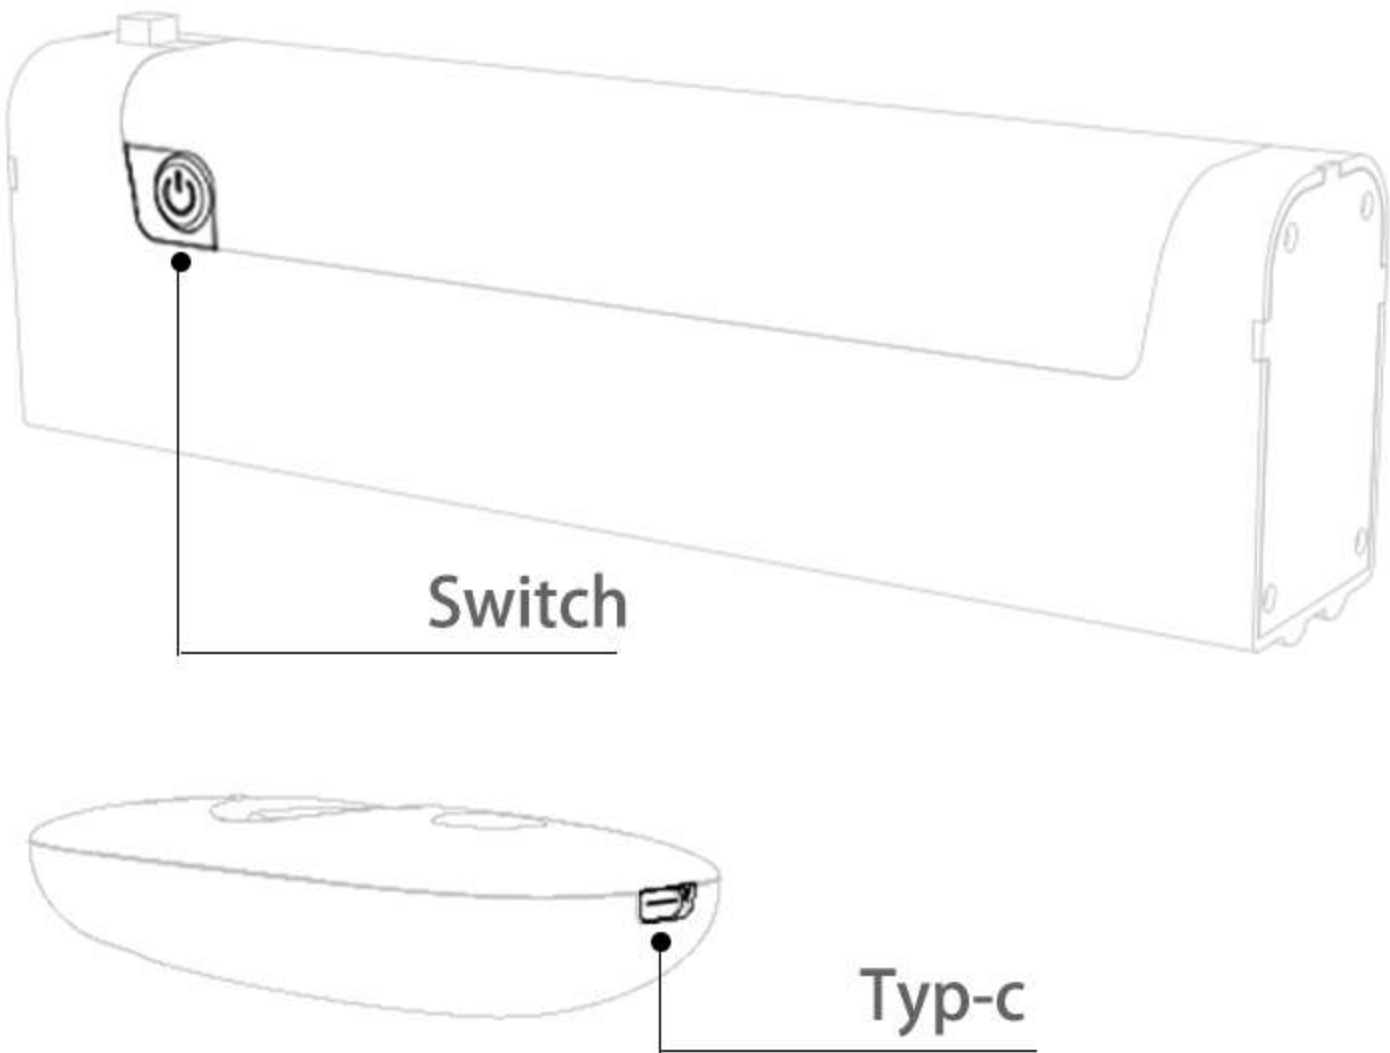

Charging the Battery: Please use the original charger. Remove the battery before charging. First insert the battery, then connect the power supply. Once connected, a red light on the charger indicates that charging is in progress, while a green light indicates that the battery is fully charged.

Charging the Remote Control: Please avoid using high-power fast chargers. A pulsing red light on the remote control's power button indicates that charging is in progress; the red light will turn off when fully charged.

Parameters	Category	
	Battery	remote control
Charging voltage	29.4V	5V
Charging current	2A (2.5A for Chinese/US standards)	0.3A
Charging time	Approx. 4 hours (approx. 3.5 hours for Chinese/U.S. standards)	约2.5H

Warning

The above information applies to the original charger only; do not use other devices for charging.

The above specifications apply to 5V chargers; do not use high-power fast chargers.

6 First-time use




Scan the QR code

You must download and install the app on an Android or iOS smart-phone before you can use this product.

Note: The remote control has already been paired before setup.


After scanning the QR code, please use your browser to open the webpage and download and install the app. When opening the app, you must enable both Bluetooth and location services on your device before you can connect.

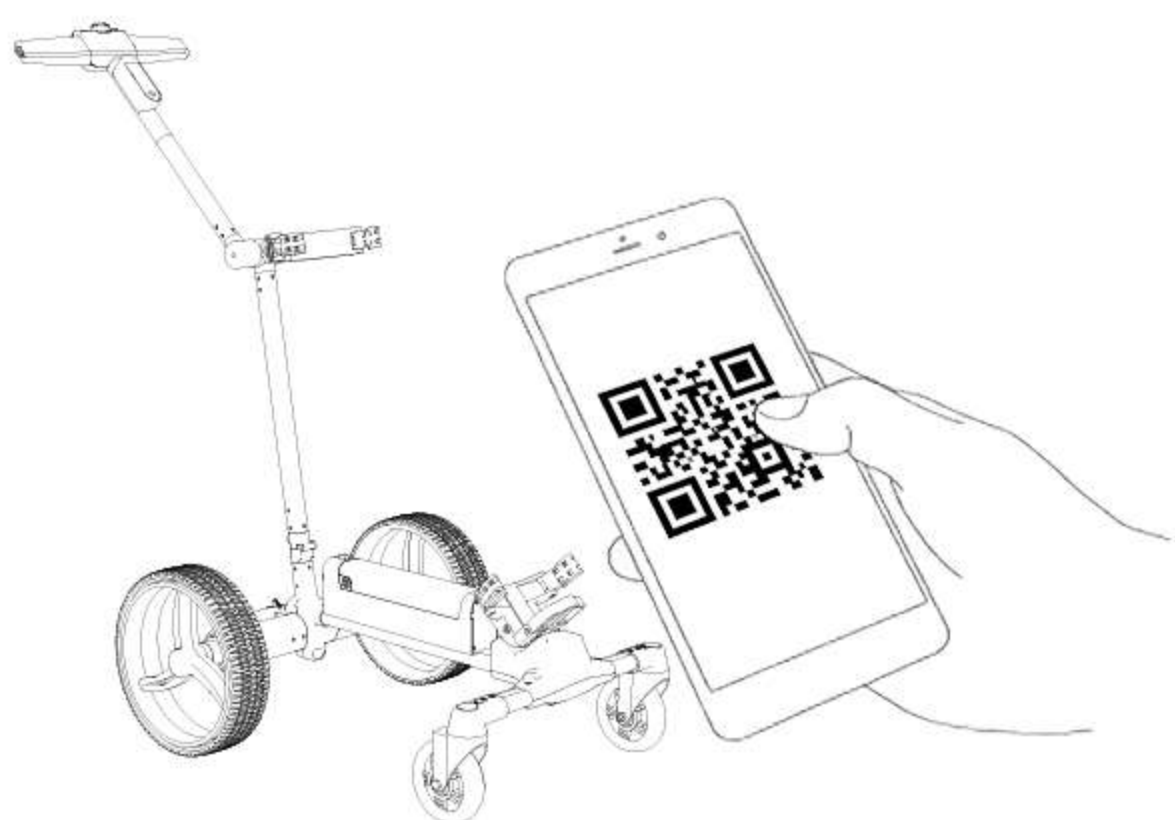


1. Open the app and tap the "Match" button



2. At this point, the vehicle's display will show the code "6.1" (3.7 in imperial units). While the display shows "6.1," pick up the remote control to pair it; first, press and hold the buttons on either side of the joystick.

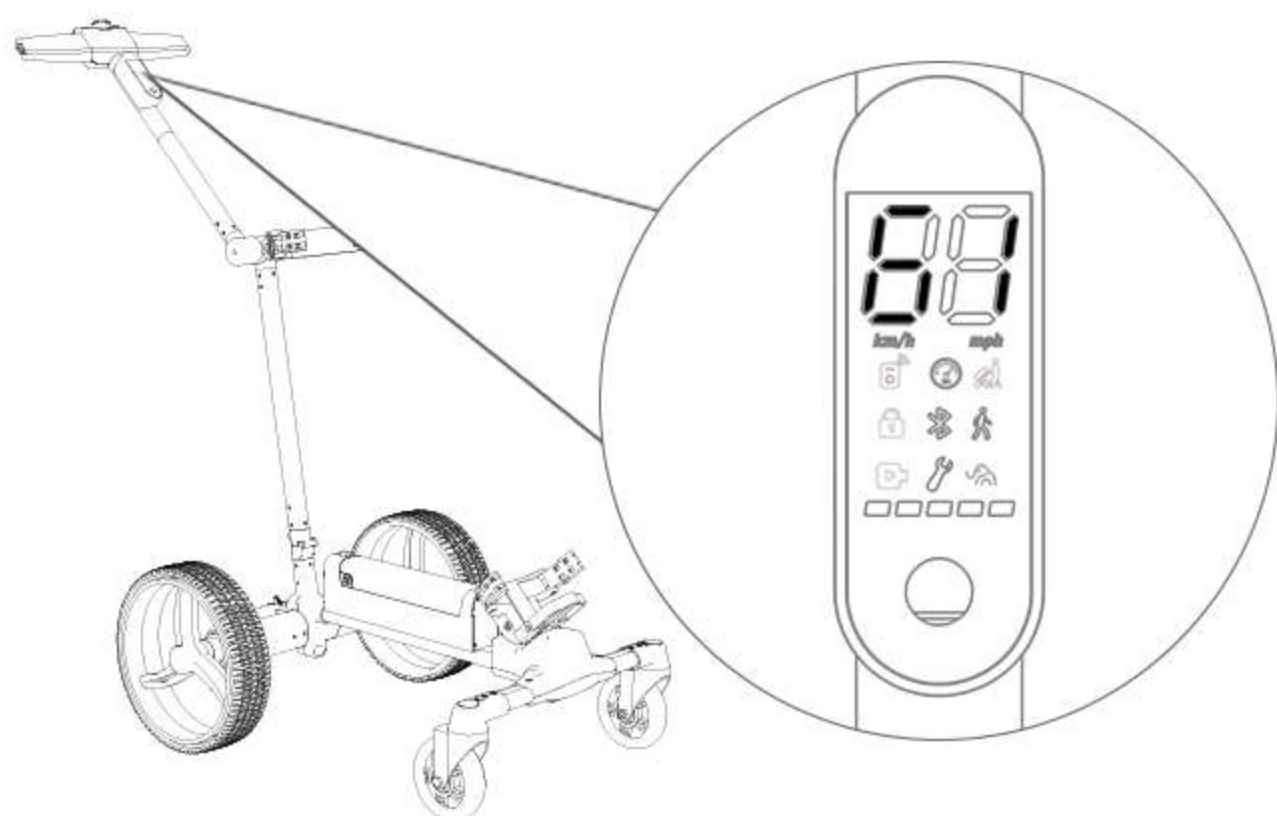


3. Press and hold the power button for 1 second, then release it. Under normal circumstances, the remote control should now be paired with the car.

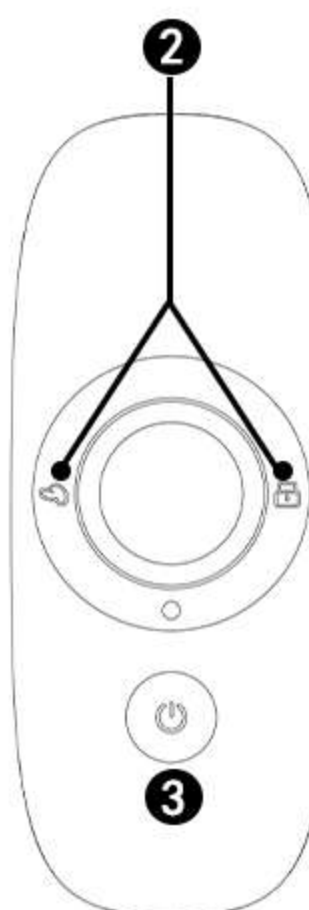


Note: Before pairing, make sure the remote control is turned off. Release the power button after holding it down for 1 second; otherwise, the remote control will turn off immediately.

7 Pattern Learning

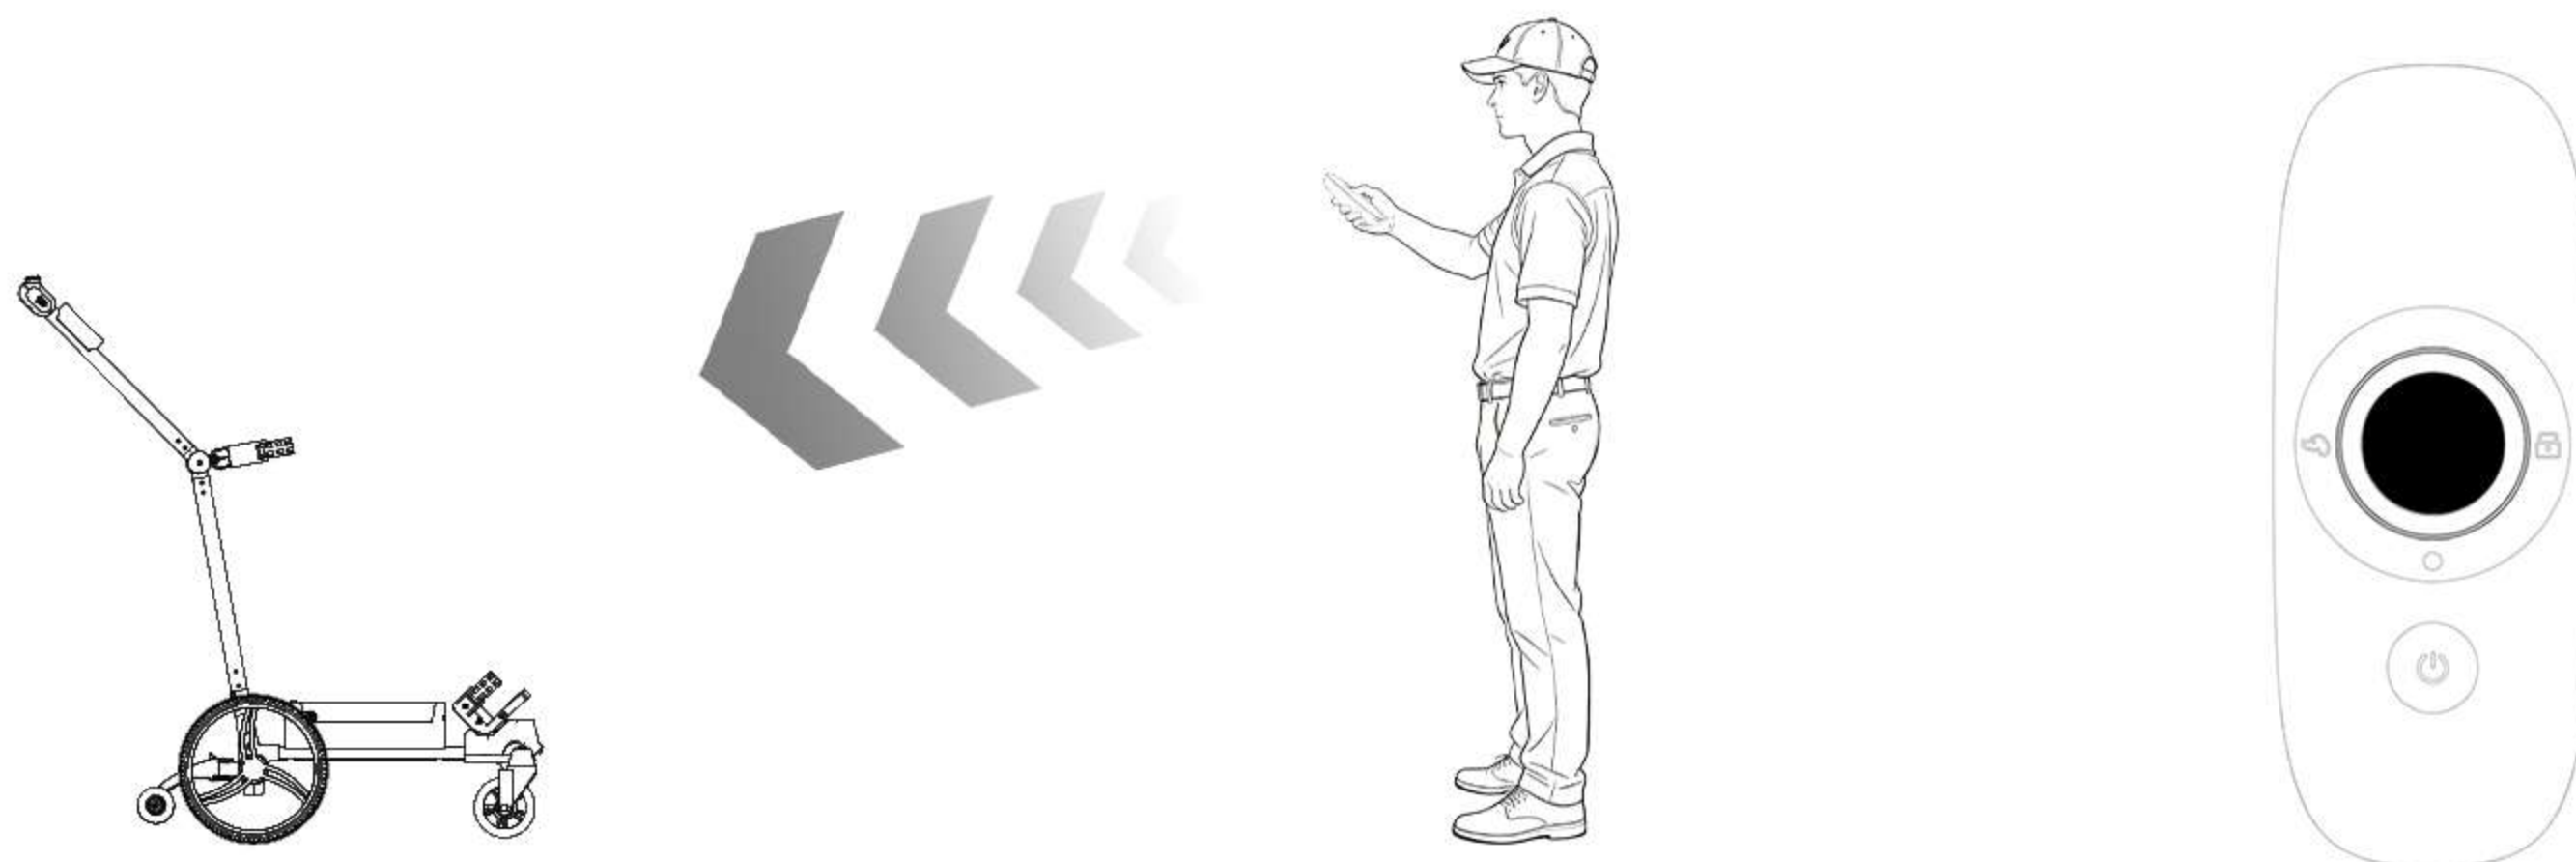


Remote Control Mode:

Push the joystick; the indicator light will turn yellow, and the cart will enter remote control mode. In this mode, push the joystick to control the cart's movement and steering (360° rotation). Note: In remote control mode, the cart is locked and can only be operated using the remote control.

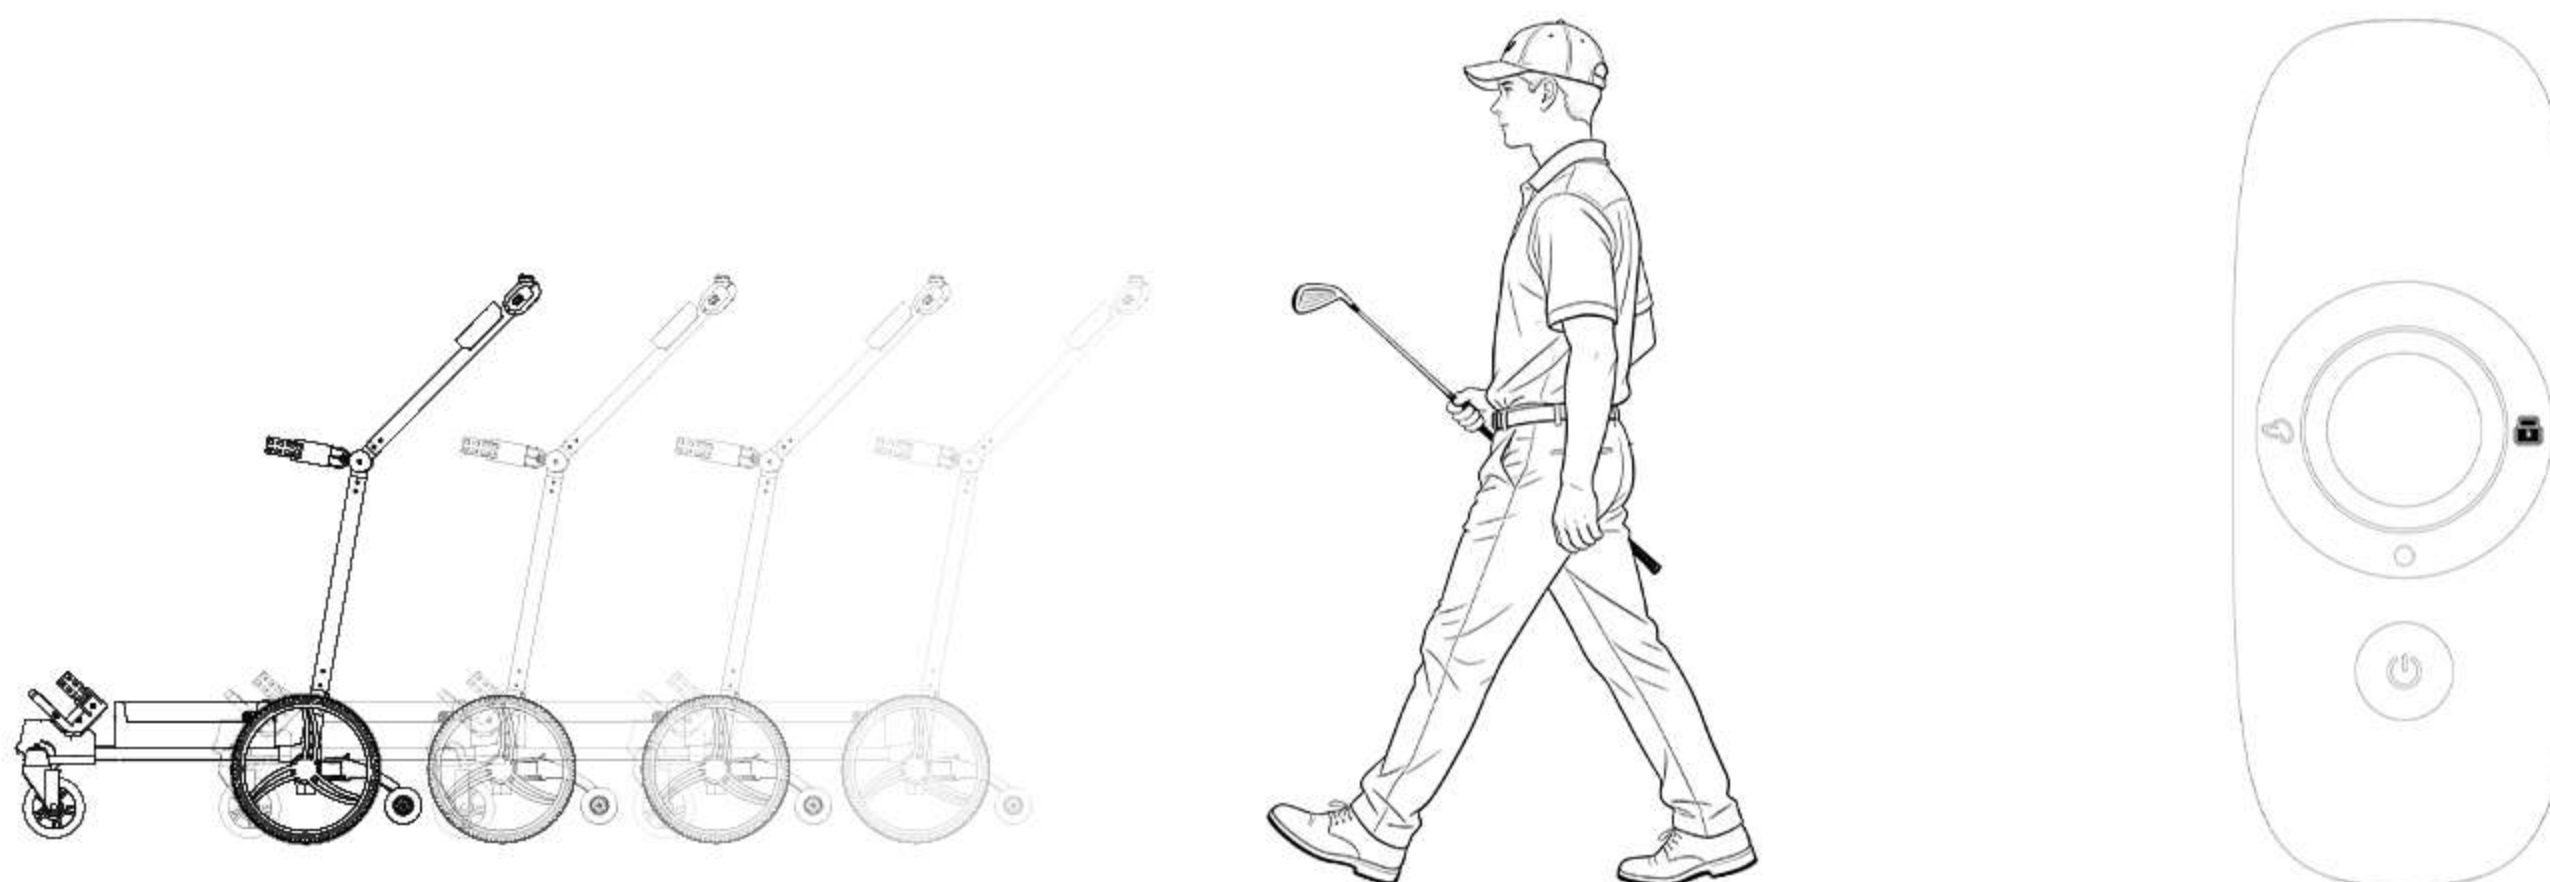



Cruise Control Mode:

Press the cruise control button while in standby mode; the indicator light will turn yellow, and the G1 will enter cruise control mode. In this mode, the G1 travels at a fixed speed (adjustable). It starts at the first speed setting, with a total of three speed settings (factory defaults are 3 km/h, 5 km/h, and 7 km/h). Pushing the joystick forward again will gradually accelerate to the maximum speed of the third setting. While moving, you can steer left or right using the joystick. Pulling the joystick backward exits cruise control mode and enters remote control mode.

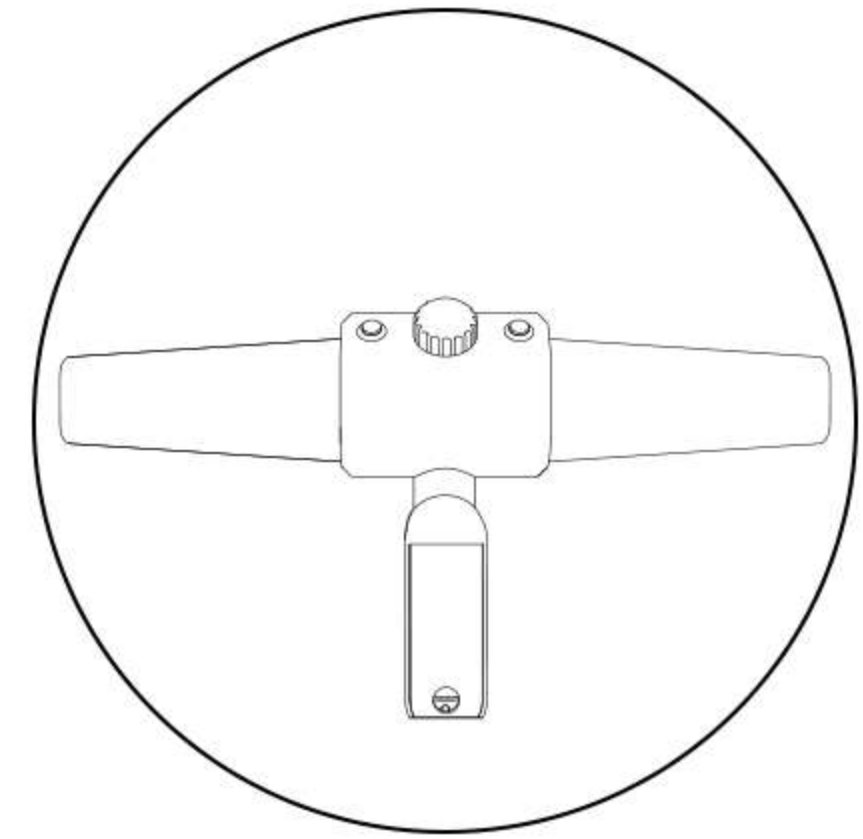


Boost Mode:

In standby mode, press the boost knob on top once; the display will show the  icon. At this point, turn the knob clockwise to activate boost. Rotate clockwise to accelerate and counterclockwise to decelerate. Press the left or right buttons to control the G1's steering. In Boost Mode, the device moves forward at speeds between 1 km/h and 7 km/h, and manual steering assistance is required while moving. Press the knob again or tap the remote control switch to exit Boost Mode.

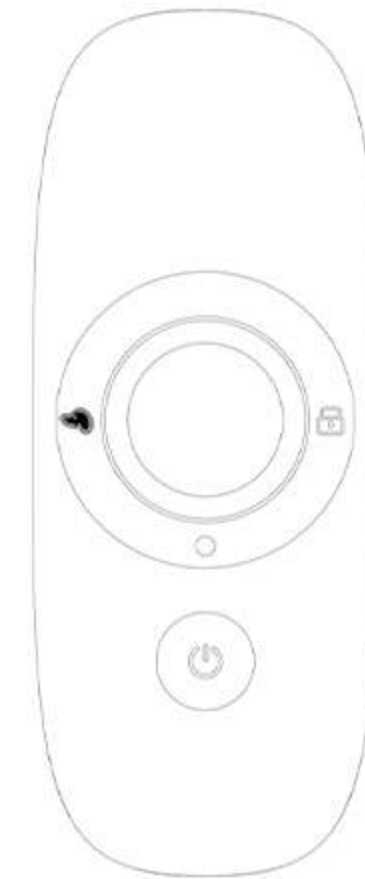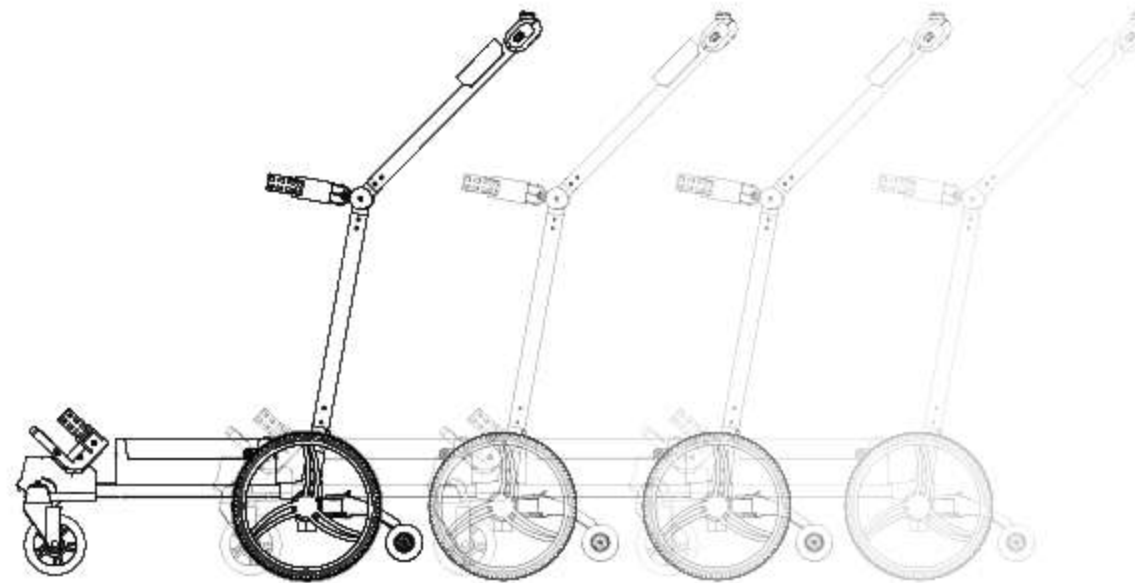

Follow Mode:

Press the Follow button while in Standby mode. If the distance between the G1 and the remote control is within 1.8 meters (factory default: 1.8 meters), the indicator light will turn green, and the G1 will enter Follow Mode. In this mode, the G1 will automatically follow and maintain the set distance. When the user stops or the distance between the user and the G1 falls below 1.8 meters, the G1 will stop moving. Push the joystick to exit Follow Mode and switch to Remote Control Mode.

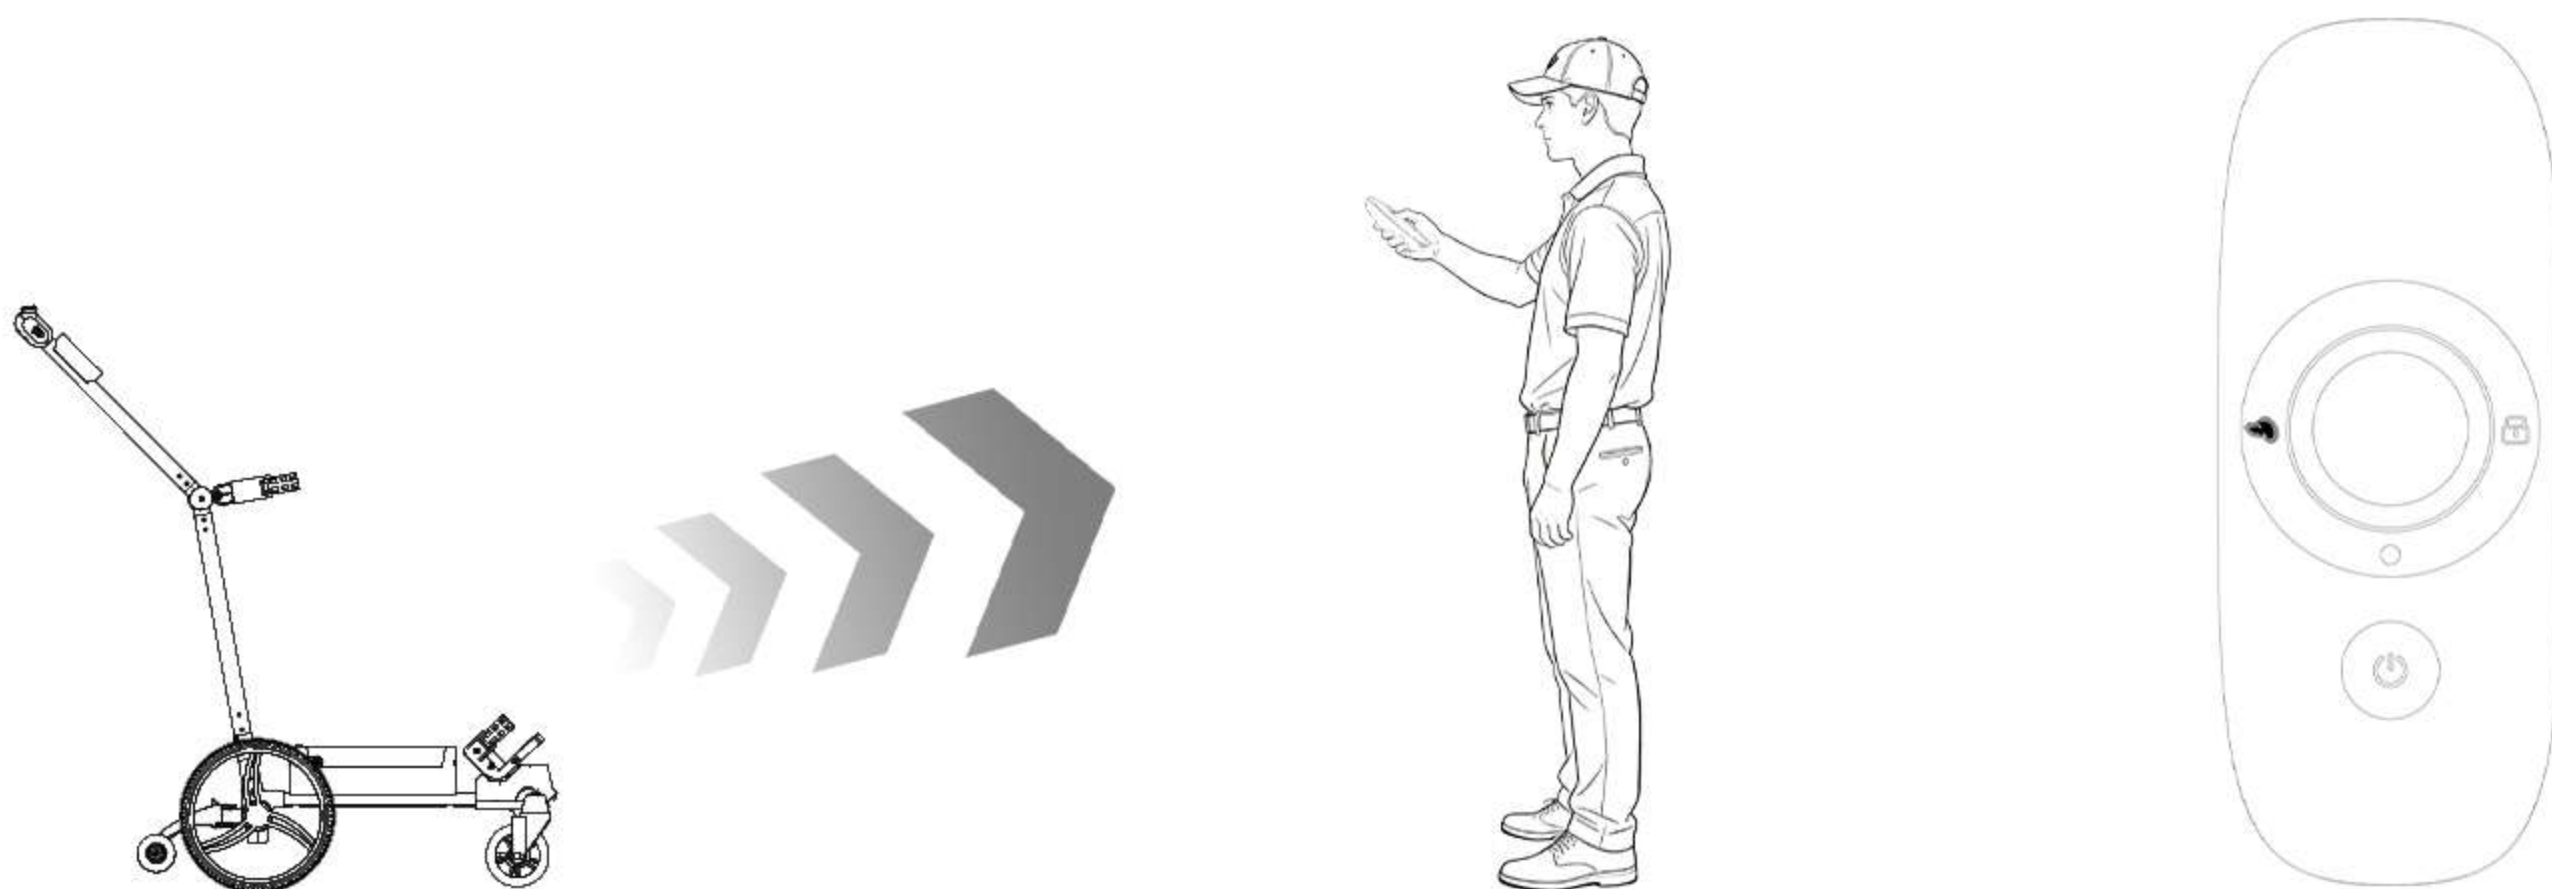

Recall Mode:

When the Follow button is pressed, if the distance between the G1 and the remote control exceeds 1.8 meters, the indicator light remains blue. The G1 enters Recall Mode, automatically tracking the remote control until it returns to within the set range, at which point it resumes Follow Mode.

8 Safety Guidelines

- The golf cart does not have an automatic obstacle-avoidance feature; please maneuver to avoid obstacles promptly when encountering them.
- Please strictly follow the charging instructions when charging the battery and remote control. Never use non-original chargers, as this may damage the battery or remote control.
- Battery life depends on usage habits, load capacity, and environmental conditions; variations are normal.
- If the weather is cold or the cart will not be used for an extended period, remove the battery, fully charge it, and store it in an environment above 5° C to extend its lifespan.
- Do not hang heavy objects on the armrests.
- The cart is splash-proof only; do not submerge it in water or expose it to heavy rain. When cleaning the cart, wipe it down with a cloth to prevent water from entering the electrical compartment or battery compartment.
- In cold weather, battery life will decrease by approximately 15%.

9 Model Specifications Table

Product Name	G1 Follow-Me Golf Cart	Remote Control Range	54 holes
Folded Dimensions	900 x 600 x 380 mm	Battery Charging Time	Remote control: approx. 2.5 hours; battery: approx. 4 hours
Unfolded Dimensions	900 x 600 x 1160 mm	Remote Control Range	70 m
Dimensions When Folded	620 x 590 x 300 mm	Climbing Ability	20°
Packaging Dimensions	705 x 620 x 375 mm	Remote Control Speed	2 – 7 km/h (adjustable)
Battery Dimensions	278 x 61 x 64 mm	Materials	ABS+PC, aluminum alloy, nylon, rubber
Battery Weight	1.5 kg	Driving Modes	Rear-wheel drive
Net Weight/Gross Weight	14.50 kg / 19.50 kg	Control Modes	Push, assist, cruise control, remote control, follow mode
Weight with Quick-Release Mechanism Removed	11.20 kg	App Platform	Android/iOS
Number of Wheels	5	Storage Options	Foldable + quick-release (motor wheel, stabilizer legs, battery)
Front Wheel Type	Dual swivel casters		
Removable Battery	Yes		
Cruising Speed	1 km/h – 7 km/h		
Motor Power	Brushless motors 80 W × 2		
Battery Specifications	25.2 V, 7.8 Ah		
Battery Life	36 holes		

10 Warranty Policy

Golf carts and chargers are covered by a 12-month warranty from the date of purchase. The warranty covers manufacturing defects that arise during normal use and applies only to new golf carts. Any damage resulting from accidental damage, abuse, or misuse is not covered by the warranty. The warranty is non-transferable. Unless otherwise specified by us, used golf carts are not covered by the warranty. The battery for the cart is covered by a 12-month warranty. If the battery fails within the first 12 months, it will be replaced free of charge. All accessories are covered by a 12-month warranty from the date of purchase.

If you require service under warranty, please contact the seller. Please retain your proof of purchase. The after-sales department will diagnose the issue and ship replacement parts to the customer. Any parts replaced free of charge during the warranty period are not covered by a new warranty. If the buyer is unable to replace the parts themselves, please retain all original packaging materials to return the cart for repair. All carts must be returned in their original packaging. If replacement parts are required but are not covered by the warranty, the customer will be responsible for all costs.

Warning:

Be sure to extend the rear stabilizer wheels when using the golf bag cart, and retract them when folding it up for storage. The golf bag cart is splash-proof and can be used safely in light rain. However, it is not waterproof. If it falls into dangerous bodies of water such as ponds or lakes, the battery and circuit board will be damaged. This is not covered under the warranty.

All images in this manual are for reference only; the actual product may vary.
Actual product features may differ from those described in the manual due to
technical upgrades and firmware updates.