



G5

Manual


Please read this manual carefully before using this product.

Wish you a pleasant experience!

TABLE OF CONTENTS

1. Package Contents.....	01
2. Installation and Folding.....	02
3. Structure Introduction.....	03
4. Icon Explanation	04
5. Product Usage.....	05
6. Charging Instructions.....	07
7. Precautions for Use.....	08
8. APP Introduction.....	09
9. Remote Control Pairing.....	13
10. Specifications.....	15
11. Warranty.....	16


1. WARRANTY

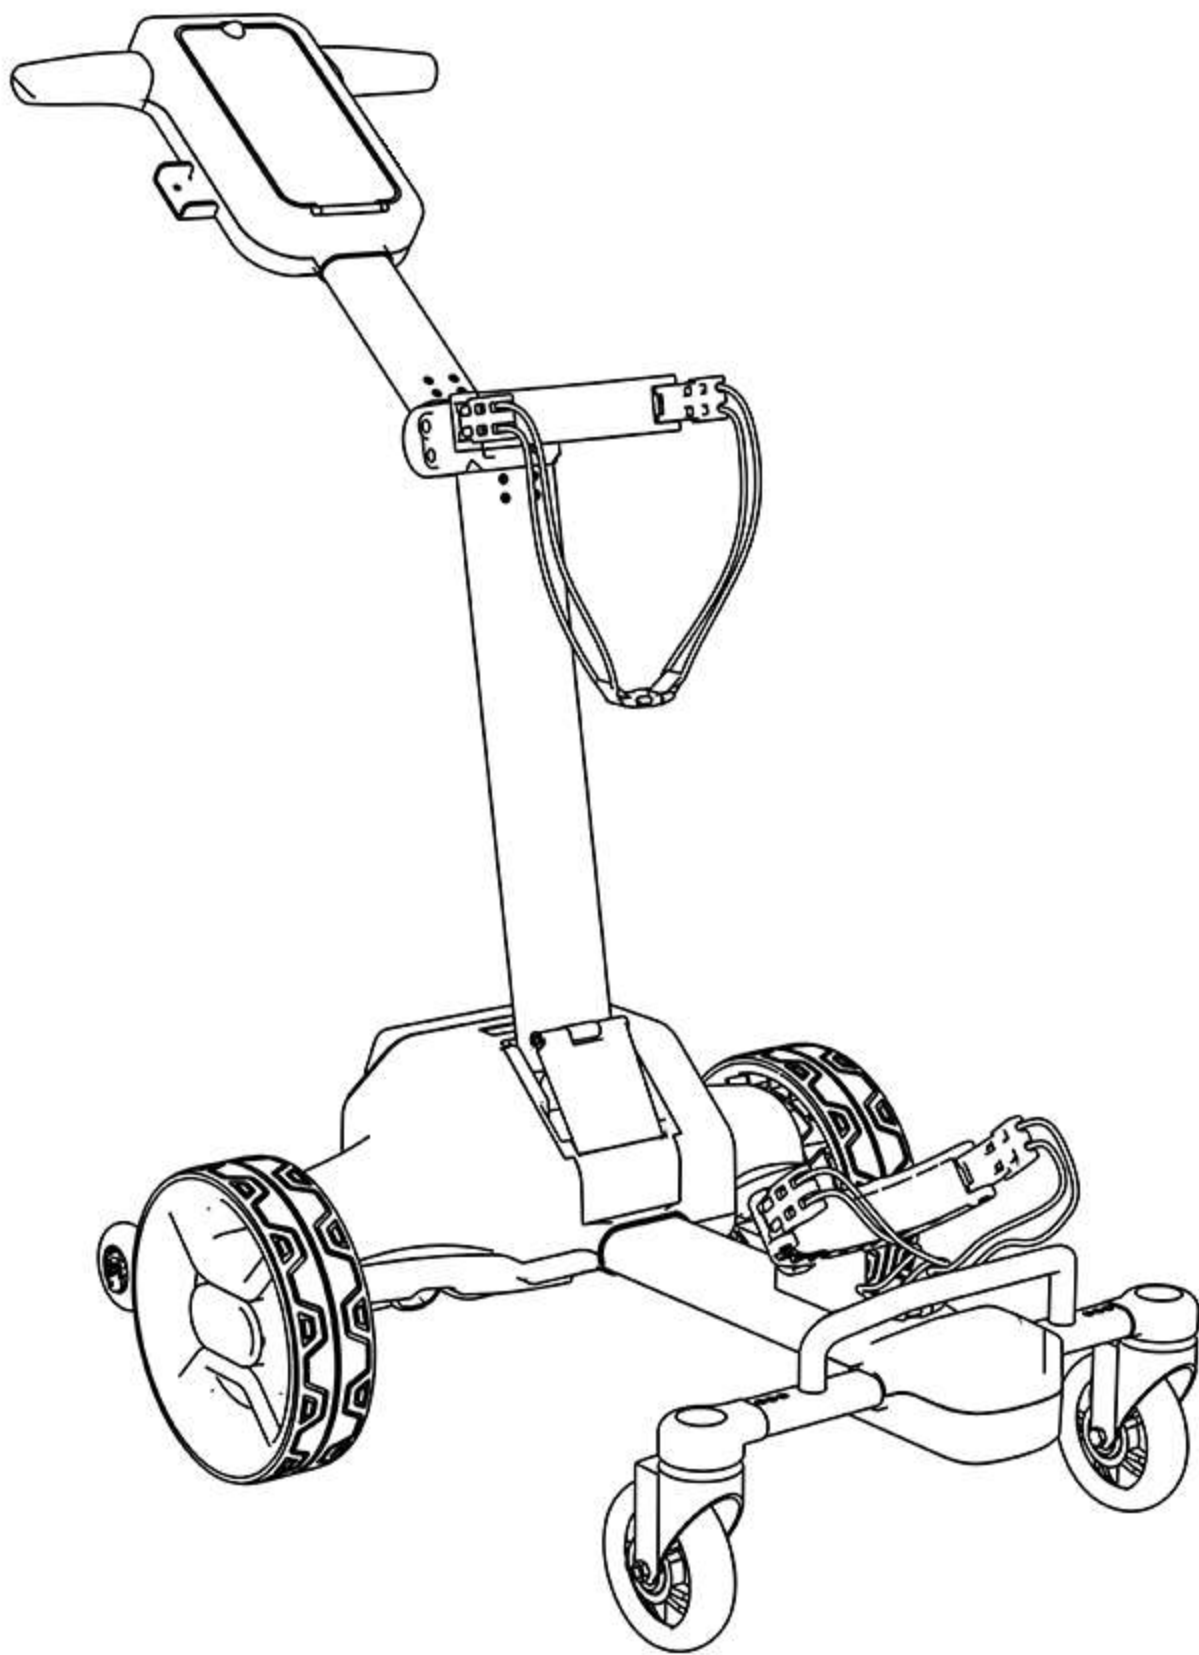


1. Golf Cart ×1




2. Product Manual ×1

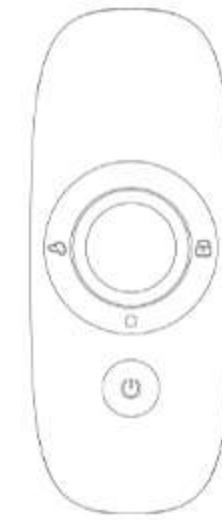

3. Remote Control ×1

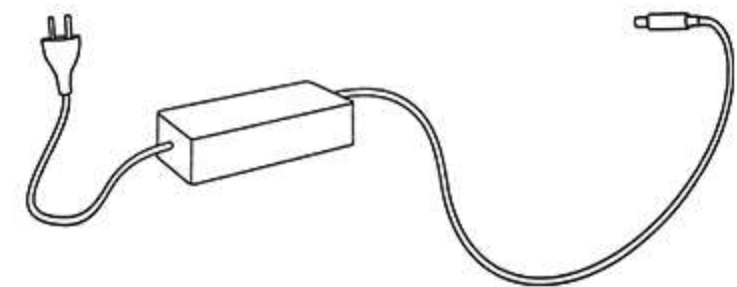

4. Charger ×1

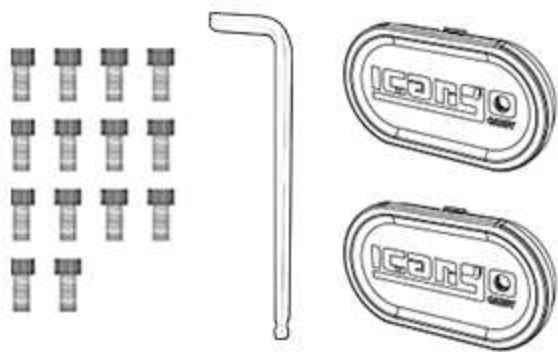


5. Tool Kit ×1




6. Umbrella Holder ×1




7. Cup Holder ×1

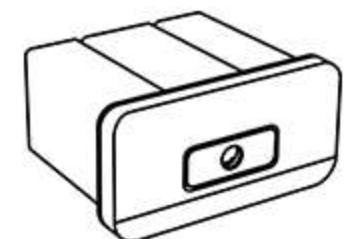

8. Battery ×1

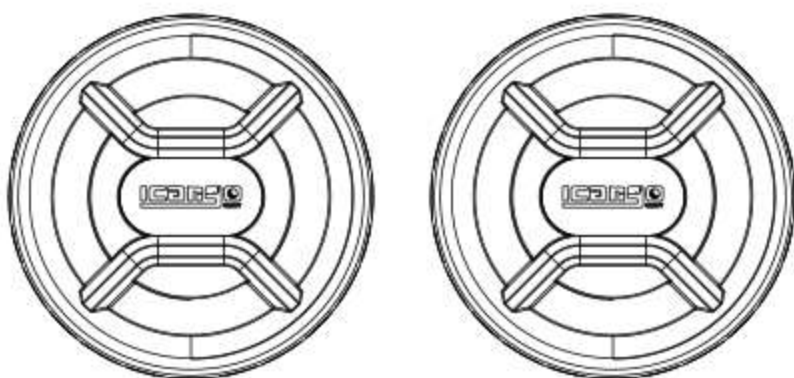

9. Motor Wheel ×2

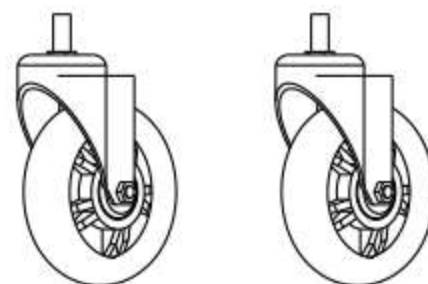


10. Universal Wheel ×2




11. Remote Control Clip ×1


2. INSTALLATION AND FOLDING

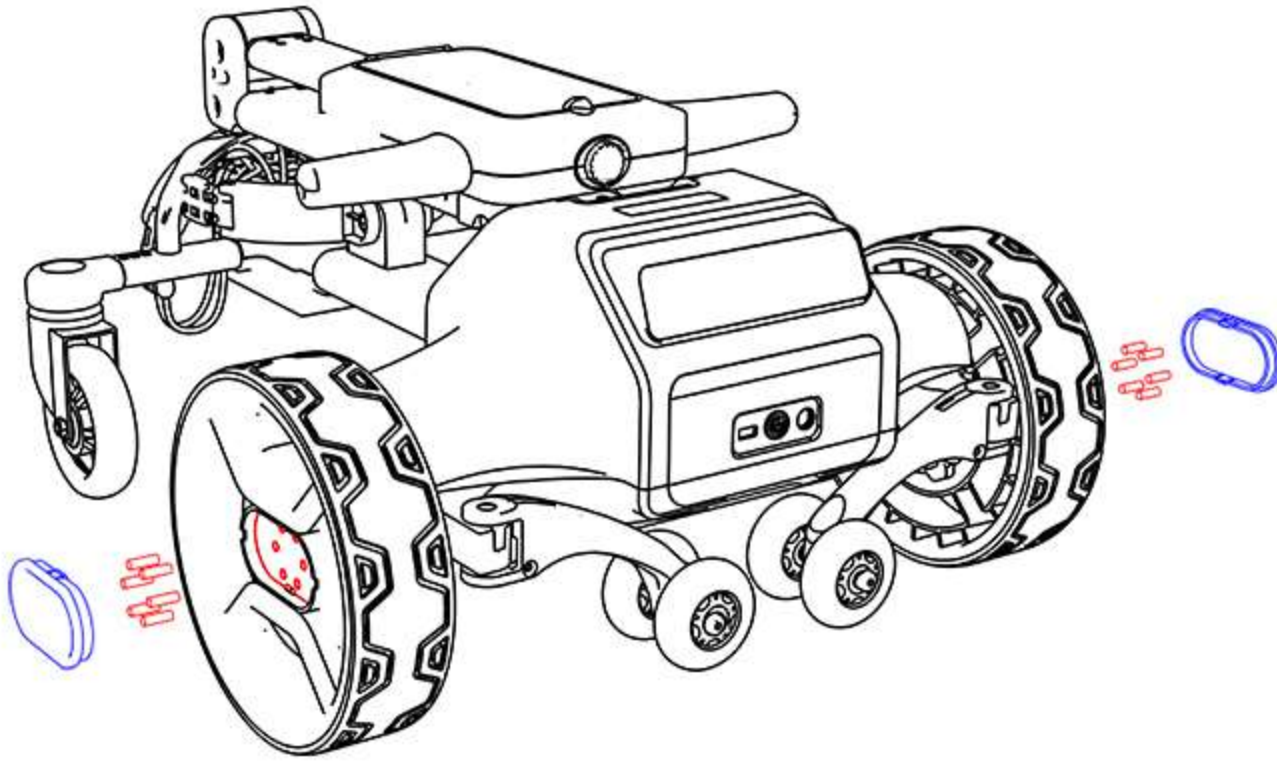

1. Fix the main motor wheels with M6*14mm screws, then cover the caps.

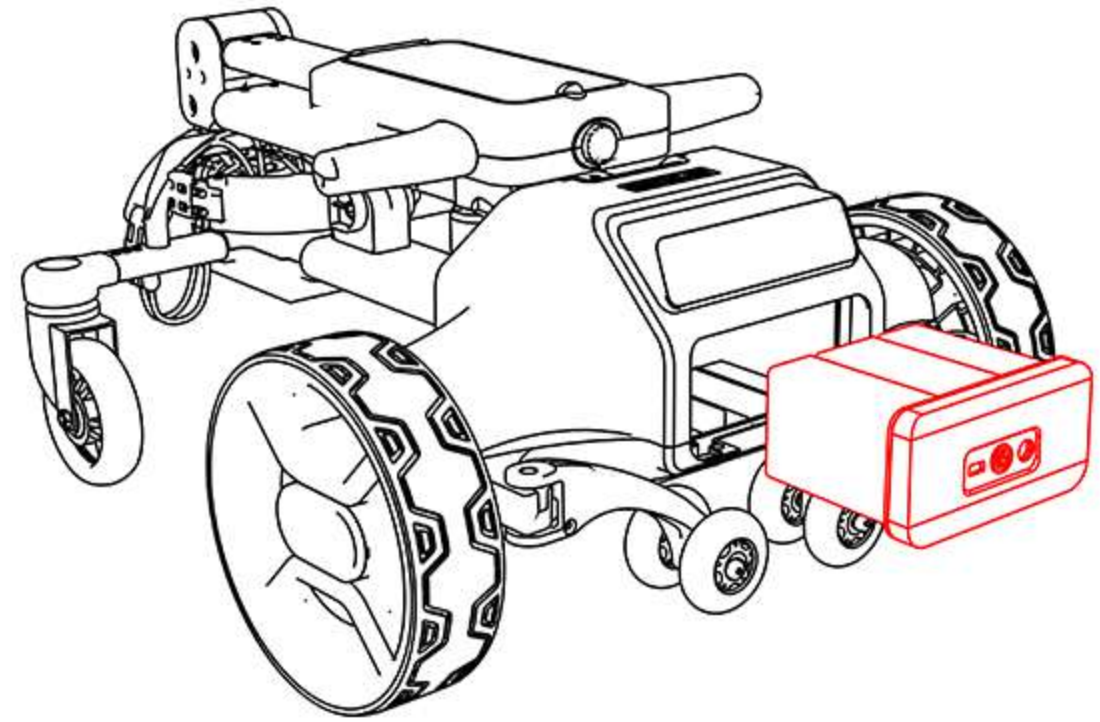


2. Insert the battery into the battery slot.

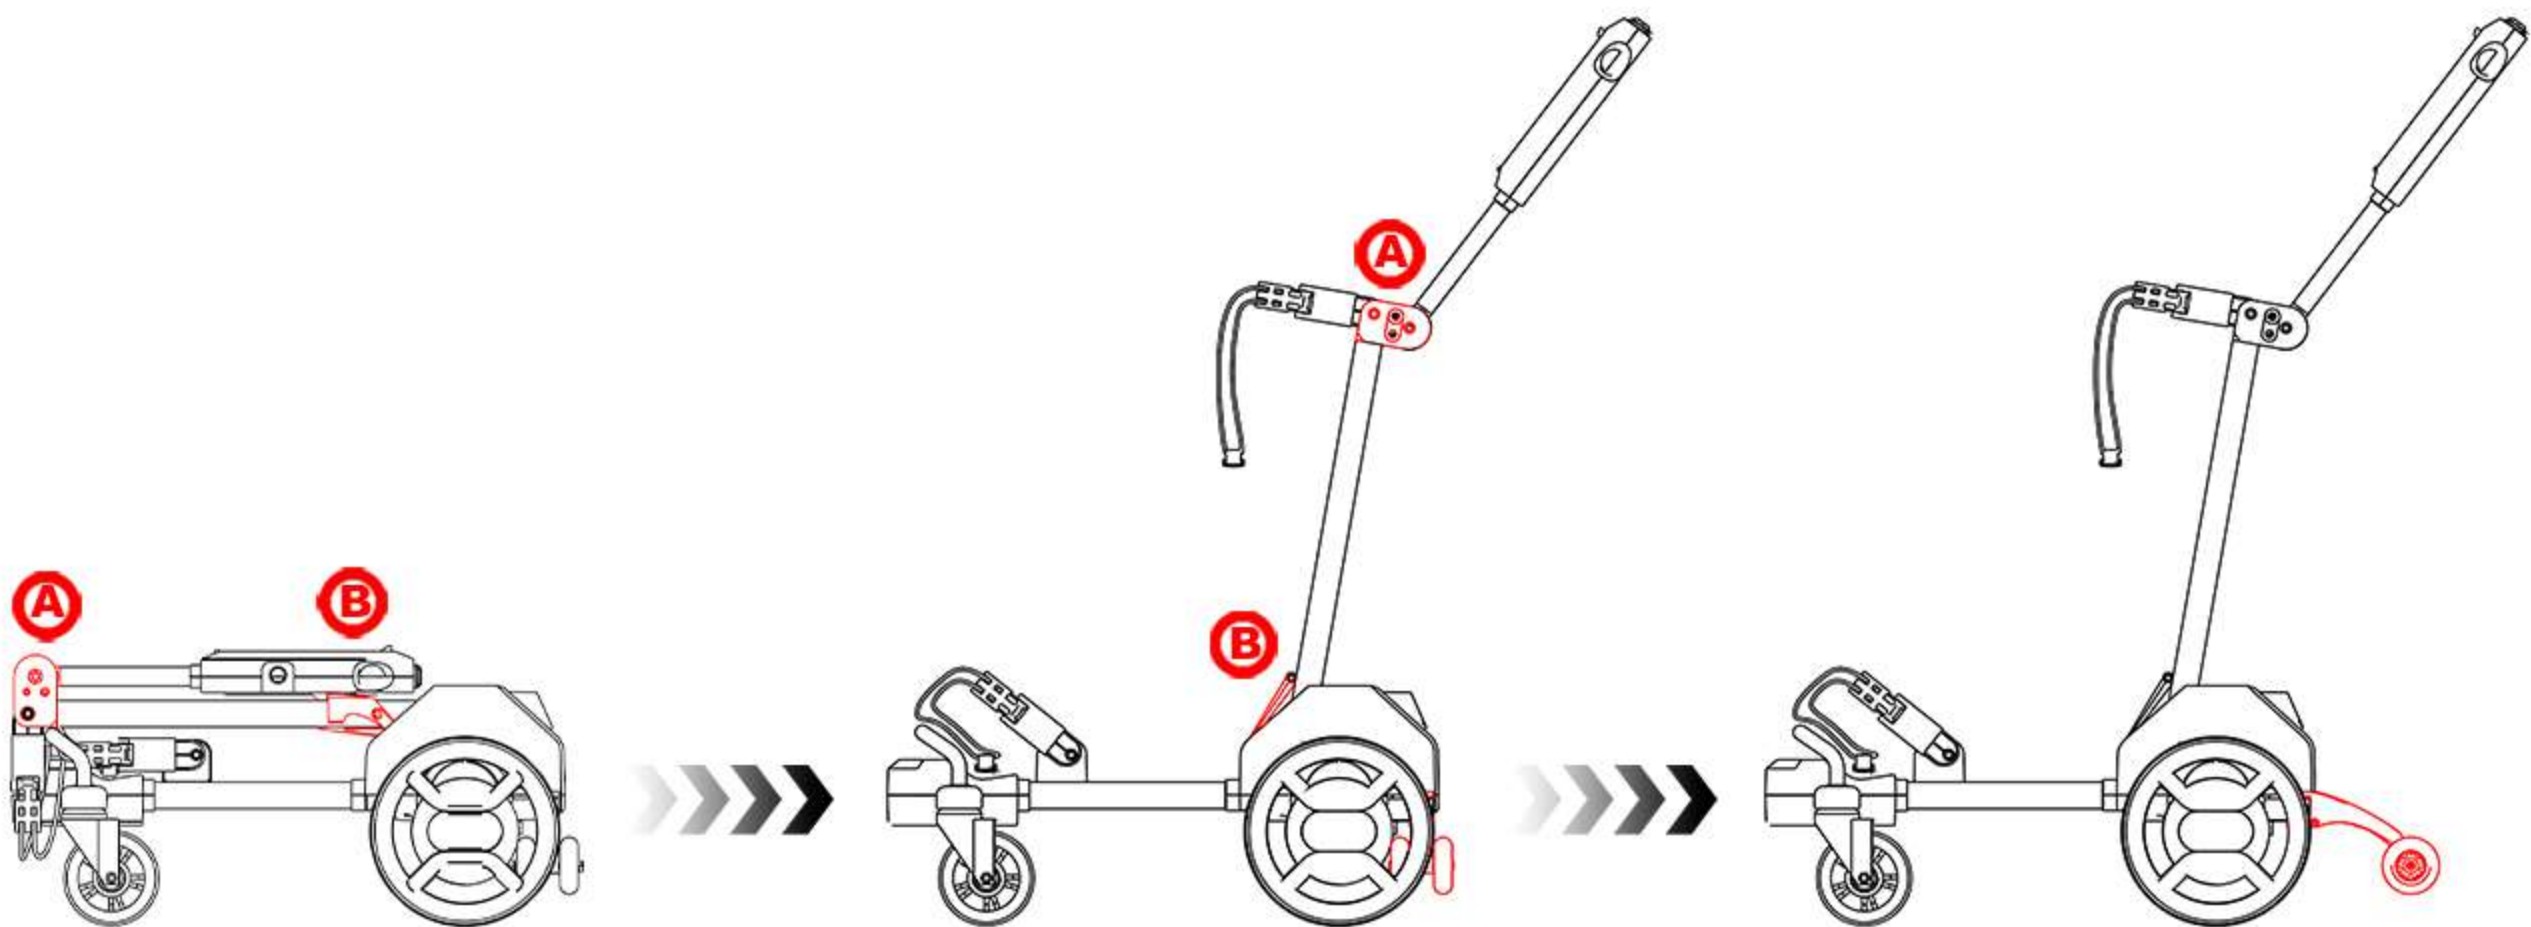


3. Secure part B with the support plate, adjust the handle to a suitable height, then lock knob A. The rear auxiliary wheels must be kept unfolded during the use of the cart.

3. STRUCTURE INTRODUCTION

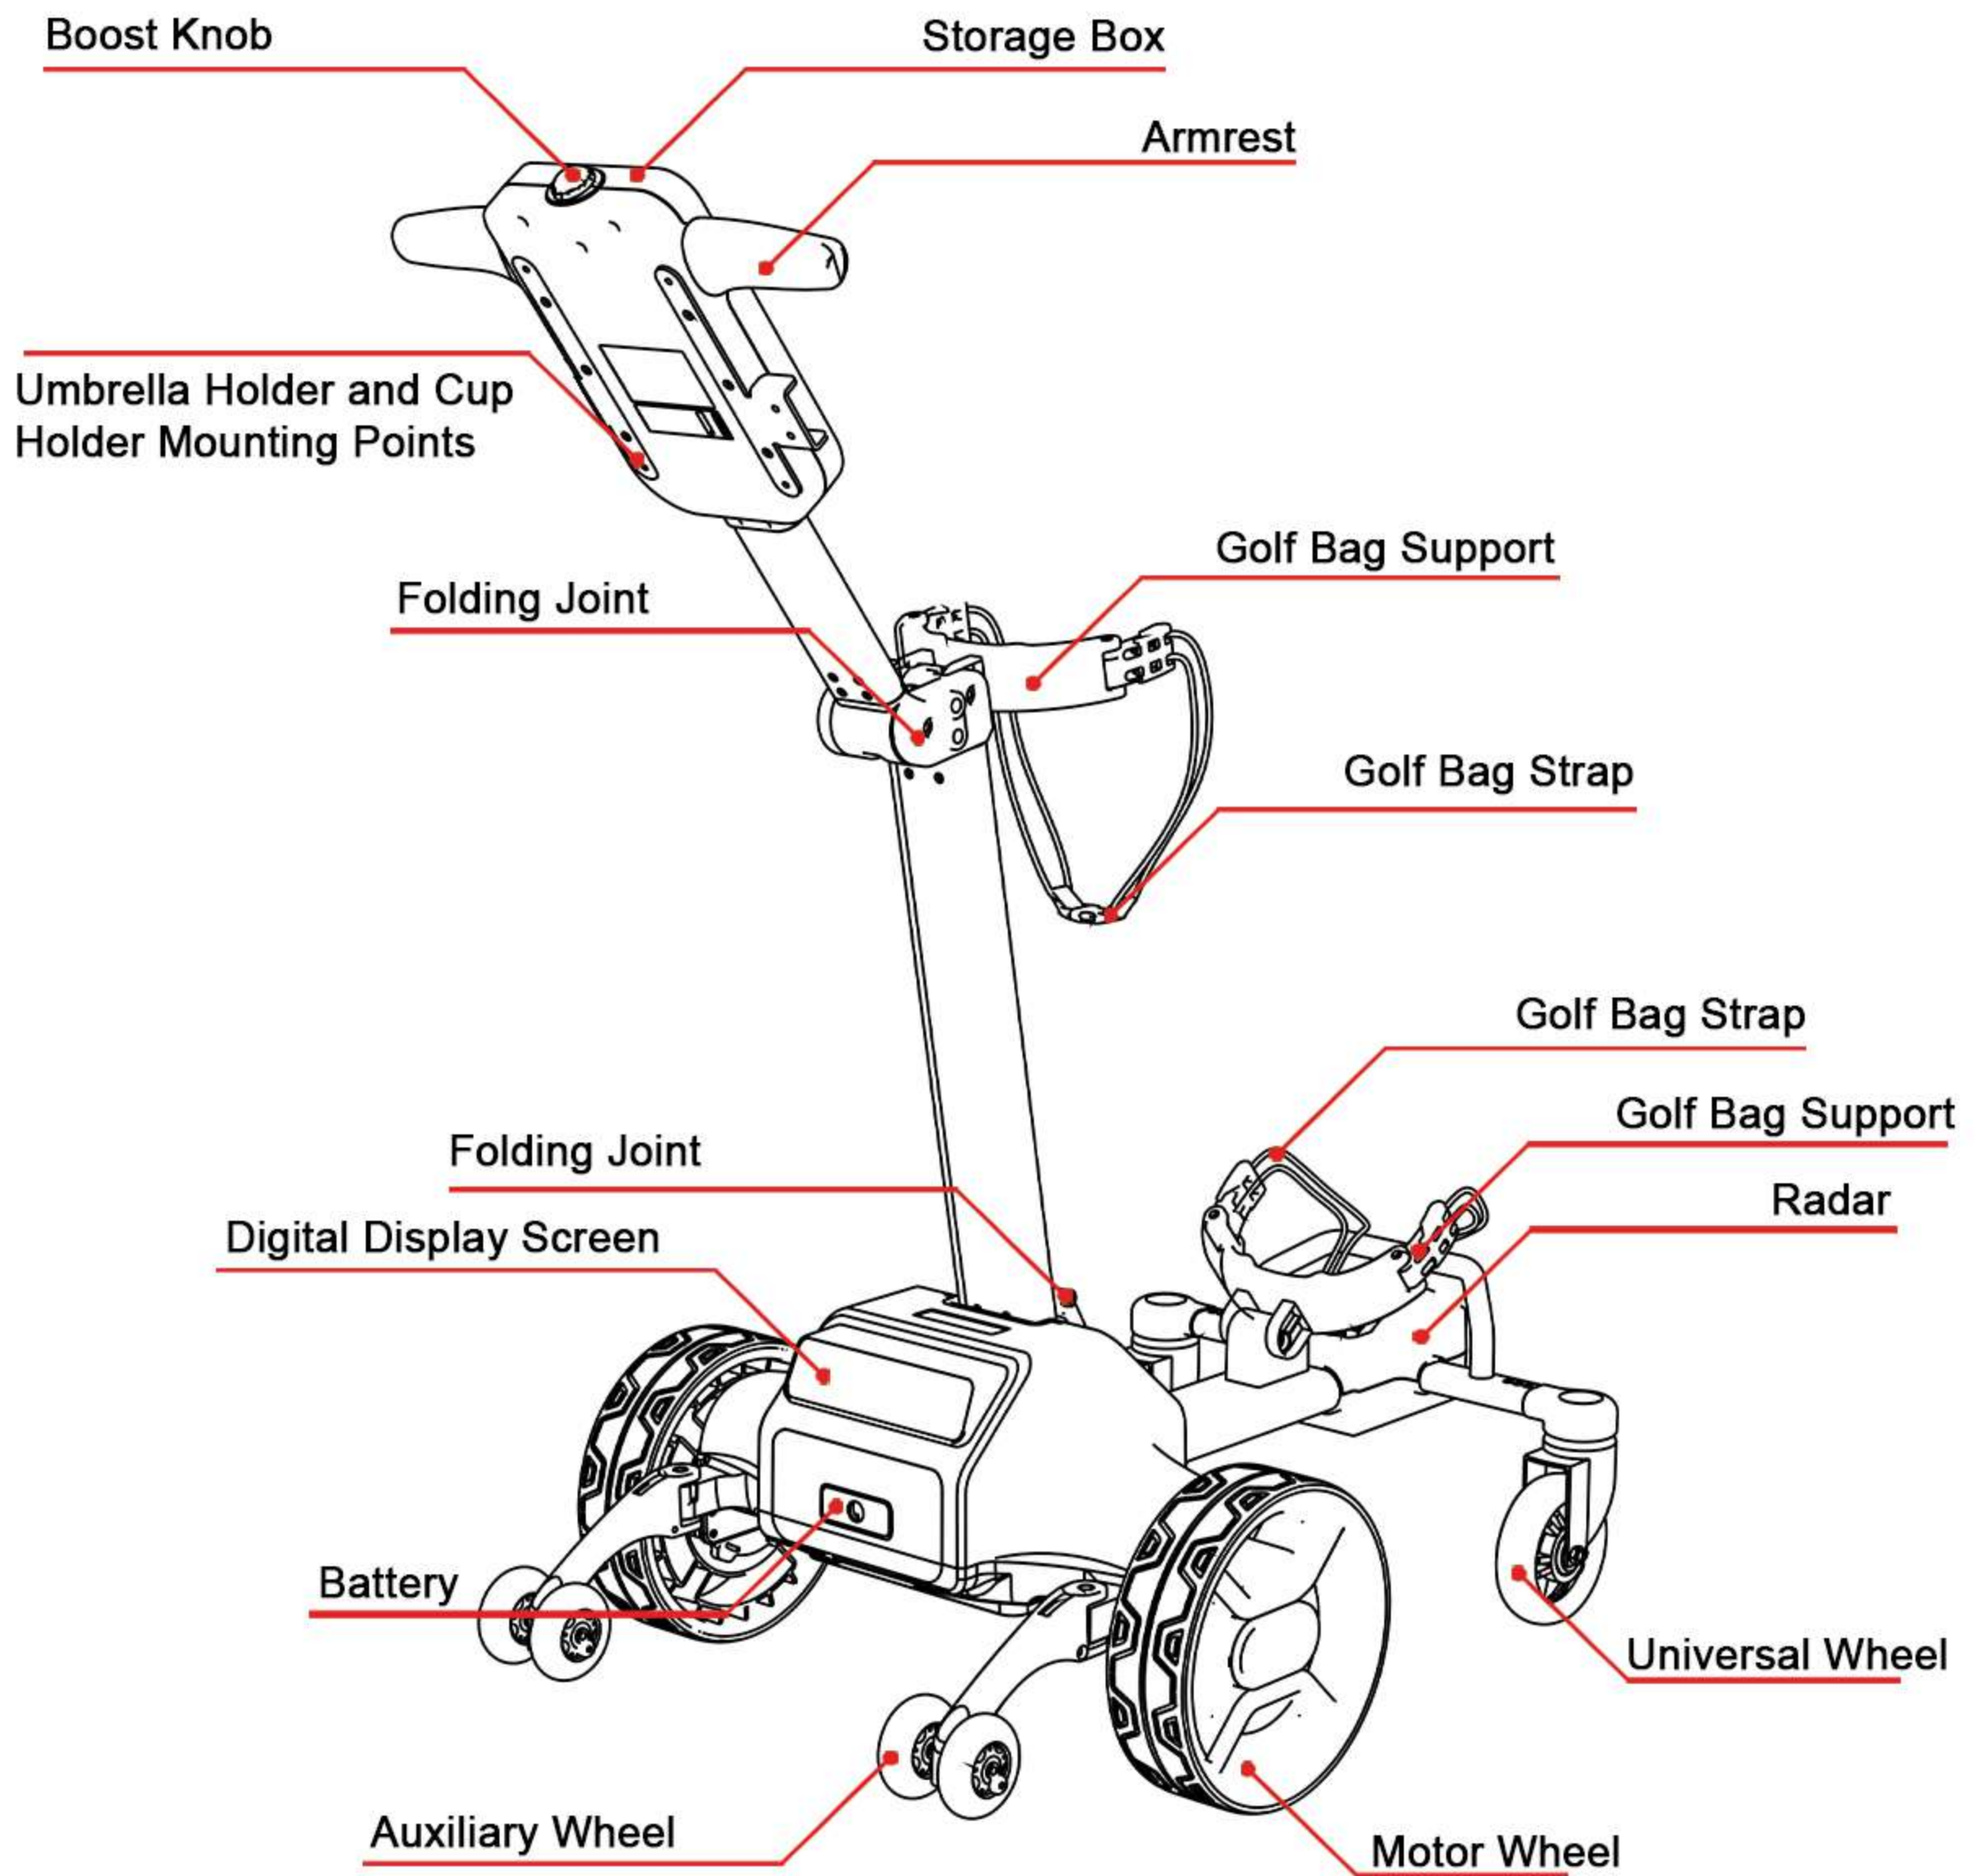


4. ICON EXPLANATION

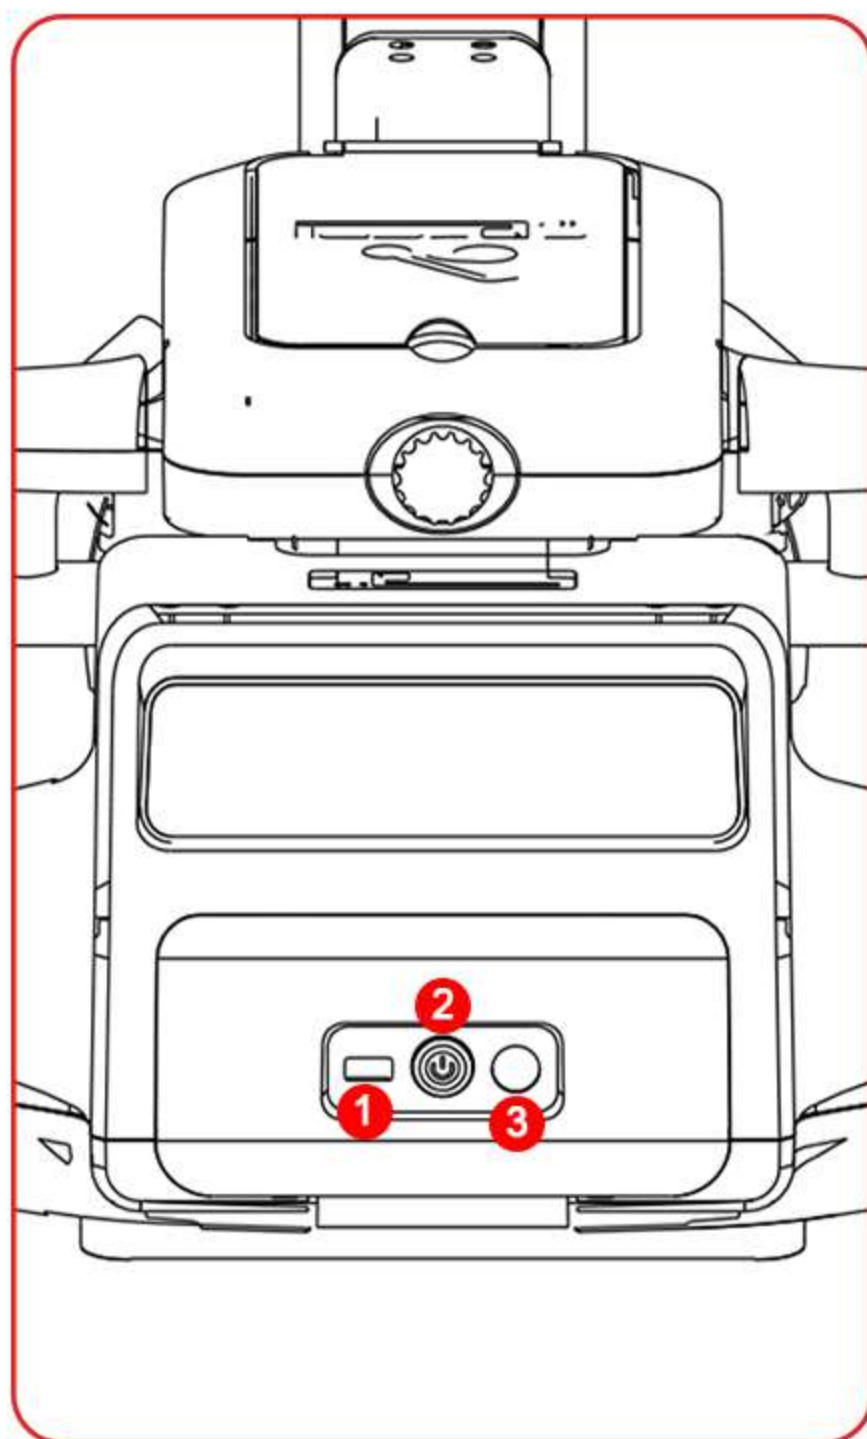

1. USB Interface

2. Battery Switch

3. Battery Charging Port

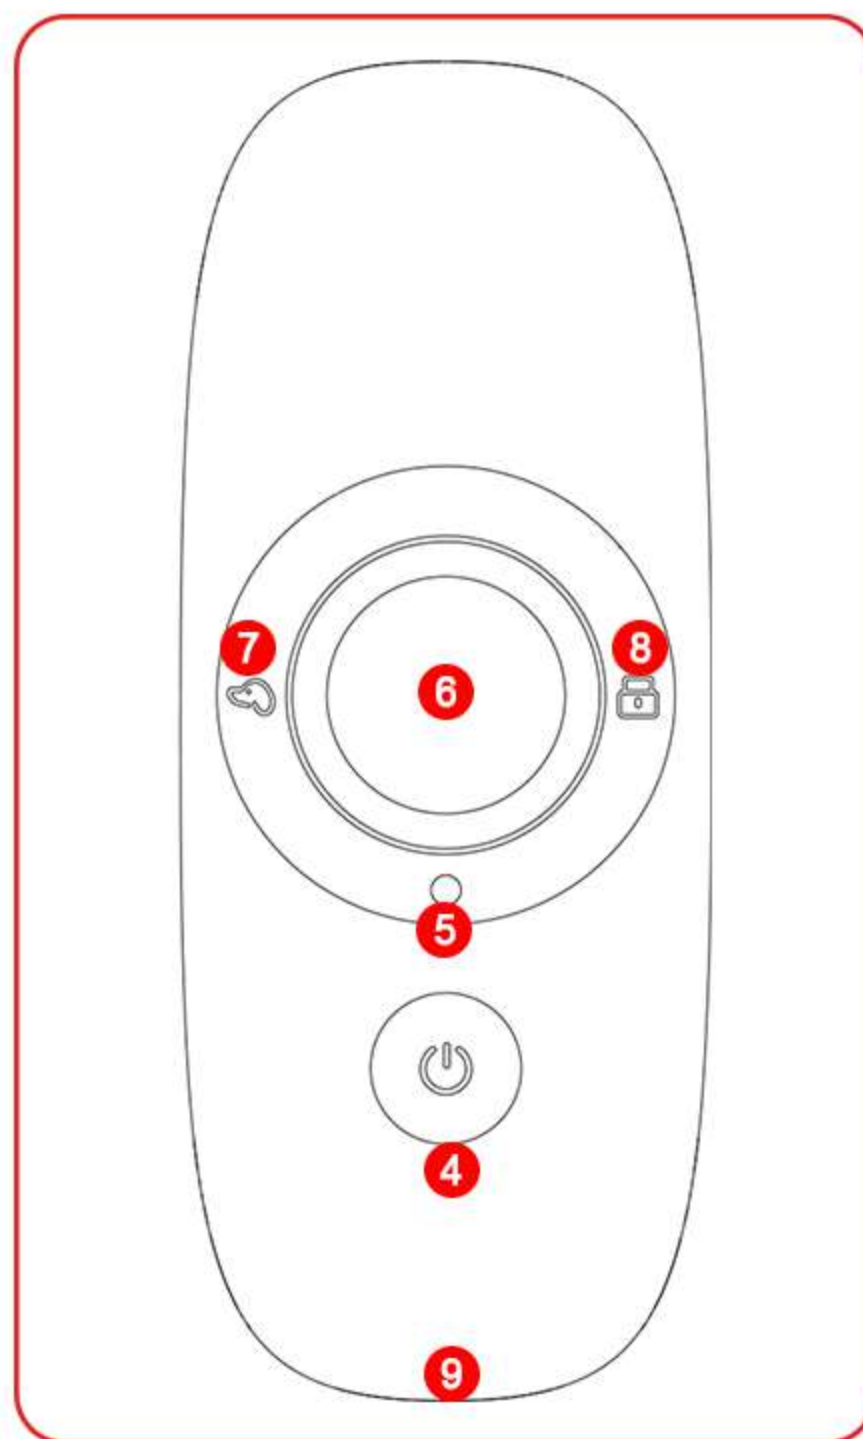

4. Remote Control Switch


5. Indicator Light

6. Joystick

7. Follow-me Button

8. Cruise Control Button

9. Type-C Charging Port

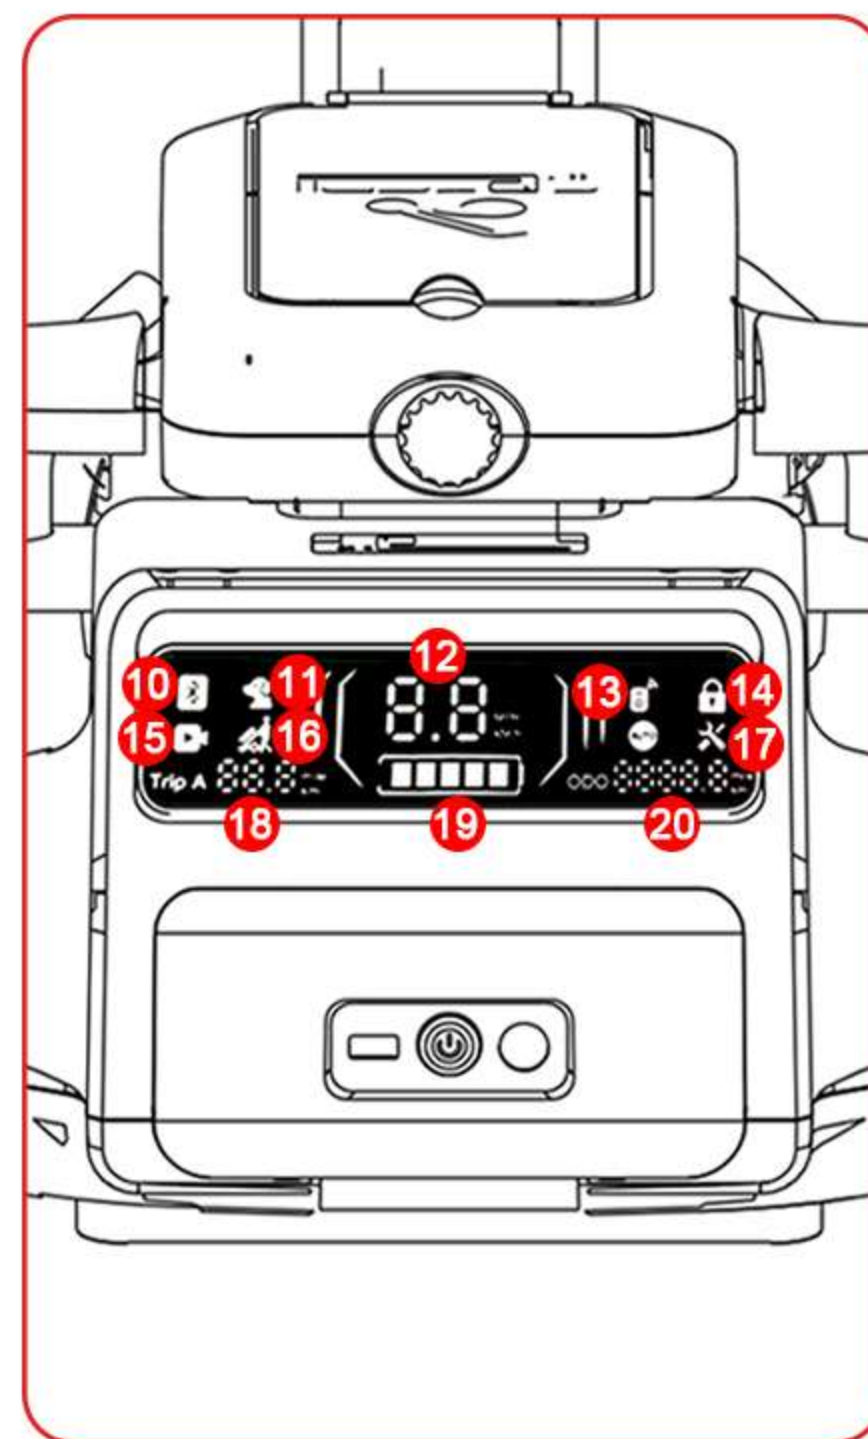

10. Bluetooth

11. Follow Mode

12. Speed Display

13. Remote Control Mode/Cruise Control

14. Lock Status

15. Recording

16. Boost Mode



17. Malfunction

18. Trip Distance

19. Battery Level

20. Total Distance

5. PRODUCT USAGE

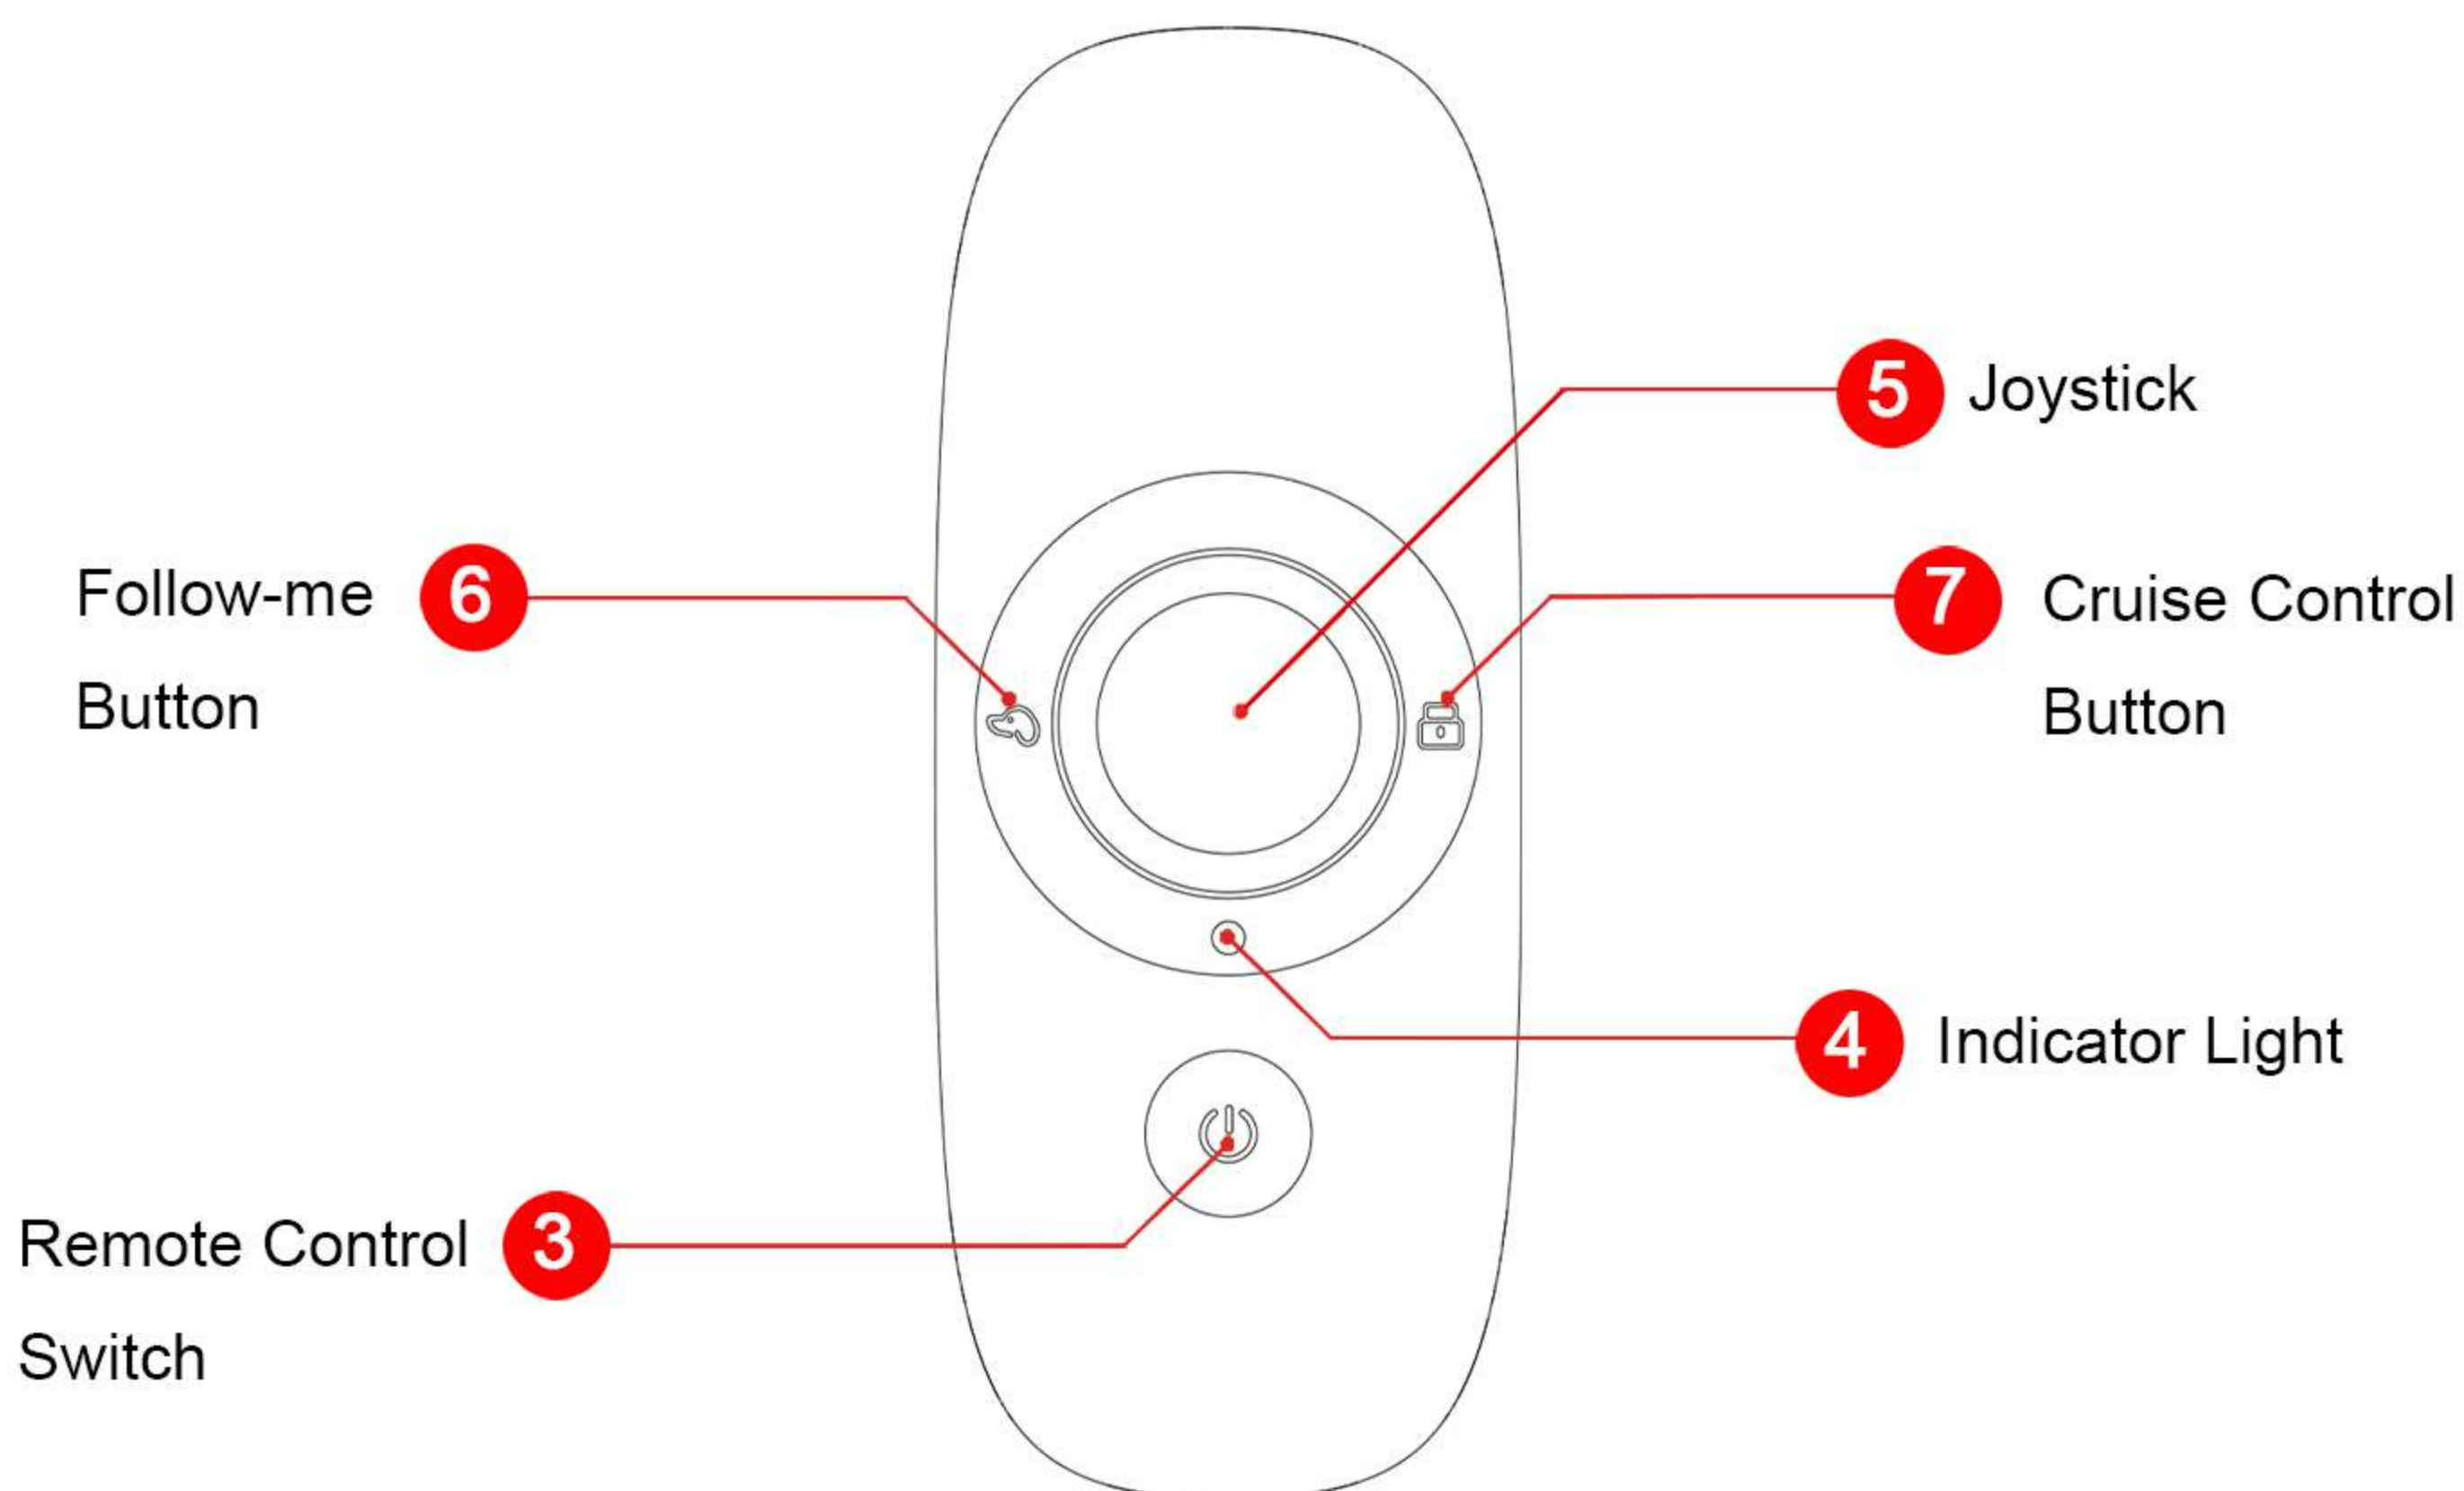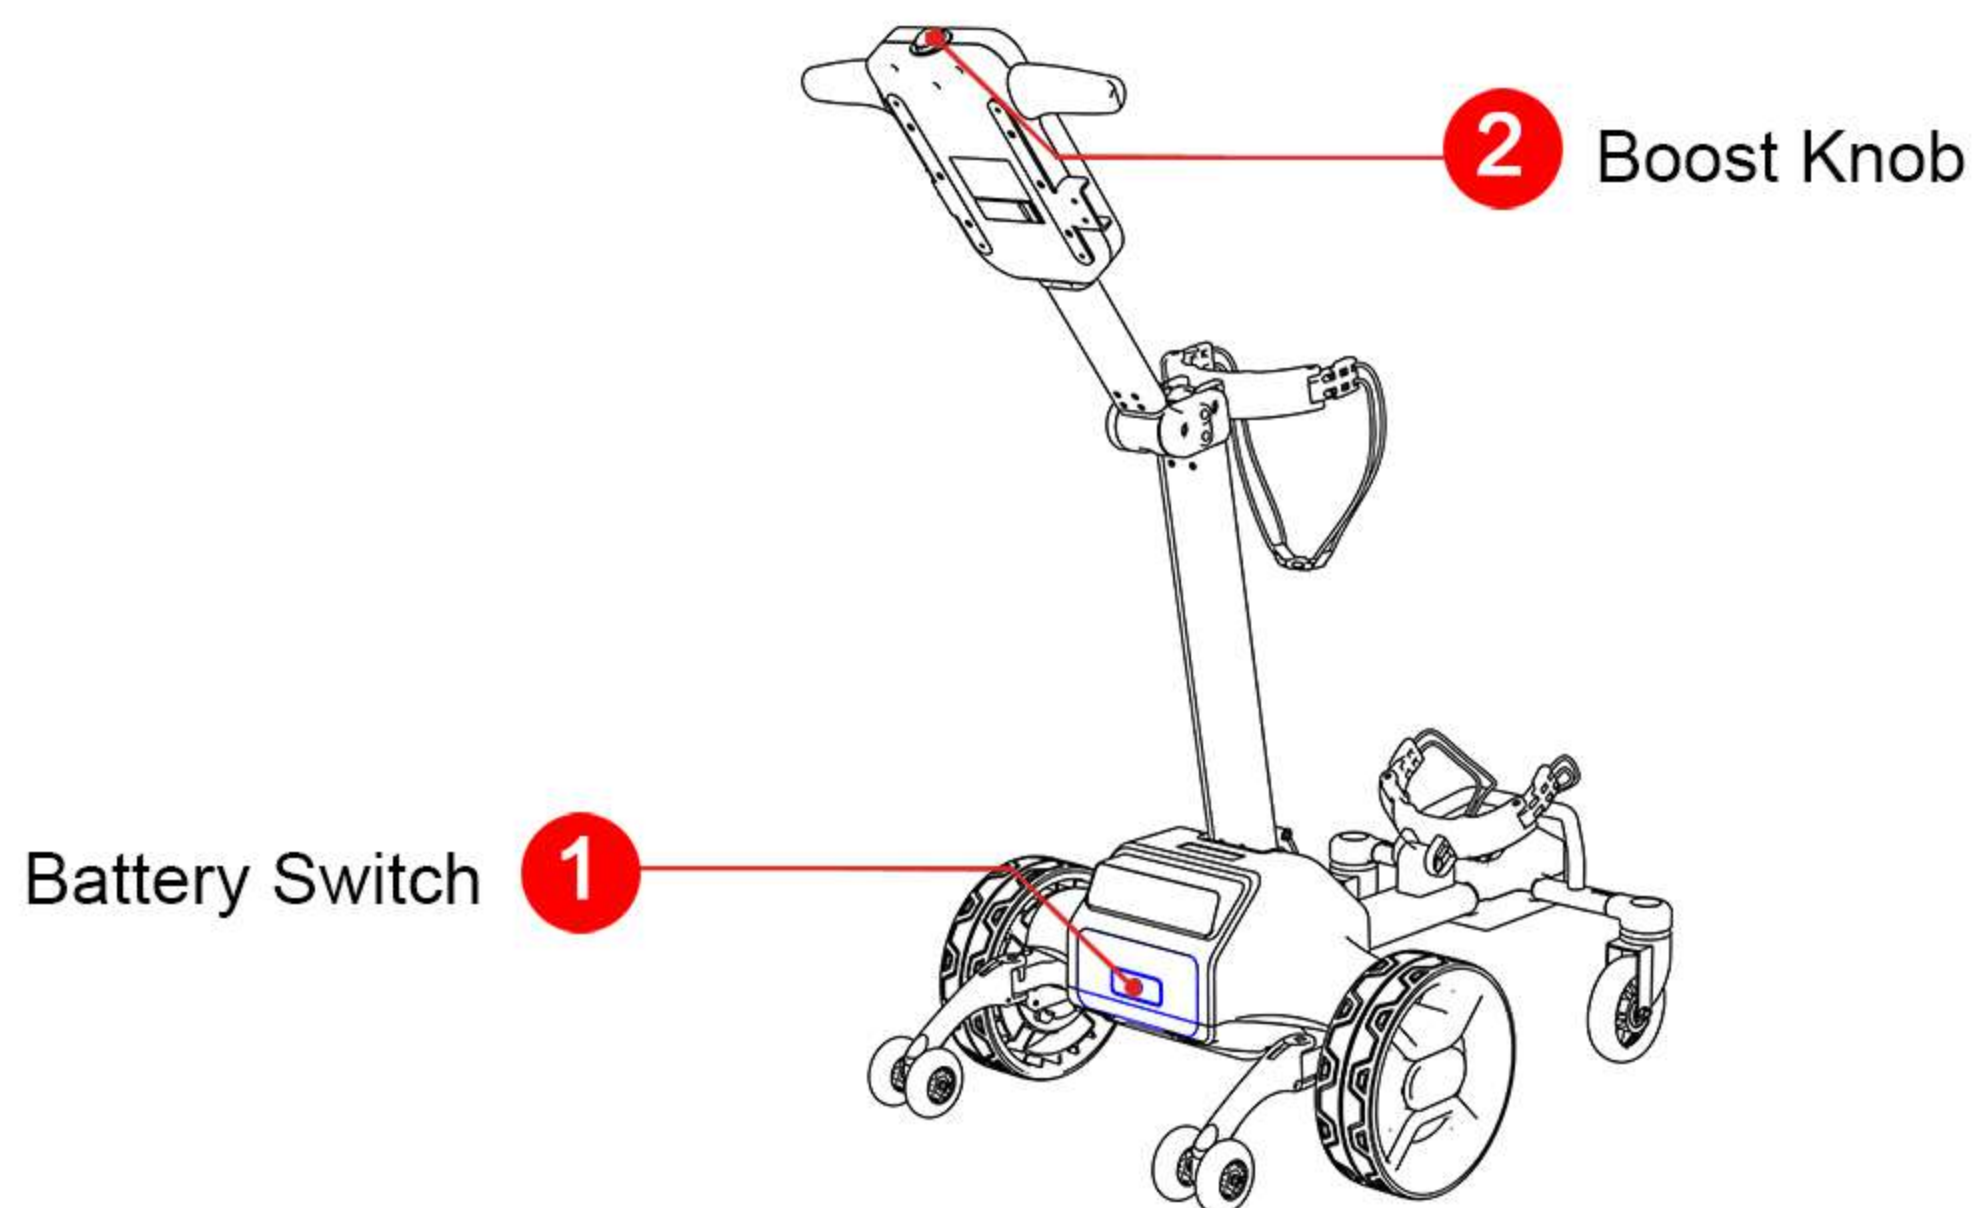

Power on the Cart:

1. While pressing **the battery switch^①** for 1 second to start G5, press **the remote control switch^③** for 0.5 seconds to start the remote control. **The indicator light^④** turns blue, indicating that G5 is in standby mode and can be pushed manually.
2. Long-press the remote control switch to turn off the remote control; short-press the battery switch to turn off G5.

Remote Control Mode:

Push **the joystick^⑤**, and **the indicator light^④** turns yellow—G5 enters remote control mode. In this mode, control G5's movement and rotation (360°) by pushing the joystick. Note: G5 is locked in remote control mode and can only be operated via the remote control.

Boost Mode:

In standby mode, press **the boost knob^②** on the top once. The display screen will light up the " " icon. At this time, rotate the knob clockwise to activate boost mode. Clockwise rotation increases speed, and counterclockwise rotation decreases speed. In boost mode, G5 moves forward at a speed between 1km/h and 7km/h, and human assistance is required for steering during the use of the cart. Press the knob again or short-press the remote control switch to exit boost mode.

Follow-me Mode:

Press **the follow-me button^⑥** in standby mode. If the distance between G5 and the remote control is within 1.8 meters (default 1.8 meters), **the indicator light^④** turns green, and G5 enters follow-me mode. In this mode, G5 will automatically follow and maintain the set distance. When the user stops or the distance between the user and G5 is less than 1.8 meters, G5 will stop moving. Push the joystick to exit follow-me mode and switch to remote control mode.

Recall Mode:

When **the follow-me button^⑥** is pressed and the distance between G5 and the remote control exceeds 1.8 meters, **the indicator light^④** remains blue and G5 enters recall mode. It will automatically track the remote control until it returns within the set distance, and re-enters follow-me mode.

Cruise Control Mode:


Press **the cruise control button^⑦** in standby mode, and **the indicator light^④** turns yellow—G5 enters cruise control mode. In this mode, G5 moves at a fixed gear speed (adjustable), initially at gear 1. There are three gears (defaults: 3km/h, 5km/h, 7km/h). Push the joystick forward again to gradually accelerate to the maximum gear 3. During movement, left and right steering can be performed via the joystick. Pull the joystick backward to exit cruise control mode and enter remote control mode.

Note: Short-pressing **the remote control switch^③** in any mode will enter standby mode. Do not short-press the switch when you need to lock the cart.

Double-click the boost knob to lock the cart; double-click again to unlock.

6. CHARGING INSTRUCTIONS

Battery

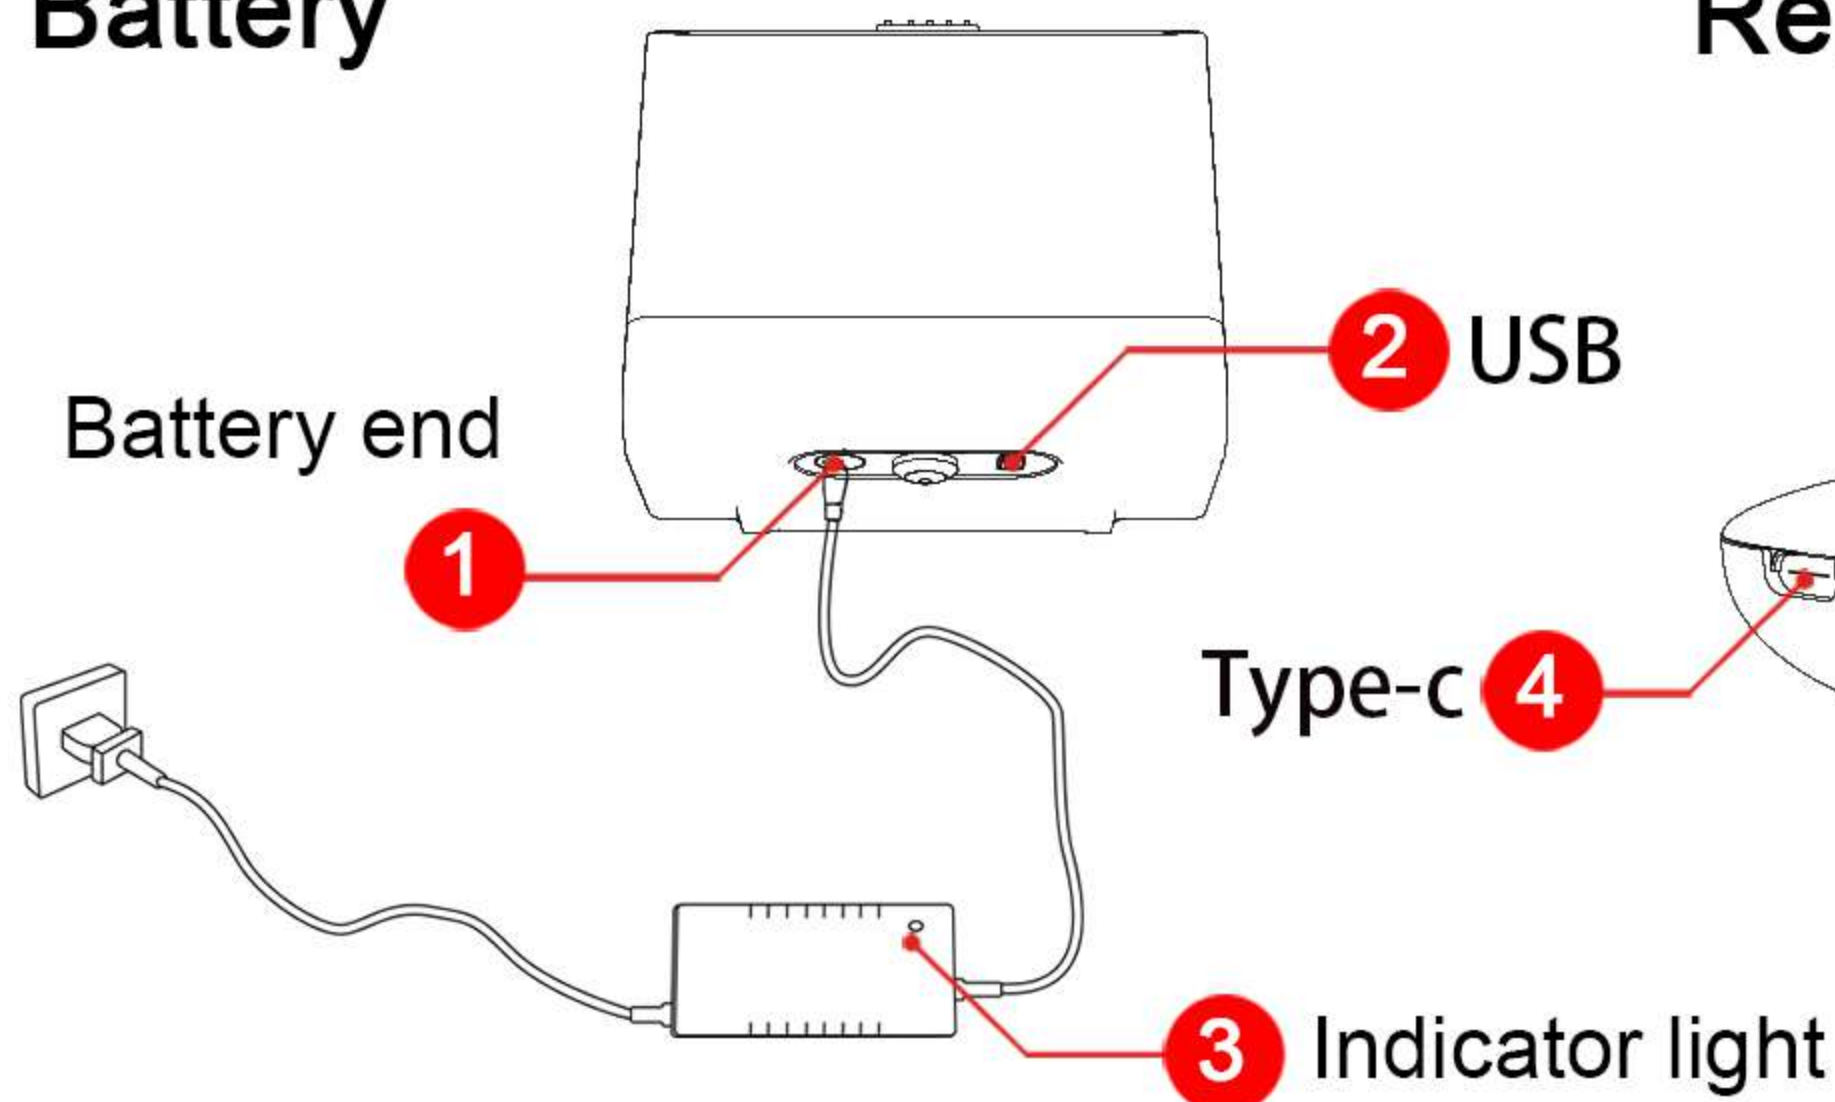

Remote Control

Battery Charging:

Use the original charger. Before charging, first detach the battery out of the cart. Connect **the battery end^①** first, then turn on the power. After power is connected, the charger **indicator light^③** turns red when charging is in progress, and green when fully charged.

Remote Control Charging:

Use the original charging cable to connect to the battery's **USB port^②** for charging. After connection, the remote control switch will display a breathing red light, indicating that charging is in progress. The red light will turn off when fully charged.

Note: Do not charge the battery and the remote control simultaneously when using the USB port to charge the remote control. If using other devices to charge the remote control, ensure the device supports 5V output.

Parameters Category	Battery	Remote Control
Charging Voltage	29.4V	5V
Charging Current	2A (China/US standard 2.5A)	0.3A
Charging Time	about 5H (China/US standard approx. 4.5H)	about 2.5H
Warning	The above data is for the original charger. Do not use other devices for charging.	The above data is for the battery's USB port. Do not use high-power fast chargers for charging.

7. PRECAUTIONS FOR USE

1. G5 does not have an automatic obstacle avoidance function. Please promptly control the cart and avoid obstacles when encountering some.
2. When using follow-me mode, ensure the surrounding environment is spacious. If the area is cluttered with obstacles, it is recommended to use remote control mode for precise operation.
3. The human body will greatly affect the remote control signal. When using follow-me mode, it is recommended to hang the remote control on the side or back of the body. (Use the clip of the remote control)
4. The remote control and G5 are connected via real-time signal tracking. Therefore, G5 will not follow the human movement trajectory but only follow the real-time direction. Pay attention to whether G5 collides with obstacles at corners when turning.
5. Strictly follow the charging instructions for battery and remote control. Do not use non-original chargers, as this may damage the battery or remote control.
6. Battery life is related to usage habits. Follow-me mode consumes more power, while cruise control mode is more energy-efficient. Users can adjust their preferences according to needs.
7. If the weather is cold or G5 is not used for a long time, detach the battery, fully charge it, and store the battery in an environment above 5°C to extend its service life.
8. Do not hang heavy objects on the armrest.
9. G5 is only splash-proof; do not immerse it in water or expose it to heavy rain. When cleaning G5, use a wiping method to avoid water entering the circuit compartment or battery compartment.
10. Battery life will decrease by around 15% in cold weather.

8. APP Introduction

Download QR Code:



(Android / IOS)

The APP language follows the system language and currently supports only Chinese, English, and Japanese.

Note:

After scanning the QR code, use a browser to open the webpage for APP download and installation. When opening the APP, enable the device's bluetooth and location functions simultaneously to perform the connection operation.



Device List: Click "Search" to display the cart

then click "Connect" to enter the main interface



Current speed data

Battery level percentage



Remote control pairing status and remote control battery level


Video recording

Viewing stored videos

Viewing various data parameters

Data settings menu

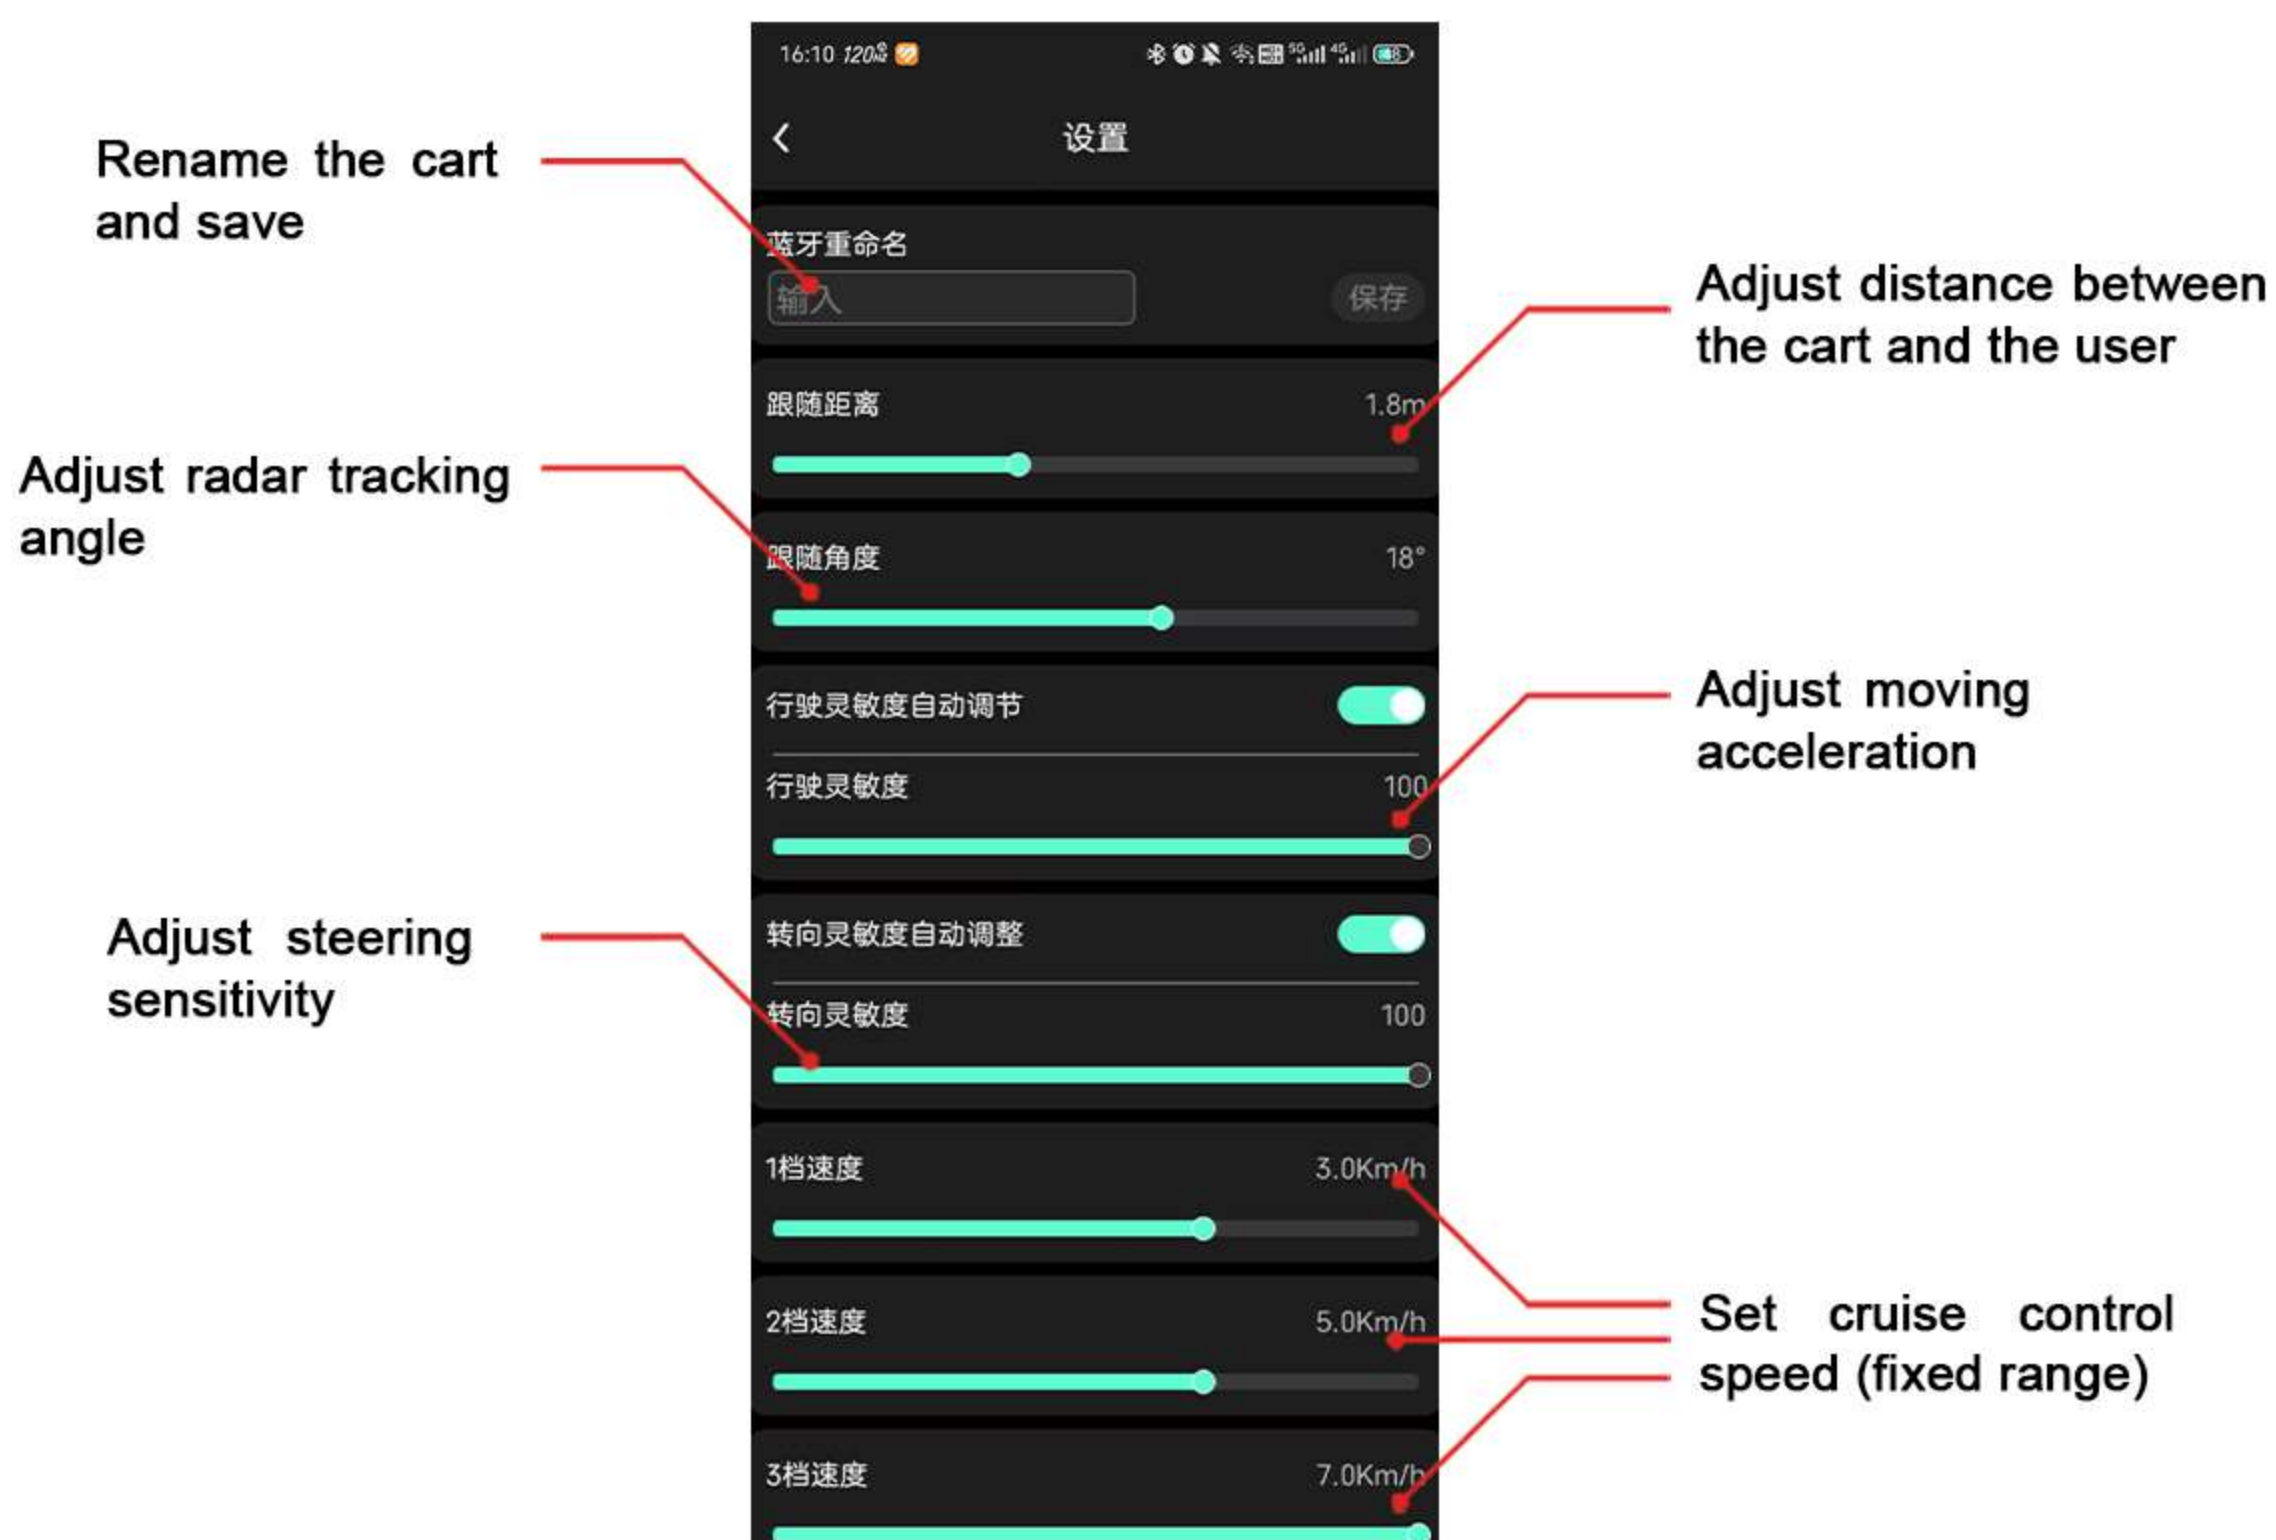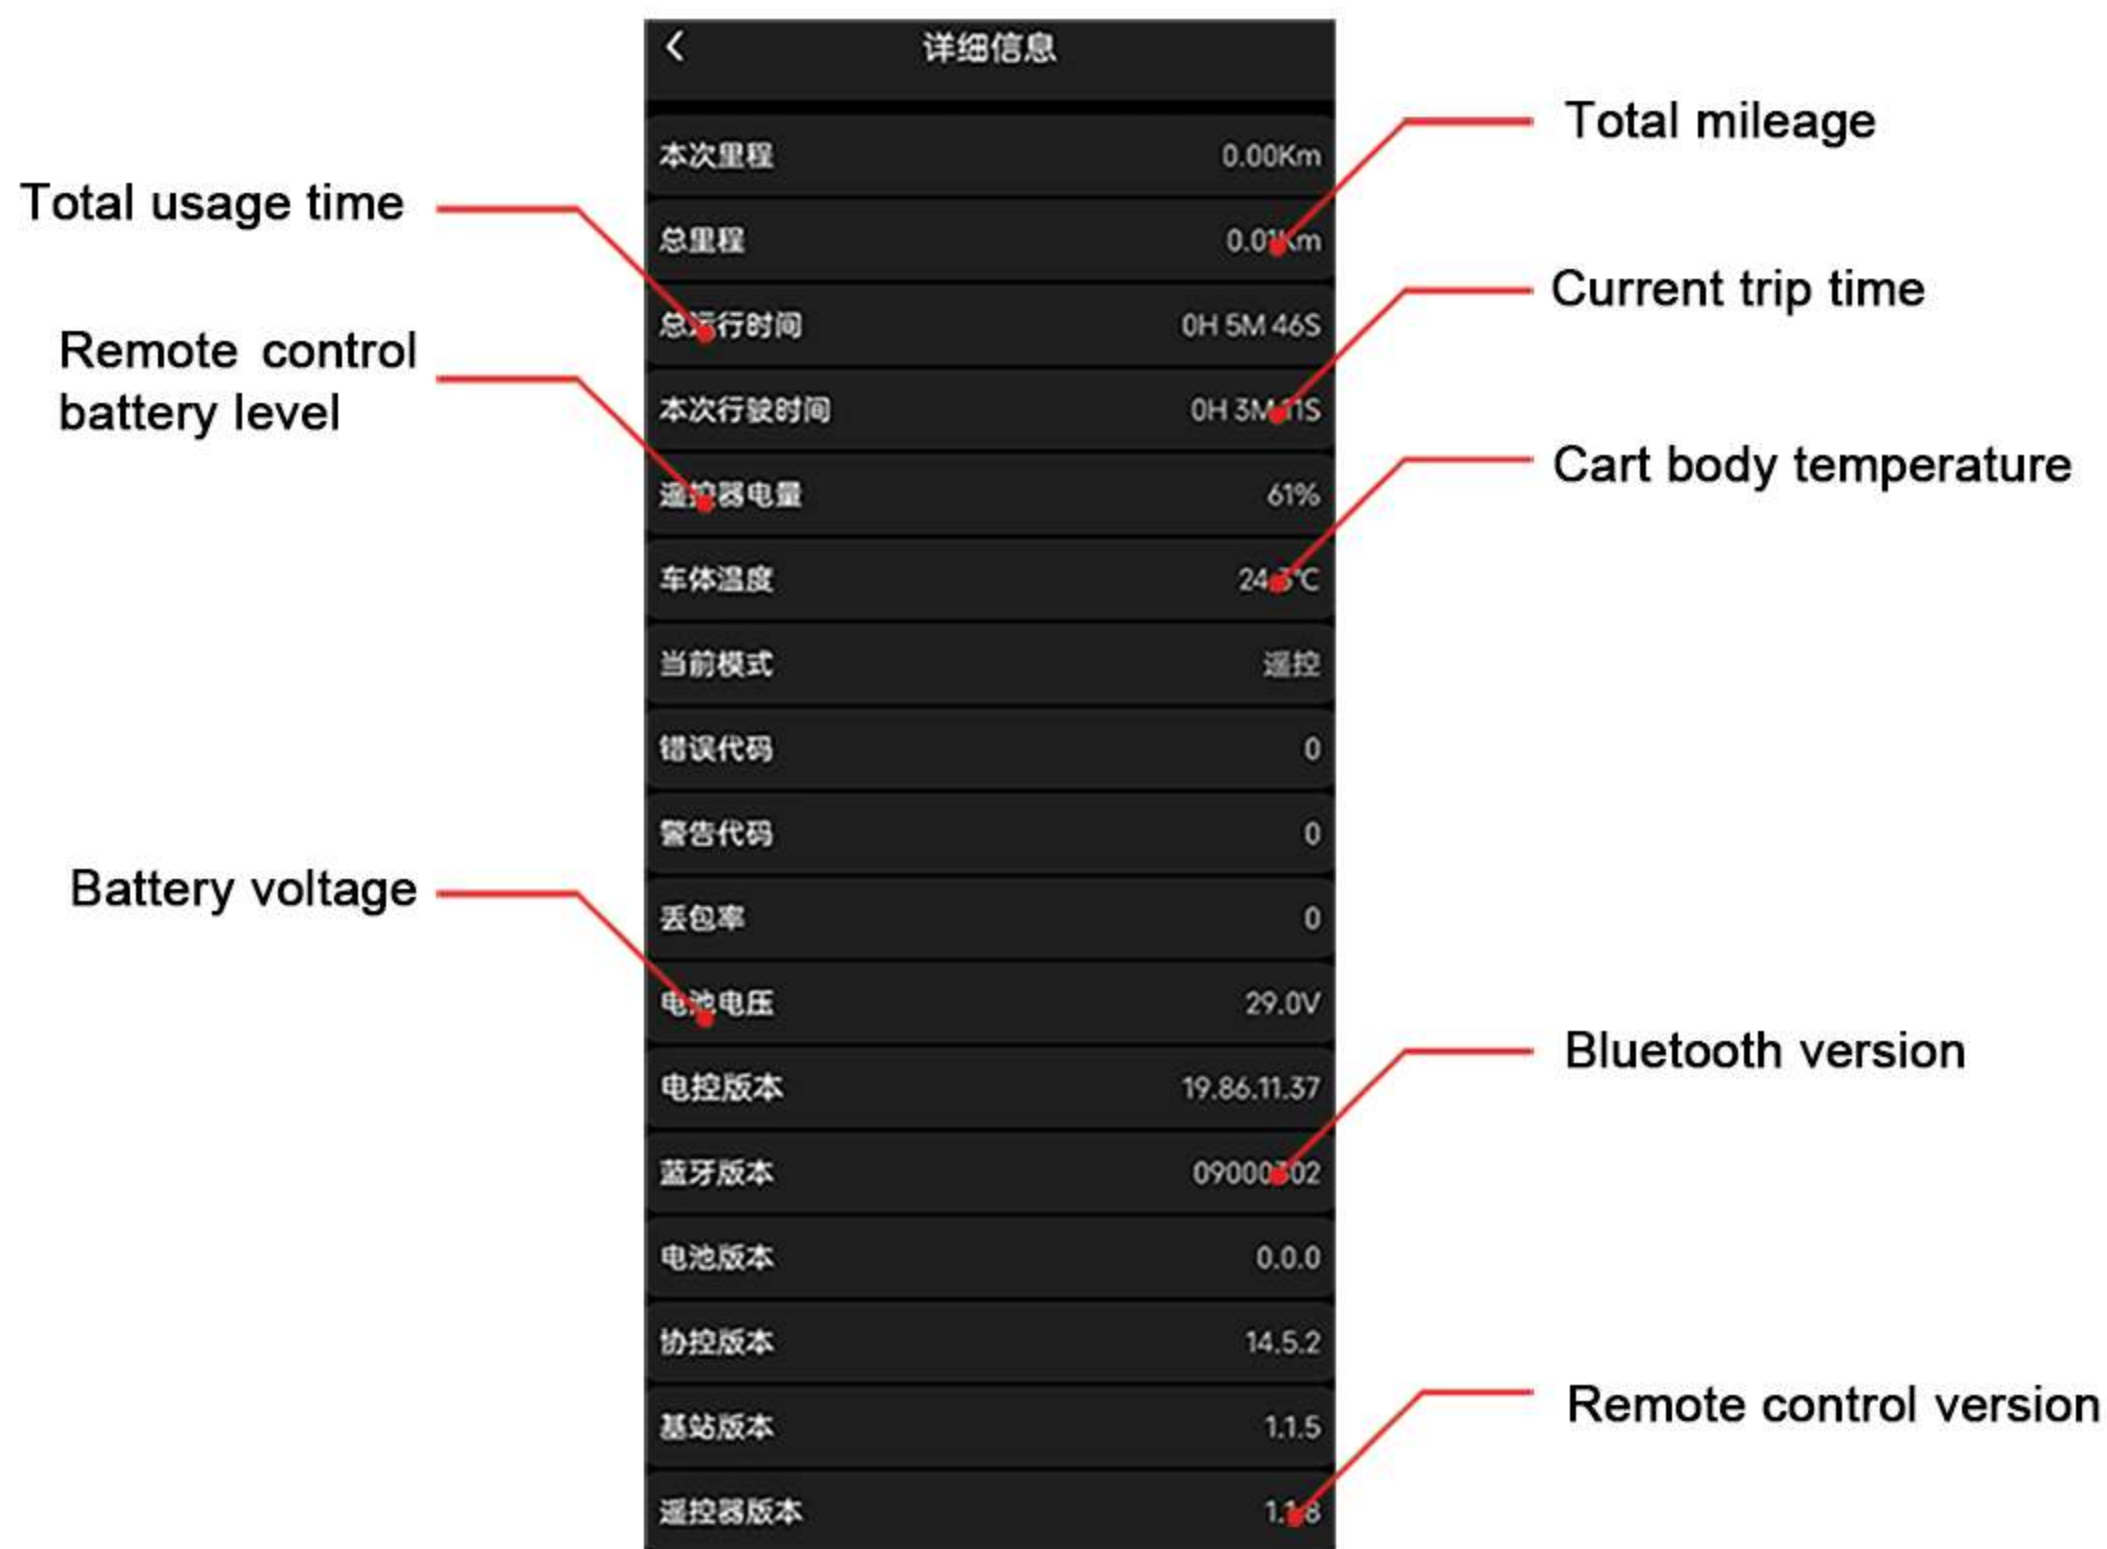

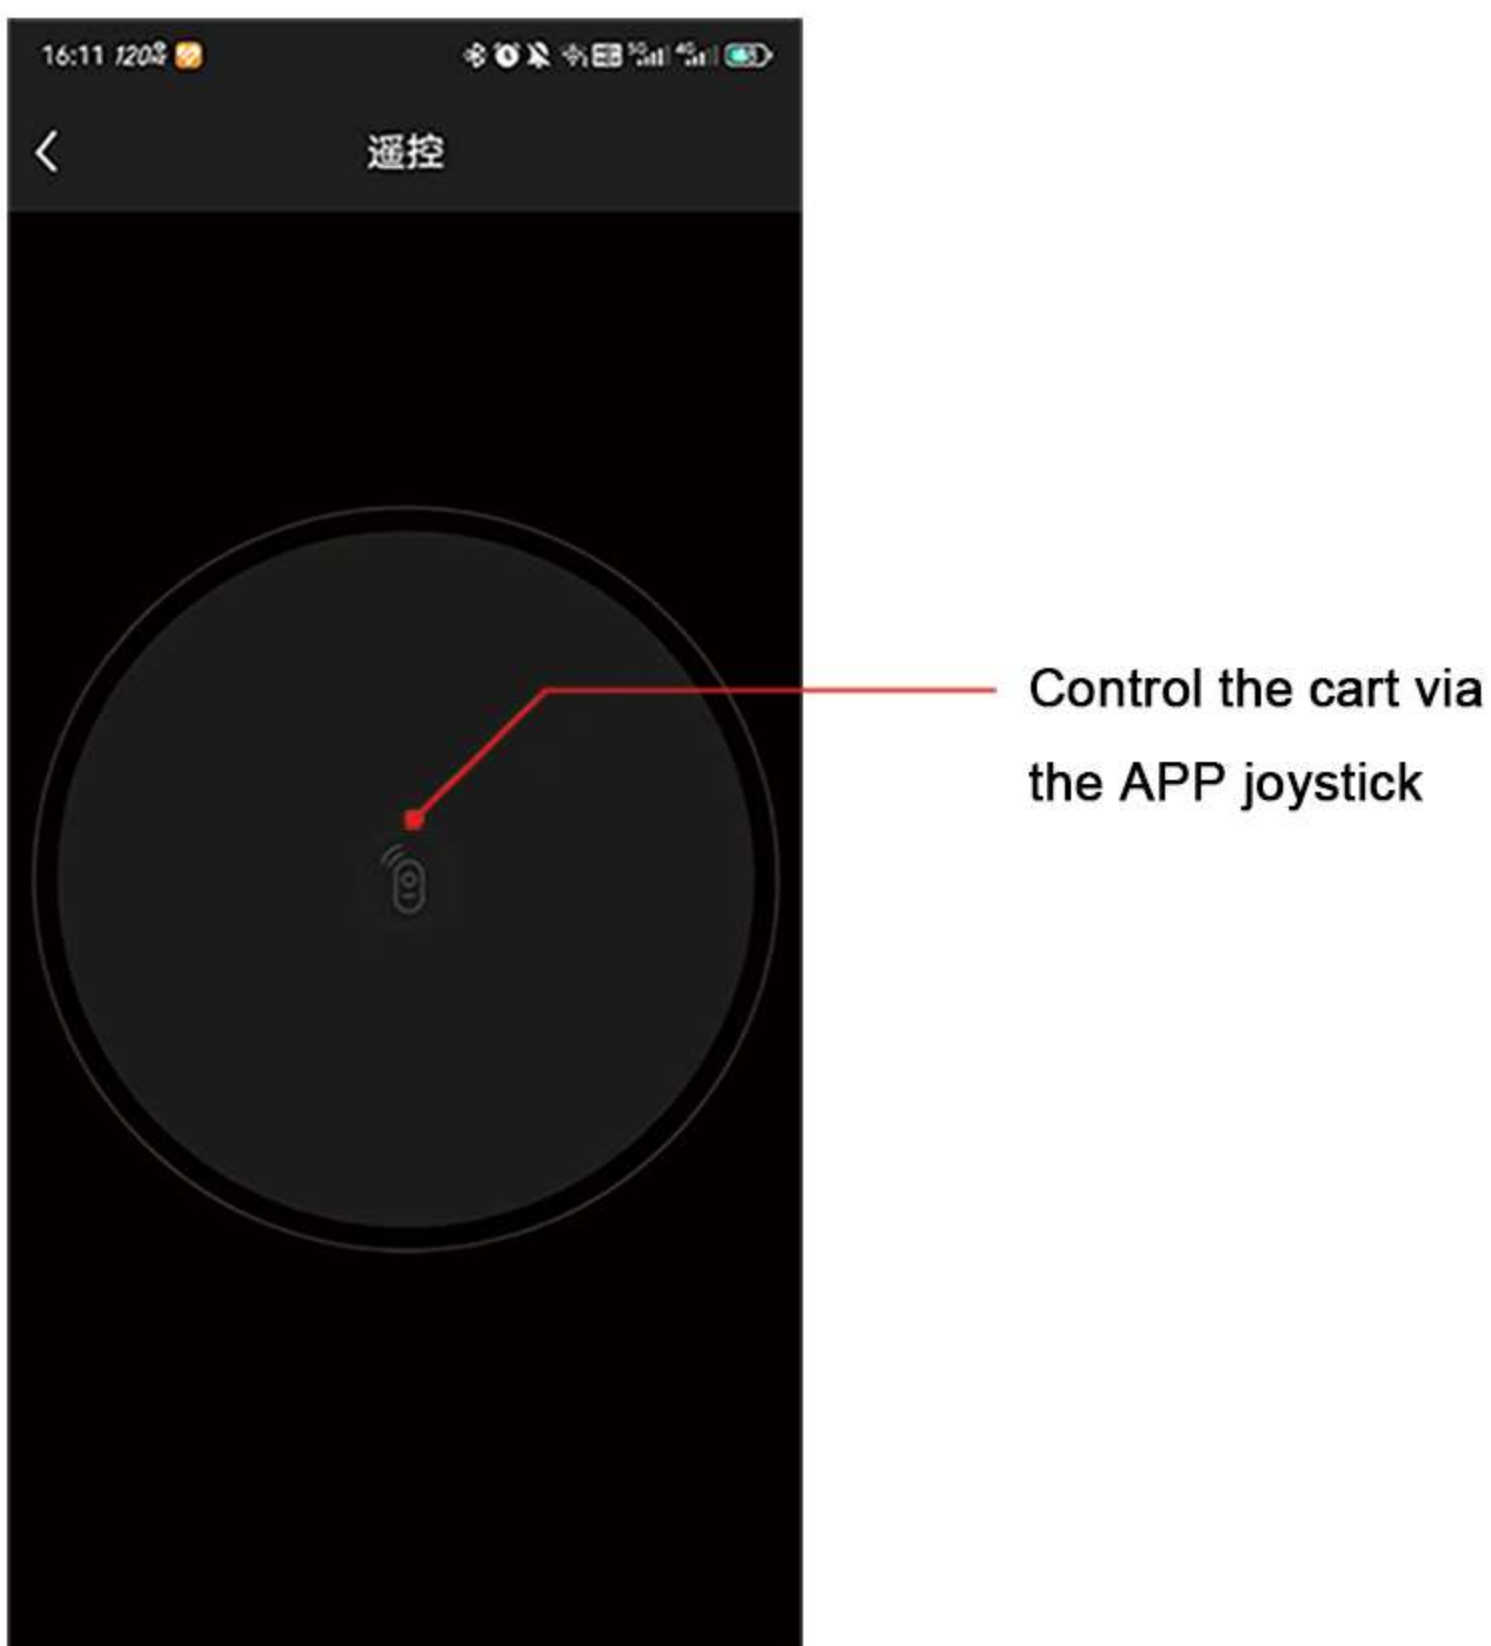


9. REMOTE CONTROL PAIRING

一、Connect to the "icango" APP and click the "Click here to pair" on the homepage




Click here
to pair

二、At this time, the code "6.1" (3.7 for imperial units) will appear on the display screen. Under the "6.1" state, pick up the remote control for pairing: first press and hold the buttons on both sides of the joystick, then press and hold the switch button for 1 second before releasing it. Normally, the remote control will be paired with the cart

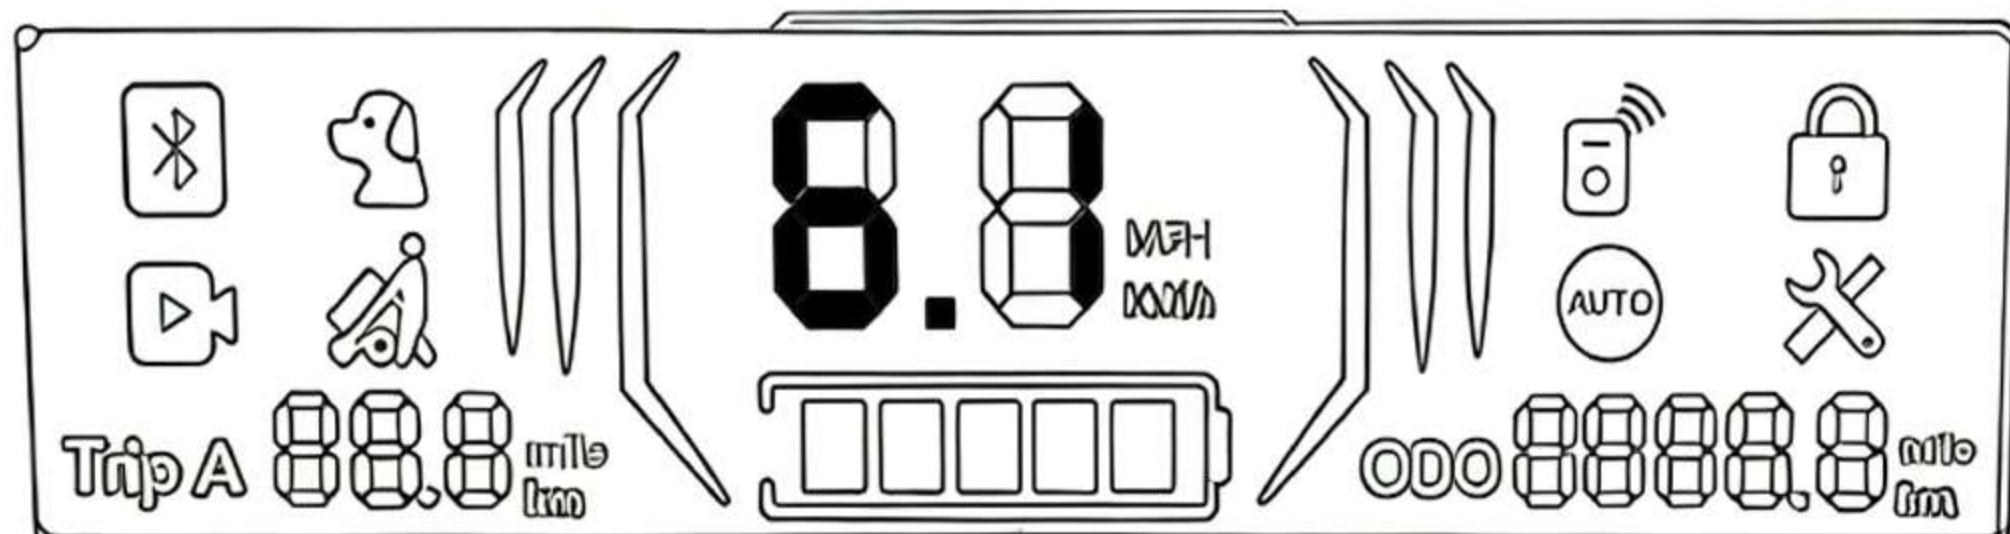

1、 Press the buttons on both sides of the joystick

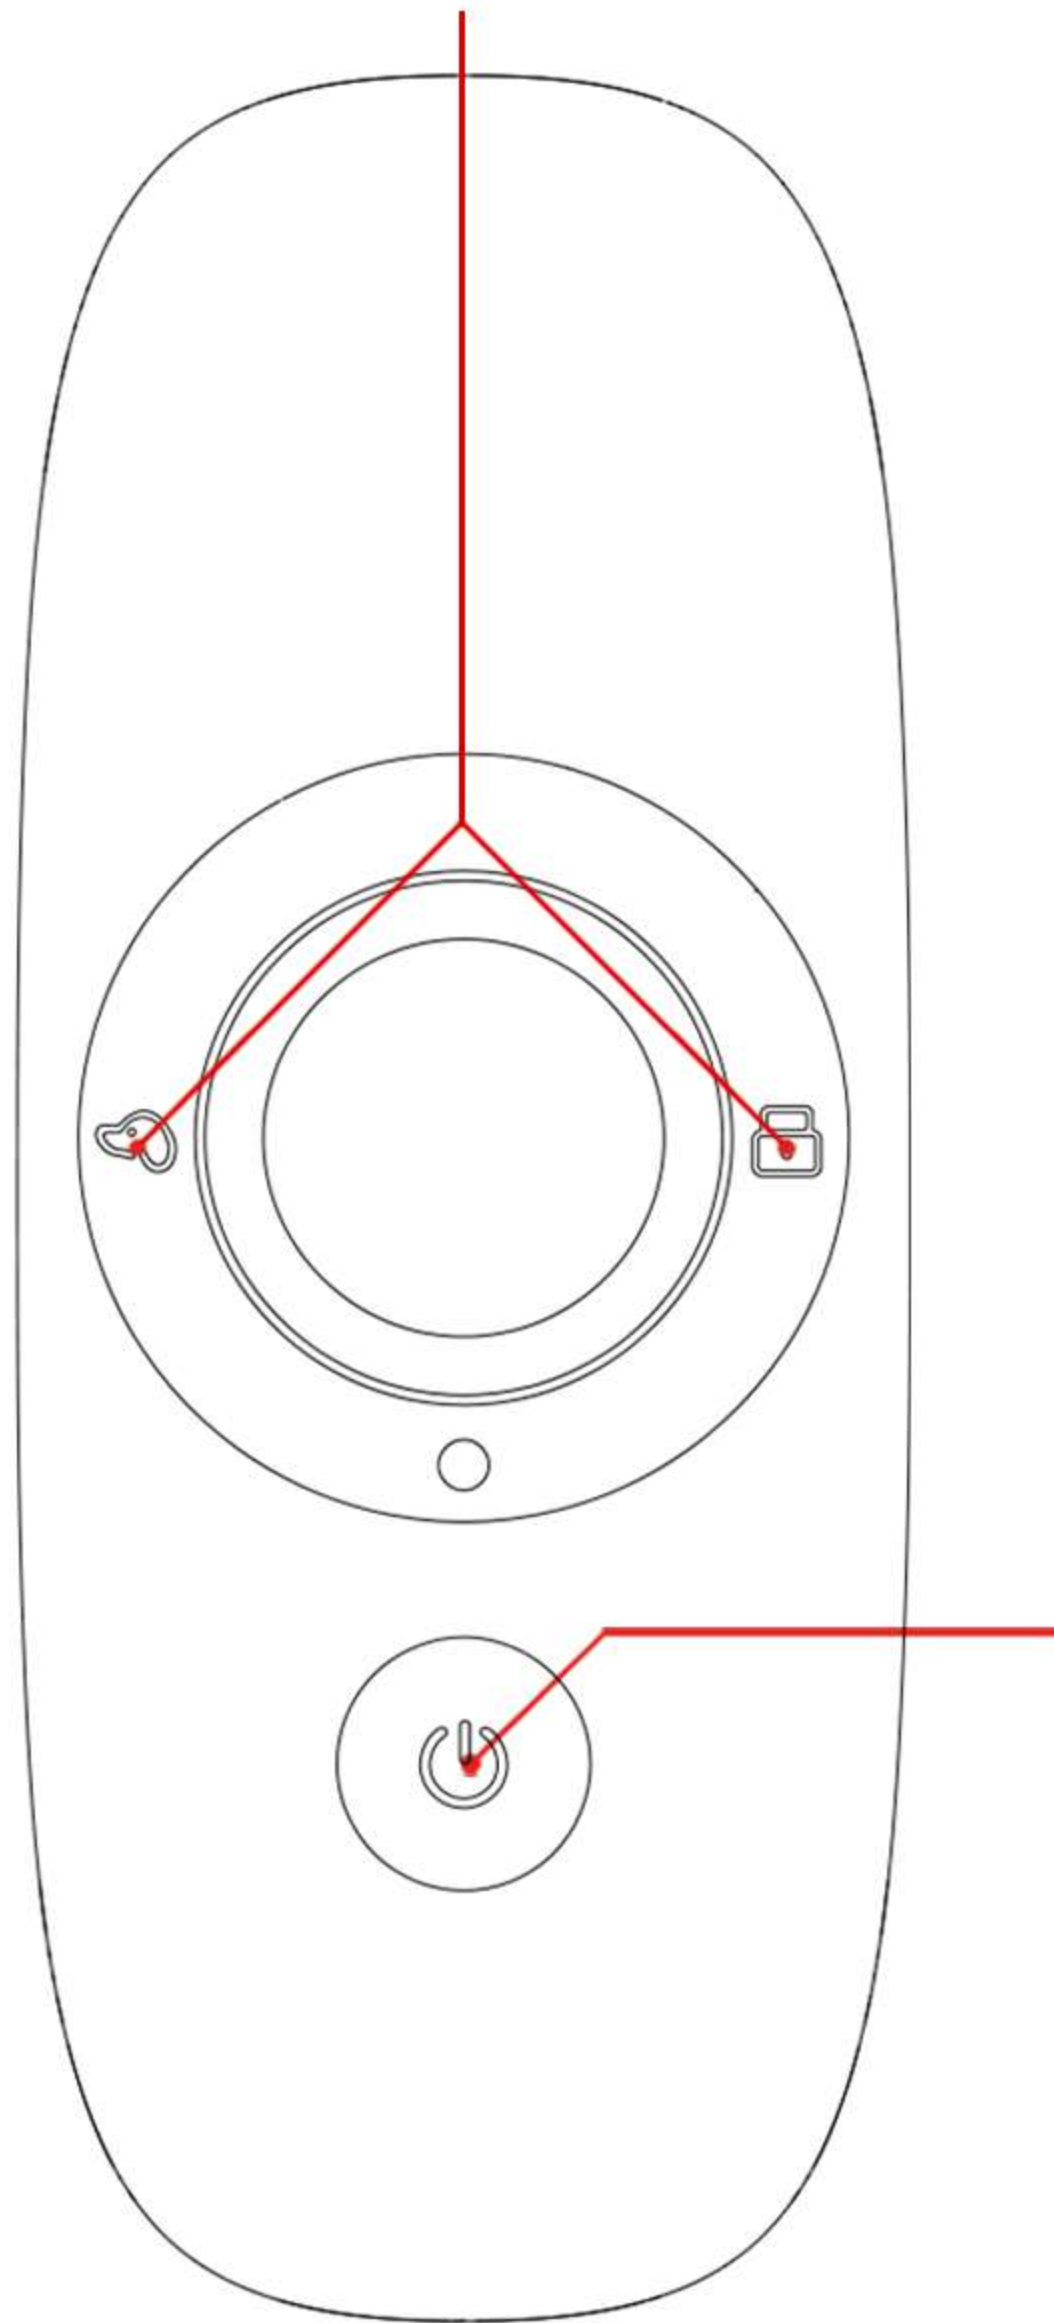

2、 Then press the switch button for 1 second before releasing it

Notes:

Turn off the remote control before pairing

Ensure the display screen shows "6.1"/"3.7" when pressing the remote control buttons. If the code on the display screen disappears, click "Click here to pair" on the APP again.

The three buttons on the remote control are essentially pressed together. Release the switch button after pressing it for 1 second; otherwise, the remote control will turn off directly.

10. PRODUCT SPECIFICATIONS

Product Name	G5 Smart Following Golf Cart
Folded Dimensions	732*630*368MM
Unfolded Dimensions	744*630*1293MM
Package Dimensions	790*615*420MM
Battery Dimensions	175*86.9*143MM
Battery Weight	1.8KG
Net Weight/Gross Weight	18.5KG/ 23KG
Quantity of Wheels	8
Rotatable Front Wheels	Yes
Storage Method	Foldable, Detachable Battery
Cruise Control Speed	1KM/H-7KM/H
Motor Power	Brushless Motor 80W*2
Battery Specification	25.2V,10.4Ah
Battery Life	45 Holes
Charging Time	Battery: About 5H(China/US standard approx. 4.5H), Remote Control: About 2.5H
Remote Control Distance	50M(Open area)
Climbing Capacity	20
Remote Control Speed	2-7KM/H(Adjustable)
Following Technology	UWB Ultra-Wideband System
Material	ABS+PC, Aluminum Alloy
Drive Mode	Rear-Wheel Drive
Control Modes	Follow-me, Boost, Cruise Control, Remote Control
Following Distance	0.5-4M(Default:1.8M)
APP	Android / iOS
Rear Wheel Material	PU + Nylon

11. WARRANTY

The G5 cart and charger are covered by a 12-month warranty from the date of purchase. The warranty covers manufacturing defects that occur during normal use and applies only to new G5. Any damage caused by accidents, abuse, or misuse is not covered by the warranty. The warranty is non-transferable. Unless stated by us, second-hand carts are not covered by the warranty.

The battery is covered by a 12-month warranty. If the battery malfunctions within the first 12 months, it will be replaced free of charge. All accessories are covered by a 12-month warranty from the date of purchase.

If you require service under warranty, please contact us. Please retain your proforma invoice or packing list as proof of purchase. The after-sales department will diagnose the issue and send replacement parts to the customer. Any parts replaced free of charge during the warranty period do not come with a new warranty. If the customer is unable to replace the parts themselves, please retain all original packaging materials to return the cart for repair. All carts must be returned in the original packaging. If spare parts are required and the parts are not covered by the warranty, the customer shall bear all associated costs.

Warning:

Ensure the rear auxiliary wheels are unfolded when the cart is in motion, and retract the auxiliary wheels when storing or lifting it. G5 is splash-proof and can be safely used in light rain. However, the cart is not waterproof. If it falls into dangerous areas such as ponds or lakes, the battery and circuit board will be damaged, which is not covered by the warranty.